

DSL Applications



Applications & Gateways

Copyright Notice

Document 5095. Copyright © 2002-present Aprisma Management Technologies, Inc. All rights reserved worldwide. Use, duplication, or disclosure by the United States government is subject to the restrictions set forth in DFARS 252.227-7013(c)(1)(ii) and FAR 52.227-19.

Liability Disclaimer

Aprisma Management Technologies, Inc. ("Aprisma") reserves the right to make changes in specifications and other information contained in this document without prior notice. In all cases, the reader should contact Aprisma to inquire if any changes have been made.

The hardware, firmware, or software described in this manual is subject to change without notice.

IN NO EVENT SHALL APRISMA, ITS EMPLOYEES, OFFICERS, DIRECTORS, AGENTS, OR AFFILIATES BE LIABLE FOR ANY INCIDENTAL, INDIRECT, SPECIAL, OR CONSEQUENTIAL DAMAGES WHATSOEVER (INCLUDING BUT NOT LIMITED TO LOST PROFITS) ARISING OUT OF OR RELATED TO THIS MANUAL OR THE INFORMATION CONTAINED IN IT, EVEN IF APRISMA HAS BEEN ADVISED OF, HAS KNOWN, OR SHOULD HAVE KNOWN, THE POSSIBILITY OF SUCH DAMAGES.

Trademark, Service Mark, and Logo Information

SPECTRUM, **IMT**, and the **SPECTRUM IMT/VNM** logo are registered trademarks of Aprisma Management Technologies, Inc., or its affiliates.

APRISMA, **APRISMA MANAGEMENT TECHNOLOGIES**, the **APRISMA MANAGEMENT TECHNOLOGIES** logo, **MANAGE WHAT MATTERS**, **DCM**, **VNM**, **SpectroGRAPH**, **SpectroSERVER**, **Inductive Modeling Technology**, **Device Communications Manager**, **SPECTRUM Security Manager**, and **Virtual Network Machine** are unregistered trademarks of Aprisma Management Technologies, Inc., or its affiliates. For a complete list of Aprisma trademarks, service marks, and trade names, go to <http://www.aprisma.com/manuals/trademark-list.htm>.

All referenced trademarks, service marks, and trade names identified in this document, whether registered or unregistered, are the intellectual property of their respective owners. No rights are granted by Aprisma Management Technologies, Inc., to use such marks, whether by implication, estoppel, or otherwise. If you have comments or concerns

about trademark or copyright references, please send an e-mail to spectrum-docs@aprisma.com; we will do our best to help.

Restricted Rights Notice

(Applicable to licenses to the United States government only.)

This software and/or user documentation is/are provided with RESTRICTED AND LIMITED RIGHTS. Use, duplication, or disclosure by the government is subject to restrictions as set forth in FAR 52.227-14 (June 1987) Alternate III (g)(3) (June 1987), FAR 52.227-19 (June 1987), or DFARS 52.227-7013 (c)(1)(ii) (June 1988), and/or in similar or successor clauses in the FAR or DFARS, or in the DOD or NASA FAR Supplement, as applicable. Contractor/manufacturer is Aprisma Management Technologies, Inc. In the event the government seeks to obtain the software pursuant to standard commercial practice, this software agreement, instead of the noted regulatory clauses, shall control the terms of the government's license.

Virus Disclaimer

Aprisma makes no representations or warranties to the effect that the licensed software is virus-free.

Aprisma has tested its software with current virus-checking technologies. However, because no anti-virus system is 100 percent effective, we strongly recommend that you write-protect the licensed software and verify (with an anti-virus system in which you have confidence) that the licensed software, prior to installation, is virus-free.

Contact Information

Aprisma Management Technologies, Inc.

273 Corporate Drive

Portsmouth, NH 03801

Phone: 603.334.2100

U.S. toll-free: 877.468.1448

Web site: <http://www.aprisma.com>

Contents

Purpose and Scope	4
Other Applications Documents	4
Summary of This Document	5
Line Table	6
ATUC Physical Table View	7
ATUC Performance Table View	7
ATUC Channel Performance Table View.....	8
ATUR Physical Table View	9
ATUR Performance Table View	9
ATUR Channel Performance Table View.....	10
Configuration View	10

Introduction

This section summarizes the contents of this document, which is one of a set of documents describing SPECTRUM applications. This section also provides references to the other applications documents.

This section covers the following topics:

- [Purpose and Scope](#)
- [Other Applications Documents](#)
- [Summary of This Document](#) (Page 5)

Purpose and Scope

This document defines the fields displayed in the views associated with a category of SPECTRUM applications called Digital Subscriber Line (DSL) applications, which at the present time includes the ADSL Line Application. The views and fields described in this document are accessed from the Icon Subviews menu of the application models displayed in the Main Applications view.

Other Applications Documents

[Table 1](#) lists the documents that cover the other categories of SPECTRUM applications. In addition to the documents listed in the table, the document **MIBs and the Applications View** provides an introduction to the Application view and defines MIB functions in network management. All of these documents (and others) are available on the Aprisma Web site at:

www.aprisma.com/manuals

Table 1: Other Applications Documents

Document Title	Typical Applications
Transmission Applications	Ethernet, Token Ring, FDDI
Technology Applications	APPN, ATM, DHCP
Bridging Applications	Spanning Tree, PPP Bridging
MIB-II Applications	SNMP, ICMP, TCP
Routing Applications	OSPF, VRRP, BGP4

Summary of This Document

The rest of this document describes the following application:

- [ADSL Line Application \(ADSLLineApp\)](#) (Page 6)

ADSL Line Application (ADSLLineApp)

This section describes the ADSL Line Application.

The following views are available for this application:

- [Line Table](#) (Page 6)
- [ATUC Physical Table View](#) (Page 7)
- [ATUC Performance Table View](#) (Page 7)
- [ATUC Channel Performance Table View](#) (Page 8)
- [ATUR Physical Table View](#) (Page 9)
- [ATUR Performance Table View](#) (Page 9)
- [ATUR Channel Performance Table View](#) (Page 10)
- [Configuration View](#) (Page 10)

Line Table

Access: From the **Icon Subviews** menu for the *ADSLLineApp* icon, select **Line Table**.

This table includes common attributes describing both ends of the line. It is required for all ADSL physical interfaces. ADSL physical interfaces are those entries where Type is equal to `adsl`.

This table provides the following information.

Instance

An entry in ADSL Line Table.

Coding

The ADSL coding type used on this line.

Type

Defines the type of ADSL physical line entity that exists, by defining whether and how the line is channelized. If the line is channelized, the value will be other than `noChannel`. This field defines which channel type(s) are supported. In the case that the line is channelized, the manager can use

the Stack Table to determine the Index for the associated channel(s).

Specific

OID instance in vendor-specific MIB. The Instance will be used to determine shelf/slot/port of the ATUC interface in a DSLAM.

ATUC Physical Table View

Access: From the **Icon Subviews** menu for the *ADSLLineApp* icon, select **ATUC Physical Table**.

This table provides one row for each ATUC. Each row contains the Physical Layer Parameters table for that ATUC. ADSL physical interfaces are those entries where Type is equal to `adsl`.

This view provides the following information.

Instance

An entry in the ATUC Physical Table.

Status

The current state of the ATUC line.

Attainable Rate

The maximum currently attainable data rate by the ATU. This value will be equal or greater than the current line rate.

Serial Number

The vendor specific string that identifies the vendor equipment.

Vendor ID

The vendor ID code is a copy of the binary vendor identification field defined by the PHY[10] and expressed as readable characters.

Version Number

The vendor specific version number sent by this ATU as part of the initialization messages. It is a copy of the binary version number field defined by the PHY[10] and expressed as readable characters.

ATUC Performance Table View

Access: From the **Icon Subviews** menu for the *ADSLLineApp* icon, select **ATUC Performance Table**.

This view provides two tables containing Performance information for total and daily performance statistics. The list below describe the total value, and for daily values simply substitute “in 24 hours” for “since last agent reset”. This table provides one row for each ATUC. ADSL physical interfaces are those entries where Type is equal to `adsl`.

These tables provide the following information.

Instance

An entry in the Performance table.

Errored Seconds

Count of the number of Errored Seconds since agent reset. The errored second parameter is a count of one-second intervals containing one or more crc anomalies, or one or more los or sef defects.

Initializations

Count of the line initialization attempts since agent reset. Includes both successful and failed attempts.

Loss of Frame

Count of the number of Loss of Framing failures since agent reset.

Loss of Link

Count of the number of Loss of Link failures since agent reset.

Loss of Signal

Count of the number of Loss of Signal failures since agent reset.

Loss of Power

Count of the number of Loss of Power failures since agent reset.

ATUC Channel Performance Table View

Access: From the **Icon Subviews** menu for the *ADSLLineApp* icon, select **ATUC Channel Performance Table**.

This view provides two tables containing Performance statistics for daily and total accumulations.

These tables provide the following information.

Instance

An entry in the ATUC Channel Performance table.

Transmitted Blocks

Count of all encoded blocks transmitted on this channel since agent reset.

Received Blocks

Count of all encoded blocks received on this channel since agent reset.

Corrected Blocks

Count of all blocks received with errors that were corrected since agent reset. These blocks are passed on as good data.

Uncorrect Blocks

Count of all blocks received with uncorrectable errors since agent reset.

ATUR Physical Table View

Access: From the **Icon Subviews** menu for the *ADSLLineApp* icon, select **ATUR Physical Table**.

This table provides one row for each ATUR. Each row contains the Physical Layer Parameters table for that ATUR. ADSL physical interfaces are those entries where Type is equal to `ads1`.

This view provides the following information.

Instance

An entry in the ATUR Physical Table.

Status

Indicates current state of the ATUR line.

Attainable Rate

Indicates the maximum currently attainable data rate by the ATU. This value will be equal or greater than the current line rate.

Serial Number

The vendor specific string that identifies the vendor equipment.

Vendor ID

The vendor ID code is a copy of the binary vendor identification field defined by the PHY[10] and expressed as readable characters.

Version Number

The vendor specific version number sent by this ATU as part of the initialization messages. It is a copy of the binary version number field defined by the PHY[10] and expressed as readable characters.

ATUR Performance Table View

Access: From the **Icon Subviews** menu for the *ADSLLineApp* icon, select **ATUR Performance Table**.

This view provides two tables containing Performance information for total and daily performance statistics. This table provides one row for each ATUR. ADSL physical interfaces are those entries where Type is equal to `ads1`.

These tables provide the following information.

Instance

An entry in the Performance table.

Errored Seconds

Count of the number of Errored Seconds since agent reset. The errored second parameter is a count of one-second intervals containing one or more crc anomalies, or one or more los or sef defects.

Loss of Frame

Count of the number of Loss of Framing failures since agent reset.

Loss of Signal

Count of the number of Loss of Signal failures since agent reset.

Loss of Power

Count of the number of Loss of Power failures since agent reset.

ATUR Channel Performance Table View

Access: From the **Icon Subviews** menu for the *ADSLLineApp* icon, select **ATUR Channel Performance Table**.

This view provides two tables containing Performance statistics for daily and total accumulations.

These tables provide the following information.

Instance

This indicates that there is an entry in this table.

Transmitted Blocks

Count of all encoded blocks transmitted on this channel since agent reset.

Received Blocks

Count of all encoded blocks received on this channel since agent reset.

Corrected Blocks

Count of all blocks received with errors that were corrected since agent reset. These blocks are passed on as good data.

Uncorrect Blocks

Count of all blocks received with uncorrectable errors since agent reset.

Configuration View

Access: From the **Icon Subviews** menu for the *ADSLLineApp* icon, select **Configuration View**.

The Configuration view has one field called Alarm On Traps. It has a value of `FALSE` by default. If it is set to `FALSE`, and the device model passes a trap to the application model, the alert handler will only generate an event on the device model. If Alarm On Traps is `TRUE`, the alert handler will generate an event and an alarm on the device model.

Index

A

Attainable Rate [7, 9](#)

B

Block
 Transmitted [10](#)
Blocks
 Corrected [10](#)
 Received [10](#)
 Uncorrect [10](#)

C

Coding [6](#)
Corrected Blocks [8](#)

E

Error Seconds [8](#)

I

Initializations [8](#)

L

Loss
 Frame [8](#)
 Link [8](#)
 Power [8](#)
 Signal [8](#)

R

Received Blocks [8](#)

S

Serial Number [9](#)
Status [9](#)

T

Transmitted Blocks [8](#)

U

Uncorrect Blocks [8](#)

V

Version Number [7, 9](#)