

Dräger Polytron 7000

(approved as type P3U and P3FB)

Transmitter for electrochemical Sensors

Instructions for Use



Contents

For Your Safety	4
Intended Use	5
Design	7
Installing the transmitter	9
Preparing for installation	9
Installing the docking station	10
Electrical connections	11
2-wire connection	11
3-wire connection	15
Connections between several transmitters and a control unit with HART multidrop connections	17
4-wire connection	22
Installing the measuring unit Dräger Polytron 7000	24
Fitting the sensor	25
Installing accessories	26
Daisy chain kit – Cable Entry Kit	26
Remote sensor	27
Duct adapter for remote sensor	28
Dräger Polytron 7000 software dongles	29
Relay module	31
Pump module	33
Start-up	36
Activating info mode	39
Maintenance	41
Maintenance intervals	41
Calibrating the unit	42
Setting up the unit	44
Replacing the sensor	44
Fault – Cause – Remedy	46
Menu functions	48
Menu structure	48
Basic operating procedures	50
Switching to quick-menu mode	50
Switching to menu mode	50
Entering the password	50
Navigation in the menu	51

The menu » Information «	52
Overview	52
Submenu » Instrument «	53
Submenu » Sensor «	54
Submenu » Datalogger «	55
The menu » Calibration «	56
Overview	56
Submenu » Zero calibration «	56
Submenu » Span cal. «	57
Autocalibration	58
The menu » Settings «	60
Overview	60
Submenu » Instrument «	61
Submenu » Communication «	69
Submenu » Sensor «	75
Submenu » Datalogger «	78
Polytron 7000 Operation via LON	81
Polytron 7000 Operation via Foundation Fieldbus	81
Polytron 7000 Operation via PROFIBUS PA	82
Technical Data	86
Relay module	89
Pump module	90
Order List	91
Sensors	92
Accessories	93
Calibration accessories	93
ATEX approval	94
Metrological certificate of approval	104
Section 5 of the Suitability Test Report	104
Overview of the adjustment ranges	105
Information on DrägerSensor O ₂ (6809720)	106
Information on DrägerSensor O ₂ -LS (6809630)	107
IECEX approval	109
UL approval	114
CSA - Approval	121
Declaration of Conformity	126
Index	129
Drilling templates	135
Dräger docking station	135
Remote sensor	137
Duct adapter	137

For Your Safety

Strictly follow the Instructions for Use

Any use of the apparatus requires full understanding and strict observation of these instructions. The apparatus is only to be used for purposes specified here.

Maintenance

The unit must be inspected and serviced regularly by suitably qualified persons. Repair and general overhaul of the apparatus may only be carried out by trained service personnel. We recommend that a service contract be obtained with DrägerService and that all repairs also be carried out by them. Only authentic Dräger spare parts may be used for maintenance. Observe chapter "Maintenance Intervals".

Use in areas subject to explosion hazards

Equipment and components which are used in explosion-hazard areas and which have been inspected and approved in accordance with international or European explosion-protection regulations may be used only under the specified conditions. The equipment or components may not be modified in any manner. The use of faulty or incomplete parts is forbidden. The appropriate regulations must be observed at all times when carrying out repairs on the equipment or components. If the transmitter has been installed with a suitable safety barrier, its case may be opened or the sensor may be changed while the transmitter is operating.

Caution:

- When the transmitter is installed in Ex areas zone 22 or Class II, Div. 1 & 2, Group E, F, G the opening of the housing (inclusive sensor replacement) must not be done when connected to power (power must be turned off or the area has to be declassified). Explosion hazard!
- If the transmitter is equipped, either when delivered or subsequently, with the relay module and/or the pump module, the complete unit is no longer approved for use in explosion-hazard areas. The use of the Dräger Polytron 7000 equipped with a pump module and/or relay module in explosion-hazard areas is forbidden! Explosion hazard!
- Not suitable for use in oxygen-enriched atmospheres, i.e. oxygen content exceeds 21 vol. %. Explosion hazard!

Attention:

The mass flow controller of the pump must be switched on during safety-relevant measurements!

Attention:

When used in transmitters with pump module, the O₂ LS sensor (68 09 630) must always be installed at vibration-free locations. If used in this combination, vibrations may cause the measured value to deviate outside of the permissible range.

Accessories

Use only accessories shown in the Ordering List.

Liability for proper function or damage

The liability for the proper function of the apparatus is irrevocably transferred to the owner or operator to the extent that the apparatus is serviced or repaired by personnel not employed or authorized by DrägerService or if the apparatus is used in a manner not conforming to its intended use.

Dräger cannot be held responsible for damage caused by non-compliance with the recommendations given above. The warranty and liability provisions of the terms of sale and delivery of Dräger are likewise not modified by the recommendations given above.

Dräger Safety AG & Co. KGaA

Intended Use

Dräger Polytron® 7000 Transmitter for electrochemical sensors

- For stationary, continuous monitoring of gas concentrations in ambient air, with built-in DrägerSensor®.
- Automatic configuration of transmitter to suit the built-in DrägerSensor.
- The measuring range may be selected, but it is dependent on the sensor installed.
- With 4 to 20 mA interface, LON communication, Foundation Fieldbus or PROFIBUS PA.
- For installation alternatively in Ex areas zone 0, 1, 2 or 22 corresponding to device category 1G, 2G, 3G, 3D or Class I, Class II, Div. 1 & 2 hazardous area.
For further details, see the installation notes.

Notes on use in zone 22:

Valid for all Dräger Polytron 7000 versions without pump and/or relay module (see II 3D identification marking on the identification tag) and the accessories Duct Adapter for Remote Sensor (Order No. 83 17 150), Remote Sensor (Order No. 83 17 275) and Remote Cable (Order No. 83 17 270, 83 17 998 and 83 17 999).

Identification marking and safety data concerning dust explosion protection:

CE 0158 Ex II 3D, IP6x T65 °C (–40 °C Ta +65 °C)
Maximum supply voltage: 30 V DC

As electrical equipment of the device class and category II 3D according to directive 94/9/EC, the transmitter Dräger Polytron 7000 can be installed and operated without safety barriers in the ATEX Zone 22 (dust), if the following notes concerning safe use are taken into account.

1. The category II 3D is only valid for the accordingly marked Dräger Polytron 7000 transmitter.
2. According to EN 50281-1-2, the transmitter may not be installed in areas which are endangered by conductive, combustible dusts.
3. The Transmitter and the accessories must be enclosed according to IP 6x rating. Especially the locking screw (2 mm Allen screw) of the sensor bayonet ring tight enough to ensure that the bayonet ring is secured against unintended loosening.
4. The Dräger Polytron 7000 transmitter and the accessories have a maximum surface temperature of 65 °C and the IP 6x rating. The transmitter must be installed and maintained according to valid regulations (e.g. in European countries according to EN 50281-1-2).
5. The transmitter and the accessories may only be opened when off-circuit or outside the Ex area. This must always be observed when replacing the sensor!

- Optionally compatible with HART® for connection to a suitable control unit.
- Optionally available with pump module for the continuous supply of the gas/air mixture to be tested to the transmitter.

Caution: No explosion protection. Explosion hazard!

® Polytron is a registered trademark of Dräger.
DrägerSensor is a registered trademark of Dräger.
HART is a registered trademark of HCF, Austin, Texas, USA

If used together with a control unit (e. g. Regard without a safety barrier) or equipped with a relay module:

Caution: No explosion protection. Explosion hazard!

- Warning before any hazardous gas concentrations are reached.
- Automatic implementation of counter measures (for example, connection of an additional ventilation).
- Warning for device errors; display of necessary maintenance work.
- Special calibration mode (blocking of alarm triggering, display of calibration mode, one-man calibration).

Detection of oxygen in accordance with EN 50104

Attention:

If the Dräger Polytron 7000 transmitter is used for the detection of oxygen, at least one alarm relay must be configured as latching.

Measuring function for the explosion protection

BVS 03 ATEX E 406 X

Dräger Polytron 7000 4 to 20 mA with/without display and keypad with/without relay and pump module in connection with DrägerSensor	Measuring range	Testing standard
O ₂ LS (6809630) O ₂ (6809720)	0 to 25 Vol.-% O ₂	EN 50104 (neutralization measurement)

Measurement of oxygen

PFG No. 41300504

Dräger Polytron 7000 4 to 20 mA with/without display and keypad with/without relay and pump module in connection with DrägerSensor	Measuring range	Testing standard
O ₂ LS (6809630) O ₂ (6809720)	0 to 25 Vol.-% O ₂	EN 50104 (oxygen deficiency and excess of oxygen)

Design

The Dräger Polytron 7000 was developed specifically as a modular system which permits the user to select one of many different configurations.

Dräger Polytron 7000 transmitter. with display and keypad and optional for operation with a Palm Pilot 515 and infrared interface or a hand-held HART-compatible operating device or an HART-compatible operating station connected at any point to the 2-wire cable.

This version is suitable for installations where a display of measured value is required on site and where access is easy for the operator.
The transmitter is operated directly via a built-in keypad and display.



00223758_1_1.eps

Dräger Polytron 7000 transmitter. without display and keypad, for operation with a Palm Pilot 515 and infrared interface or a hand-held HART-compatible operating device or an HART-compatible operating station connected at any point to the 2-wire cable.

This version is suitable for installations where access is not easy for the operator or where no display is required.



00223758_1_1.eps

Optional extras:

Pump module

This module draws in the gas to be measured from a remote location and pumps it into the Dräger Polytron 7000 transmitter.

Caution: This option is only possible without explosion protection approval. Explosion hazard!

Relay module

This module permits the local switching of actuators, alarm generators, etc. on the basis of the measured gas concentration.

Caution: This option is only possible without explosion protection approval. Explosion hazard!

Attention:

If the Dräger Polytron 7000 transmitter is used in connection with the relay module for the detection of oxygen in accordance with EN 50104, the transmitter must be equipped with software version 7.8.

Daisy-chain kit

For the connection of several Dräger Polytron 7000 transmitters to one bus line (multidrop installation). This option does not affect the explosion-protection approval of the transmitter.

Duct extension

For mounting the Polytron 7000 transmitters on a duct.
Used to measure the gas concentration in the duct. This option does not affect the explosion-protection approval of the transmitter.

Remote sensor

For installation of the sensor at a distance of up to 30 m away from the Dräger Polytron 7000 transmitter. This option does not affect the explosion-protection approval of the transmitter.

Duct adapter for remote sensor

For mounting a remote sensor on a duct for measuring the gas concentration in the duct. This option does not affect the explosion-protection approval of the transmitter.

Dräger Polytron 7000 software dongles

For activation of additional functions of the Dräger Polytron 7000. This option does not affect the explosion-protection approval of the transmitter.

Installing the transmitter

Preparing for installation

The performance and effectiveness of the entire system depends essentially on the position chosen for installing the transmitter.

The following should be noted during installation:

- Local requirements and regulations governing the installation of gas measuring systems.
- Relevant regulations concerning the connection and routing of electric power supply and signal lines.
- The full scope of environmental factors to which the transmitter may be exposed (ambient conditions: see Technical data, page 86).
- Physical properties of the gas to be measured:
For gases with a density lower than that of air, the transmitter must be located above any possible leak or at the highest point at which large concentrations of gas may occur.
For gases and vapours with a density greater than that of air, the transmitter must be located below a possible leak or at the lowest point at which such gases and vapours may occur.
- The specific uses (e.g. possible leaks, ventilation conditions, etc.).
- Accessibility for the necessary maintenance work (see Installation instructions for the Polytron docking station).
- All other factors and conditions which could have a negative effect on the installation and operation of the system (such as vibrations or varying temperatures).
- We recommend installing a reflective shield if the unit is exposed to strong sunlight.
- The transmitter must be installed vertically (sensor facing downwards).
- The transmitter has been tested with regard to its weather-resistance and may be installed out of doors. Use of a splash guard is recommended to protect the sensor from splashing water, dust and wind.

In explosion-hazard areas:

Observe the national regulations concerning electrical equipment in explosion-hazard areas.


The Dräger Polytron 7000 transmitter consists of several components:

- Dräger docking station
This can be pre-installed anywhere and contains the electrical installation components.
- The measuring unit Dräger Polytron 7000
contains the electronics of the transmitter.


If the measuring unit is not fitted immediately after installing the docking station, the latter should be covered with the raincover provided (dust and water protection) to protect against dust and splashing water.

Installing the docking station

- If the transmitter is to be installed in a Zone 2 explosion-hazard area, select a location with low exposure to mechanical risk.
 - Docking station is installed vertically (transmitter with sensor facing down) in an area with low vibrations and stable temperatures – near the possible leak.
 - A space of at least 15 cm (6") must be maintained above the transmitter for installation of the measuring unit.
 - A space of at least 10 cm (4") – preferably 30 cm (12") – must be maintained below the docking station to permit access for maintenance.
- Unpack the docking station.
 - 1 Remove raincover (protection against dust and splashing water).

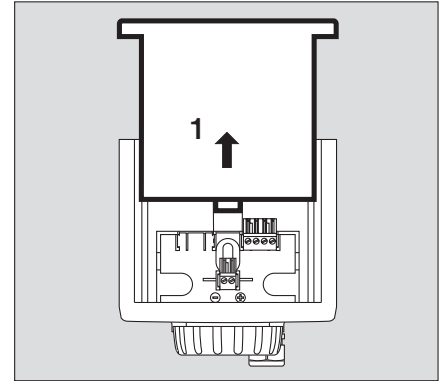

- 2 Remove the 4-pole terminal block (Part No. 83 16 268), keep it in a safe place and insert it again after completion of the installation work.
- A drilling template is provided on page 135. The mounting holes are 66 ± 4 mm (2.6 ± 0.16 ") apart.

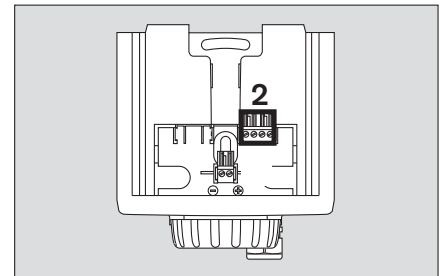

Attention:

Spacers (e.g. mounting bracket 68 09 772) must be used to prevent any twisting of the housing when installed on uneven surfaces.

If the measuring unit is not to be mounted at this time:


- refit the raincover (protection against dust and splashing water).

For Multidrop installation only:
(see page 17)

Installing the Daisy Chain kit

Part No. 83 17 282

- 3 Break or drill out the prepared breakthrough for the second cable gland from the inside of the docking station.
The hole should have a diameter of 20.5 mm.
- Check that the docking station has no loose parts, and clean it if necessary.
- Insert the nut of the cable gland into the docking station.
- Screw in the cable gland from the outside of the docking station and tighten it.

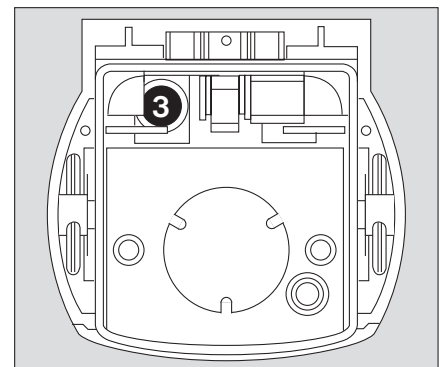

Electrical connections


- The electrical wiring may be laid and connected only by a qualified electrician, who must also comply with the appropriate regulations – a screened or un-screened cable (such as LiY, LiYCY) may be used.

2-wire connection

- Connection to central device with at least 2-wire cable, 0.5 (AWG 20) to 2.5 mm² (AWG 13).

Installing the 4 to 20 mA current loop on the transmitter

- For currents of 3 to 22 mA, a DC voltage between 16.5 V DC (3 mA), or 8.0 V DC (22 mA) and 30 V DC must be present at the transmitter.
- Fit 2-wire connecting cable in cable gland, cut to length and strip ends (approx. 80 mm / 3.15").
- Shorten the shield (if installed) to prevent short-circuiting:
- Connect cable
 - 1 Use a 4-pole terminal block (X8), Part No. 83 16 268, for the Dräger Polytron 7000 – Observe the polarity of the connections. Cut excess wires short or
 - 2 secure them in centre terminals (Part No. 83 16 422).
 - 1 Slide connecting terminal back into holder.
- Secure cable in holder.
- Fold up the installation notes and place them in the Dräger docking station for future use during commissioning.
- Refit raincover (protection against dust and splashing water).

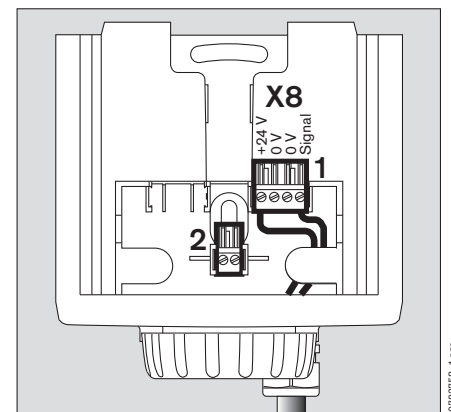

Connecting to the central unit

- Connect shield to earth of central unit (e.g. housing, earth bar, etc.).

Connecting the Dräger Polytron 7000 transmitter to a Dräger control unit (such as Regard, QuadGard, Unigard or Polytron):

- Further information about the connection can be found in the instructions for the Dräger control unit.

Connecting the Dräger Polytron 7000 transmitter to control units with a 4 to 20 mA interfaced made by other manufacturers:

- For operation together with control units made by other manufacturers, care must be taken that the voltage at the transmitter does not drop below 16.5 V at a current of 3 mA and 8.0 V at a current of 22 mA. The supply voltage, the resistance of the cable and the load and the resistance of any installed safety barrier must be taken into account.
- Further information about the connection can be found in the instructions for the control unit being used.

Installing the transmitter in areas subject to explosion hazards of zone 0, 1 or Div. 1

- Install a safety barrier with the appropriate explosion protection approval (category 1, 2 or Div. 1) between the transmitter and the control unit.
- Only safety barriers with the following characteristics may be used: $U_o (V_{oc}) \leq 30$ V, $I_o (I_{sc}) \leq 0.3$ A, $P_o \leq 700$ mW.
- Take care that the maximum permissible capacitance and inductance of connections to the safety barrier are not exceeded, also taking the cable into account. The safety-related input parameters of the transmitter are: $C_i = 5$ nF, $L_i = 50$ μ H.

Transmitter supply units

(without HART-communication between Ex/Non-Ex area)

The following safety barriers are provided as examples only. Selected barriers must be acceptable to the authority having jurisdiction and comply with the assigned P3U entity parameters also taking the cable into account.

Manufacturer	Type	suitable for	R _{Cable} (Loop)	Note
MTL	MTL 5041	Zone 0, Div. 1	350	Suitable only for 2-wire
Pepperl & Fuchs	KFD2-CR-Ex1.30 200	Zone 0, Div. 1	400	Suitable only for 2-wire

SMART transmitter supply units


(with HART-communication between Ex/Non-Ex area)

The following safety barriers are provided as examples only. Selected barriers must be acceptable to the authority having jurisdiction and comply with the assigned P3U entity parameters also taking the cable into account.

Manufacturer	Type	suitable for	R _{Cable} (Loop)	Note
Endress + Hauser	RN 221 N-B1 (ATEX)	Zone 0	380	Suitable only for 2-wire
	RN 221 N-C1 (FM)	Div. 1	380	Suitable only for 2-wire
	RN 221 N-D1 (CSA)	Div. 1	380	Suitable only for 2-wire
	RN 221 N-E1 (TIIS)		380	Suitable only for 2-wire
MTL	MTL 5042	Zone 0, Div. 1	400	Suitable for 2-wire and 3-wire
Pepperl & Fuchs	KFD2-STC4-Ex1	Zone 0, Div. 1	300	Suitable for 2-wire and 3-wire
Stahl	9160/13-11-11	Zone 0	400	Suitable for 2-wire and 3-wire (3-wire without HART)

- The cable resistances given apply for a load resistance of 250 Ω . Higher load resistances can drastically reduce the permissible cable resistance!
- When other barriers have been selected, care must be taken that the voltages on the transmitter do not fall below the following values when barrier parameters and cable resistance are taken into account:
16.5 V for a current of 3 mA and 8.0 V for a current of 22 mA.
- If HART communication is to be used, the HART specifications must also be observed.

- The maximum possible cable lengths can be found in the table on page 18. In each case, use the line marked "Number of transmitters = 1".
- Connect shielding to earth point and/or 0 V (Ex i).

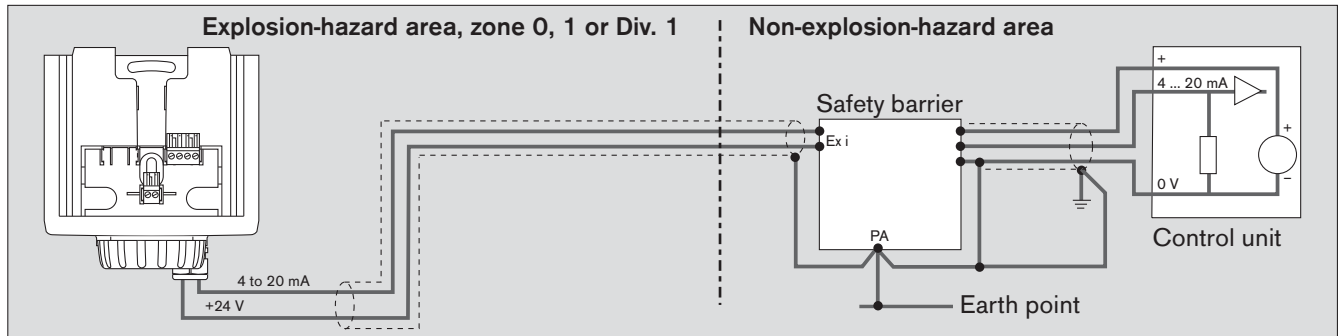

Installing the transmitters in explosion-hazard areas of zone 2 or 22 without a safety barrier

- Use only supply units of the device category 3.
- Take care that the maximum permissible capacitance and inductance of connections to the supply unit are not exceeded, also taking the cable into account. The safety-related input parameters of the transmitter are:
 $C_i = 5 \text{ nF}$, $L_i = 50 \text{ } \mu\text{H}$.

Caution:

The category 1 marking has to be cut out from the rating-plate label. Once the unit has been used after installation in the above manner, it may never be installed in explosion-hazard areas of zone 0 or zone 1 (device category 1 or 2). Explosion hazard!


- The maximum possible cable lengths can be found in the table on page 19. In this table, select the line, " Number of transmitters = 1".

Installing the transmitters in non-explosion-hazard areas:

Caution:

The explosion-protection markings has to be removed from the transmitter. Once the transmitter has been used after installation in this manner, it may never be installed in explosion-hazard areas.

- The maximum possible cable lengths can be found in the table on page 19. In this table, select the line, " Number of transmitters = 1".

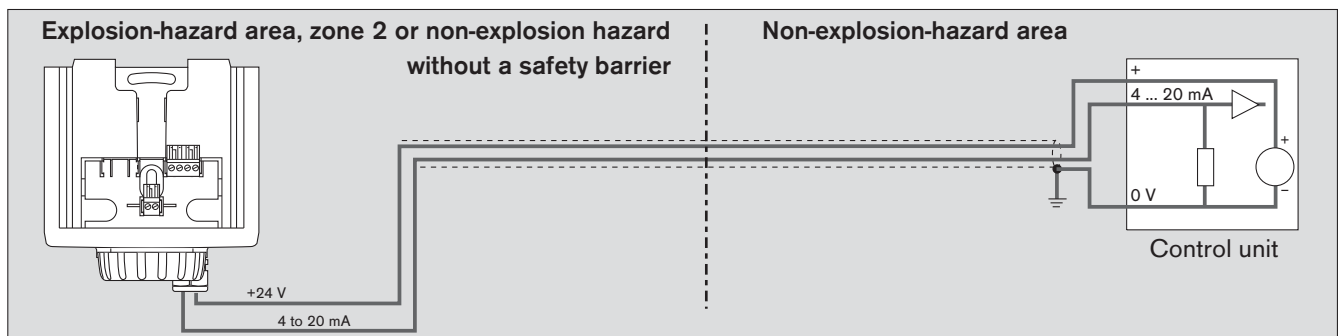


Installing fieldbus communication on the transmitter

- The transmitter can be connected to a certified intrinsically safe fieldbus system, which supports FISCO (Fieldbus intrinsically safe concept).
- The PROFIBUS PA transmission technology for intrinsically safe applications is MBP. MBP stands for:
 - Manchester Coding (M)
 - Bus Powered (BP)
- 5 transmitters can be connected to a segment with a typical segment current of 100 mA.

- Install the 2-wire connection cable in the cable gland, cut it to length and strip off the insulation (approx. 80 mm).
- Shorten the shield (if installed) to prevent short-circuiting.
- Connect cable:
 - 1 Use a 4-pole terminal block (X7), Part No. 83 16 268, for the Dräger Polytron 7000 – Observe the polarity of the connections. Cut excess wires short or
 - 2 secure them in center terminals (Part No. 83 16 422).
- 1 Slide connecting terminal back into holder.
- Secure cable in holder.
- Fold up the installation notes and place them in the Dräger docking station for future use during commissioning.
- Refit raincover (protection against dust and splashing water).

Caution: Insert 4-pole (X7) terminal block into left holder.

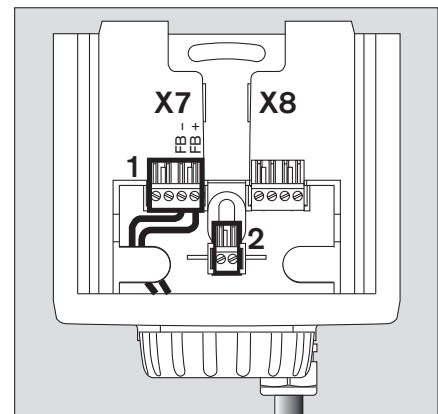

Installing the transmitter in areas subject to explosion hazards of Zone 0 or Zone 1:

- Only safety barriers with the following characteristics may be used:
 $U_{\max} \leq 24 \text{ V}$, $I_{\max} \leq 0.38 \text{ A}$, $P_{\max} \leq 5.32 \text{ W}$ or those which correspond to the FISCO model.
- The transmitter may only be connected in 2-wire connection to the left 4-fold terminal block (X7) of the docking station. No electrical connections may be made to the right 4-fold terminal block (X8).

Installing the transmitter in areas subject to explosion hazards of Zone 2:

- Make sure that the supply unit corresponds with the FINCO model and that the maximum permissible capacitance and inductance of connections to the supply unit are not exceeded, (also take the cable into account).
- The safety-related input parameters of the transmitter are:
 $C_i = 5 \text{ nF}$, $L_i = 10 \text{ } \mu\text{H}$.
- The transmitter may only be connected in 2-wire connection to the left 4-fold terminal block (X7) of the docking station. No electrical connections may be made to the right 4-fold terminal block (X8).

Caution: The category 1 marking has to be cut out from the rating-plate label. Once the unit has been used after installation in the above manner, it may never be installed in explosion-hazard areas of Zone 0 or Zone 1 (device category 1 or 2). Explosion hazard!

Connection to the control unit

- Connect shield to earth of central unit (e.g. housing, earth bar, etc.).

Caution:

In the case of PROFIBUS devices, the shield must only be connected on one side of the cable to earth.

3-wire connection

- Connection to central device with at least 3-wire cable, 0.5 (AWG 20) to 2.5 mm² (AWG 13).

Attention:

The supplied ferrite sleeves are to be used when installing the transmitter in three-wire technology.

A ferrite sleeve must be pushed onto each core prior to connecting the cable to the four-pole terminal in the docking station.

Installing the 4 to 20 mA current loop on the transmitter


- Install the 3-wire connection cable in the cable gland, cut it to length and strip off the insulation (about 80 mm).
- Shorten the shield (if installed) to prevent short-circuiting:
- Connect cable
 - 1 4-pin terminal for Dräger Polytron 7000 – observe polarity. Slide connecting terminal back into holder.
- Secure cable in holder.
- Fold up the installation notes and place them in the Dräger docking station for future use during commissioning.
- Refit raincover (protection against dust and splashing water).

Connection to the control unit

- Connect shield to earth of central unit (e.g. housing, earth bar, etc.).

Connecting the Dräger Polytron 7000 transmitter to a Dräger control unit (such as Regard, QuadGard, Unigard or Polytron):

- Further information about the connection can be found in the instructions for the Dräger control unit.
- When operated from the mains supply, the Polytron control unit provides a supply voltage of at least 20 V. This must be taken into account when determining the maximum cable length (see the table on page 19).
- Unigard is not suitable for the connection of a Polytron 7000 transmitter equipped with a relay or pump module.

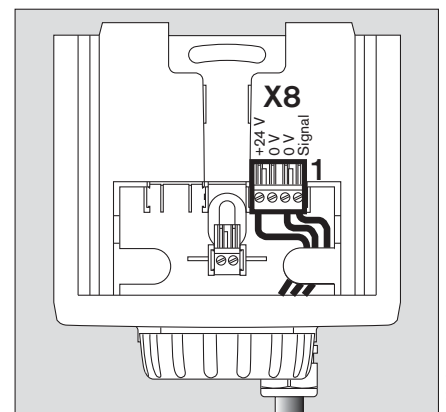

01123789_1.jpg


Connecting the Dräger Polytron 7000 transmitter to control units with a 4 to 20 mA interfaced made by other manufacturers:

- Further information about the connection can be found in the instructions for the control unit being used.

Installing the transmitter in non-explosion-hazard areas:

Caution:
Remove the explosion-protection markings from the transmitter. Once the transmitter has been used after installation in this manner, it may never be installed in explosion-hazard areas. Explosion hazard!

- When installing a transmitter in a non-explosion-hazard area, connect the cable shield and the negative pole of the supply voltage to earth at the switch cabinet or distribution panel.
- Ensure that the supply voltage provided by the control unit (ignoring the load resistance) is at least as high as specified in the tables of page 19 to page 21.
- If digital communication in accordance with HART is to be used, the load resistance of the supply unit must lie between 230 and 500 Ω .
- The permissible cable lengths are shown in the tables on page 19 to page 21. In each case, use the line marked "Number of transmitters = 1".

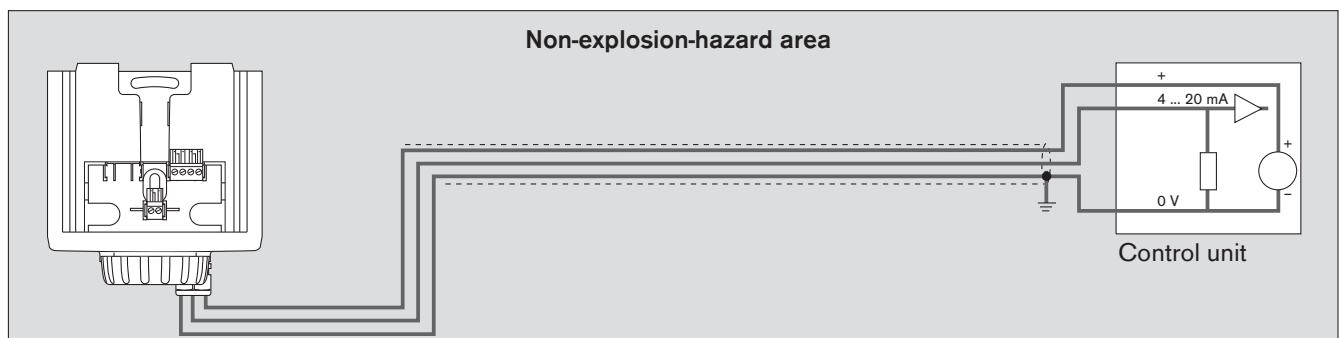

Connections between several transmitters and a control unit with HART multidrop connections

- Each transmitter must first be put into service separately. Use the menu item "Polling Address" to assign a different polling address in the range "1" to "15" to each transmitter which is to be connected to the multidrop cable (see page 69). It is best to assign sequential polling addresses, starting with "1".

Installing the transmitters in areas subject to explosion hazards of zone 0 or zone 1

- Depending on the supply unit, up to 7 transmitters can be connected to a 2-wire or 3-wire cable.
The second cable gland is used for the cable to the next transmitter.
- Install a safety barrier with the appropriate explosion protection approval (category 1, 2 or Div. 1) between the transmitter and the control unit.
 - Only safety barriers with the following characteristics may be used: $U_o (V_{oc}) \leq 30 V$, $I_o (I_{sc}) \leq 0.3 A$, $P_o \leq 700 mW$.
 - Take care that the maximum permissible capacitance and inductance of connections to the safety barrier are not exceeded, also taking the cable into account. The safety-related input parameters of the transmitter are: $C_i = 5 nF$, $L_i = 50 \mu H$.
 - The safety barrier must be capable of transmitting the communications signals in both directions between the explosion-hazard area and the non-explosion-hazard area. Several manufacturers offer special SMART transmitter supply units for this purpose.

SMART transmitter supply units

(with HART-communication between Ex/Non-Ex area)


The following safety barriers are provided as examples only and have not been certified for use in combination with the P3U. Selected barriers must be acceptable to the authority having jurisdiction and comply with the assigned P3U entity parameters also taking the cable into account.

Manufacturer	Type	suitable for	R _{Cable} (Total)		
			for up to 5 transmitters	for up to 6 transmitters	for up to 7 transmitters
Endress + Hauser	RN 221 N-B1 (ATEX)	Zone 0	120	50	---
	RN 221 N-C1 (FM)	Div. 1			
	RN 221 N-D1 (CSA)				
	RN 221 N-E1 (TIIS)				
MTL	MTL 5042	Zone 0, Div. 1	33	27	20
Pepperl & Fuchs	KFD2-STC4-Ex1	Zone 0, Div. 1	90	10	---
Stahl	9160/13-11-11	Zone 0	160	80	20

- If a HART hand-held terminal is used, the permissible values may be lower. Observe the safety-related parameters of the hand-held terminal.
- The cable resistances given apply for the maximum possible number of transmitters as well as a load resistance of 250 . Higher load resistances can drastically reduce the maximum possible cable resistance!

- The following tables show permissible combinations of transmitters, supply voltages and maximum possible cable lengths.
- The capacitance values are typical values for commercially available shielded cables with PVC insulation. The use of cables with different capacity values will result in other cable lengths.

Transmitter supply unit	Number of transmitters	Maximum possible cable length			
		0.5 mm ² 265 pF/m	0.75 mm ² 320 pF/m	1.5 mm ² 375 pF/m	2.5 mm ² 400 pF/m
Endress + Hauser: RN 221 N	1	1042 m	921 m	828 m	792 m
	2	1007 m	890 m	801 m	766 m
	3	972 m	860 m	774 m	740 m
	4	936 m	829 m	747 m	714 m
	5	901 m	799 m	720 m	689 m
	6	702 m	768 m	693 m	663 m
MTL: MTL 5042	1	463 m	695 m	828 m	792 m
	2	463 m	695 m	801 m	766 m
	3	463 m	695 m	774 m	740 m
	4	463 m	695 m	747 m	714 m
	5	463 m	695 m	720 m	689 m
	6	379 m	569 m	693 m	663 m
	7	281 m	421 m	666 m	637 m
Pepperl & Fuchs: KFD2-STC4-Ex1	1	1042 m	921 m	828 m	792 m
	2	1007 m	890 m	801 m	766 m
	3	972 m	860 m	774 m	740 m
	4	936 m	829 m	747 m	714 m
	5	901 m	799 m	720 m	689 m
	6	140 m	211 m	421 m	663 m
Stahl: 9160/13-11-11	1	1042 m	921 m	828 m	792 m
	2	1007 m	890 m	801 m	766 m
	3	972 m	860 m	774 m	740 m
	4	936 m	829 m	747 m	714 m
	5	901 m	799 m	720 m	689 m
	6	865 m	768 m	693 m	663 m
	7	281 m	421 m	666 m	637 m

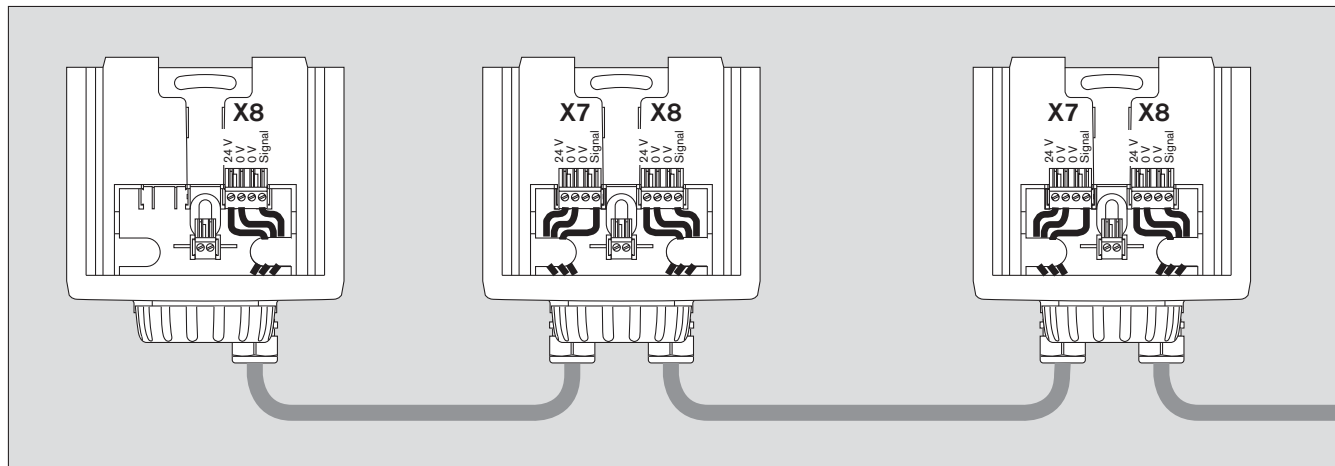

01523756_1.eps

Installing the transmitters in explosion-hazard areas of zone 2 or 22 without a safety barrier

- Use only supply units of the device category 3.
- For safety reasons, we recommend that not more than 8 transmitters be connected to a 2-wire or 3-wire cable.
- Take care that the maximum permissible capacitance and inductance of connections to the supply unit are not exceeded, also taking the cable into account. The safety-related input parameters of the transmitter are:
 $C_i = 5 \text{ nF}$, $L_i = 50 \text{ }\mu\text{H}$.

Caution: The category 1 marking has to be cut out from the rating-plate label. Once the unit has been used after installation in the above manner, it may never be installed in explosion-hazard areas of zone 0 or zone 1 (device category 1 or 2). Explosion hazard!

Installing the transmitter in non-explosion-hazard areas:

- For safety reasons, we recommend that not more than 8 transmitters be connected to a 2-wire or 3-wire cable.
 If the transmitters are equipped with relay or pump modules, not more than 4 transmitters should be connected to one cable.
 The second cable gland is used for the cable to the next transmitter.

Caution: The explosion-protection marking has to be removed from the transmitter. Once the transmitter has been used after installation in this manner, it may never be installed in explosion-hazard areas. Explosion hazard!

- The following tables show permissible combinations of transmitters, supply voltages and maximum possible cable lengths.
- The capacitance values are typical values for commercially available shielded cables with PVC insulation. The use of cables with different capacity values will result in other cable lengths.

Transmitter without relay or pump module (2-wire):

Minimum supply voltage	Number of transmitters	Maximum cable length with a load resistance of 250			
		0.5 mm ² 265 pF/m	0.75 mm ² 320 pF/m	1.5 mm ² 375 pF/m	2.5 mm ² 400 pF/m
20 V	1	1042 m	921 m	828 m	792 m
	2	1007 m	890 m	801 m	766 m
	3	972 m	860 m	774 m	740 m
	4	585 m	829 m	747 m	714 m
24 V	4	936 m	829 m	747 m	714 m
	5	901 m	799 m	720 m	689 m
	6	865 m	768 m	693 m	663 m
	7	830 m	737 m	666 m	637 m
	8	794 m	707 m	639 m	611 m
	9	390 m	585 m	612 m	586 m

Minimum supply voltage	Number of transmitters	Maximum cable length with a load resistance of 250			
		0.5 mm ² 265 pF/m	0.75 mm ² 320 pF/m	1.5 mm ² 375 pF/m	2.5 mm ² 400 pF/m
28 V	9	758 m	676 m	612 m	586 m
	10	722 m	645 m	584 m	560 m
	11	687 m	614 m	557 m	534 m
	12	651 m	584 m	530 m	508 m
	13	616 m	553 m	503 m	482 m
	14	334 m	502 m	476 m	456 m
	15	78 m	117 m	234 m	390 m

Transmitter with relay module (3-wire):

Minimum supply voltage	Number of transmitters	Maximum cable length with a load resistance of not more than 500			
		0.5 mm ² 265 pF/m	0.75 mm ² 320 pF/m	1.5 mm ² 375 pF/m	2.5 mm ² 400 pF/m
20 V	1	287 m	431 m	828 m	792 m
	2	144 m	216 m	431 m	718 m
	3	96 m	144 m	287 m	479 m
	4	72 m	108 m	216 m	359 m
24 V	1	386 m	579 m	828 m	792 m
	2	193 m	289 m	579 m	766 m
	3	129 m	193 m	386 m	643 m
	4	96 m	145 m	289 m	482 m
28 V	1	429 m	644 m	828 m	792 m
	2	215 m	322 m	644 m	766 m
	3	143 m	215 m	429 m	715 m
	4	107 m	161 m	322 m	537 m

Transmitter with pump module (3-wire):

Minimum supply voltage	Maximum possible flow-rate	Number of transmitters	Maximum cable length with a load resistance of not more than 500			
			0.5 mm ² 265 pF/m	0.75 mm ² 320 pF/m	1.5 mm ² 375 pF/m	2.5 mm ² 400 pF/m
20 V	0.5 L/min	1	161 m	241 m	482 m	792 m
		2	80 m	120 m	241 m	401 m
		3	54 m	80 m	161 m	268 m
		4	40 m	60 m	120 m	201 m

Minimum supply voltage	Maximum possible flow-rate	Number of transmitters	Maximum cable length with a load resistance of not more than 500			
			0.5 mm ² 265 pF/m	0.75 mm ² 320 pF/m	1.5 mm ² 375 pF/m	2.5 mm ² 400 pF/m
24 V	1.0 L/min	1	233 m	349 m	699 m	792 m
		2	116 m	175 m	349 m	582 m
		3	78 m	116 m	233 m	388 m
		4	58 m	87 m	175 m	291 m
	1.5 L/min	1	135 m	203 m	406 m	586 m
		2	68 m	102 m	203 m	338 m
		3	45 m	68 m	135 m	226 m
		4	34 m	51 m	102 m	169 m
28 V	1.5 L/min	1	271 m	406 m	812 m	792 m
		2	135 m	203 m	406 m	677 m
		3	90 m	135 m	271 m	451 m
		4	68 m	102 m	203 m	338 m

Transmitter with relay and pump modules (3-wire):


Minimum supply voltage	Maximum possible flow-rate	Number of transmitters	Maximum cable length with a load resistance of not more than 500			
			0.5 mm ² 265 pF/m	0.75 mm ² 320 pF/m	1.5 mm ² 375 pF/m	2.5 mm ² 400 pF/m
20 V	0.5 L/min	1	110 m	164 m	329 m	548 m
		2	55 m	82 m	164 m	274 m
		3	37 m	55 m	110 m	183 m
		4	27 m	41 m	82 m	137 m
24 V	1.0 L/min	1	161 m	241 m	482 m	792 m
		2	80 m	120 m	241 m	401 m
		3	54 m	80 m	161 m	268 m
		4	40 m	60 m	120 m	201 m
	1.5 L/min	1	90 m	134 m	269 m	448 m
		2	45 m	67 m	134 m	224 m
		3	30 m	45 m	90 m	149 m
		4	22 m	34 m	67 m	112 m
28 V	1.5 L/min	1	179 m	269 m	537 m	792 m
		2	90 m	134 m	269 m	448 m
		3	60 m	90 m	179 m	298 m
		4	45 m	67 m	134 m	224 m

4-wire connection

- Connection to central device with at least 4-wire cable, 0.5 (AWG 20) to 2.5 mm² (AWG 13).

Installing the LON Communication on the transmitter

- For installation using LON communication up to 63 Polytron 7000 can be connected to a four wire cable in any configuration including bus, star, loop and mixed.

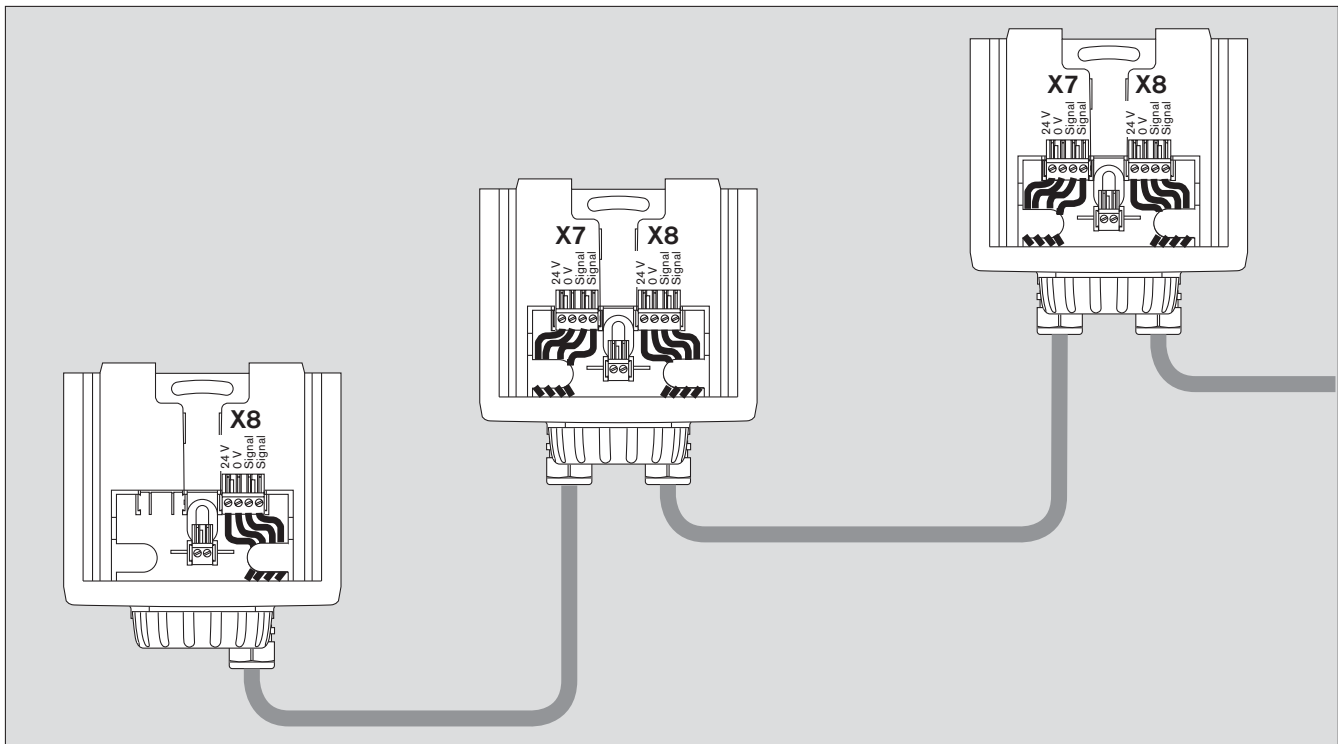

- Insert the 4-wire connecting cable in the cable gland, cut it to length and strip the insulation (approx. 80 mm).
- Shorten the shield (if installed) to prevent short-circuiting:
- Connect cable
 - 1 4-pin terminal for Dräger Polytron 7000 – observe polarity.
Slide connecting terminal back into holder.
- Secure cable in holder.
- Fold up the installation notes and place them in the Dräger docking station for future use during commissioning.
- Refit raincover (protection against dust and splashing water).

Installing the transmitter in non-explosion-hazard areas:

Caution:

With 4-core connection the transmitter has no Ex protection. Once the transmitter has been used after installation in this manner, it may never be installed in explosion-hazard areas. Explosion hazard!


Installing fieldbus communication on the transmitter

- The PROFIBUS PA transmission technology for intrinsically safe applications is MBP. MBP stands for:
 - Manchester Coding (M)
 - Bus Powered (BP)
 - 5 transmitters can be connected to a segment with a typical segment current of 100 mA.
- Install the 4-wire connection cable in the cable gland, cut it to length and strip off the insulation (approx. 80 mm).
 - Shorten the shield (if installed) to prevent short-circuiting.
 - Connect cable:
 - 1 4-pin terminal block for Dräger Polytron 7000, observing the polarity.
 - 2 4-pin terminal block for Dräger Polytron 7000, observing the polarity.
 - Slide connecting terminal back into holder.
 - Secure cable in holder.
 - Fold up the installation notes and place them in the Dräger docking station for future use during commissioning.
 - Refit raincover (protection against dust and splashing water).

Installing the transmitter in 4-wire connection:

Caution:

With 4-wire connection the transmitter has no Ex protection. Once the transmitter has been used after installation in this manner, it may never be installed in explosion-hazard areas. Explosion hazard!

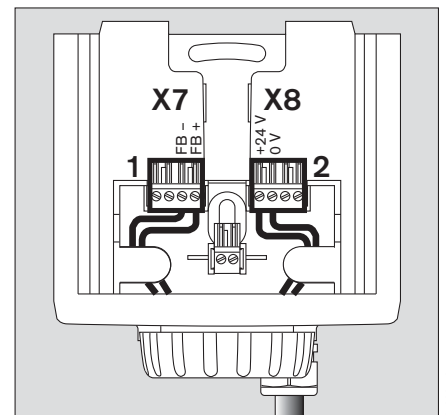

01323798_4.eps

Installing the measuring unit Dräger Polytron 7000

- Remove the rain cover from the previously installed docking station.
 - Examine seal for signs of dirt and clean if necessary.
- 1 Check position of eccentric catches and correct if necessary. The eccentric opening must point upwards, engaged position.

Attention!

Use only a 5 mm Allen key without a ball head.

- Check the polarity and cable routing and check that the connector is securely seated; rectify as necessary (see the installation notes for the Polytron docking station).
- Unpack the Dräger Polytron 7000 measuring unit.

Setting the switch for the backup battery



- Check the position of the switch on the bottom of the unit. This switch must be set to "on"; otherwise, the time, date and data saved in the Datalogger and the Event Logger will be lost in the case of a power failure.
- 2 Insert the measuring unit about halfway up the docking station and slide it in as far as it will go.
 - 3 Lower the unit along the front edge of the docking station. About 5 mm before it hits the stop, the resistance will increase as the connector engages with the socket on the printed circuit board.



Note!

Check that the terminals in the docking station are correctly aligned if the connector does not engage correctly!

Note:

Ensure that the front bottom of the measuring unit is flush with the bottom of the Docking Station. Apply pressure to the measuring unit until it "clicks" into place. If the fronts are not flush, the measuring unit is not completely sealed and could get water inside the transmitter!

- 1 Turn the eccentric catches clockwise with an Allen key to lock the measuring unit ( ⇒  = approx. 180°).

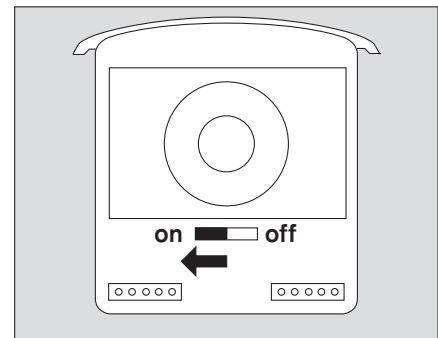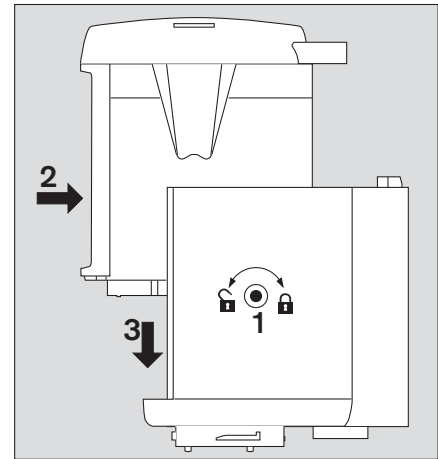


Fitting the sensor

- 1 Remove bayonet ring from transmitter, remove dummy plate.
- Remove sensor from packaging.
- Remove the short-circuit strap from the sensor (if it is fitted).
- There is a coded connector on the back of the sensor. Place the sensor in the opening with the connector at the back and the Dräger logo at the front. Before plugging the connector in the socket, ensure that they are identically coded. Incorrect connection can damage the sensor!
- Secure sensor in transmitter with bayonet ring.

Attention:

For use in Zone 22, tighten the locking screw (2 mm Allen screw) of the sensor bayonet ring tight enough to ensure that the bayonet ring is secured against unintended loosening.

- If necessary, calibrate the sensor as described on page 42.
- If pre-calibrated sensors are used, the alarm chain must be tested with, for example, the bump test.

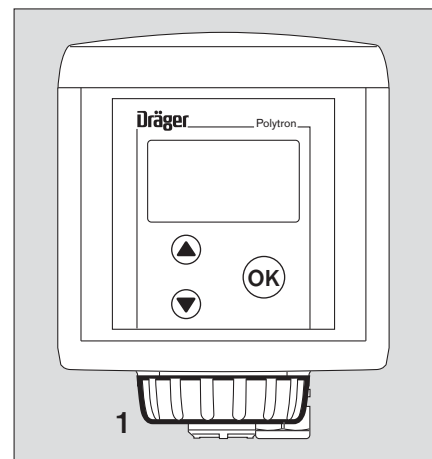

Installing accessories

Various accessories are available for the Dräger Polytron 7000 transmitter and may also be installed later.

Daisy chain kit – Cable Entry Kit

Intended use

Daisy chain kit – 83 17 282:

- For the connection of several transmitters to one bus cable (daisy chain or multi-drop connection)

Contents of the kit

- Cable gland with nut, 4-pole orange terminal block

Preparing the docking station

- Install the docking station as described in the installation notes 90 23 760.
- 1 Break or drill out the prepared breakthrough for the second cable gland from the inside of the docking station.
The hole should have a diameter of 20.5 mm.
- Check that the docking station has no loose parts, and clean it if necessary.
- Insert the nut of the cable gland into the docking station.
- Screw in the cable gland from the outside of the docking station and tighten it.

Electrical connections


- Connect the wiring as described in the installation notes for the docking station (90 23 760).
- 2 Insert the 4-pole terminal block into the holder on the mounting plate.
If necessary:
- refit the raincover (protection against dust and splashing water).

Note:


The two 4-pole terminal blocks for input (3) and output (2) are electrically connected 1:1 to each other inside the transmitter.

Installing the measuring unit

- Install the measuring unit as described in the installation notes 90 23 759.
- Due to the second terminal block, the resistance when installing the measuring unit is slightly higher.
Make sure that the measuring unit is fully lowered and hits the stop.

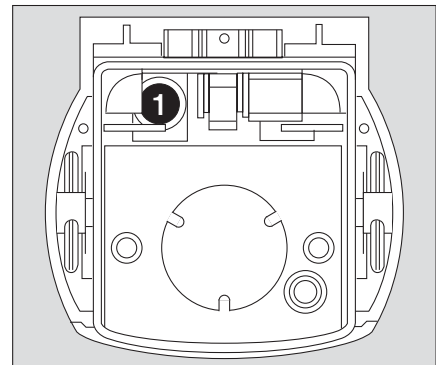

01923756_1.eps

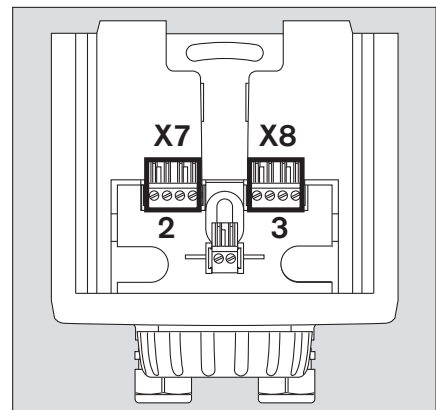

01923759_2.eps

Remote sensor

Intended use

Remote Sensor Adapter Polytron 7000 - 83 17 275:


- For installation of the sensor at a distance of up to 30 m from the Polytron 7000 transmitter.

Remote Cable + Sensor plug 5 m Polytron 7000 – 83 17 270 Remote Cable + Sensor adapter, 15 m Polytron 7000 – 83 17 998,

Remote Cable + Sensor plug 30 m Polytron 7000 – 83 17 999:

Attention:

The cable of the remote adapter may be shortened at the end with the connector. The cable may not be extended. The use of a different cable is not permitted!

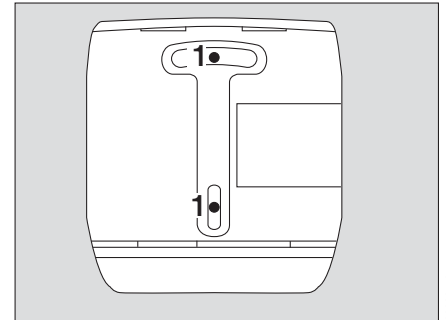

If a Remote Sensor Adapter with sensor is used on a transmitter installed in accordance with device category 3:

Caution:

Remove the Category 1 marking from the transmitter. After being installed in the manner described here, the accessory may never be used in explosion-hazard areas of zone 0 or zone 1 (device category 1 or 2)! Explosion hazard!

If a Remote Sensor Adapter with sensor is used on a transmitter installed in a non-explosion-hazard area:

Caution:

Remove the explosion-protection marking from the transmitter. After being installed in the manner described here, the accessory may never be used in explosion-hazard areas! Explosion hazard!

Wall mounting


- 1 Drill the holes for the mounting plate. (A drilling template is provided for this on page 137). The mounting holes are 50 ± 4 mm apart.
- Screw the mounting plate of the remote sensor adapter to the wall at the desired position.
- 2 Slide the case of the remote sensor on to the mounting plate until it snaps into position.

Installing the sensor


- 3 Unscrew the bayonet ring from the transmitter and remove the blanking disc.
- Remove sensor from packaging.
- Insert the sensor in the opening with the "Dräger" logo pointing to the front.
- Secure the sensor with the bayonet ring.

Attention:

For use in Zone 22, tighten the locking screw (2 mm Allen screw) of the sensor bayonet ring tight enough to ensure that the bayonet ring is secured against unintended loosening.

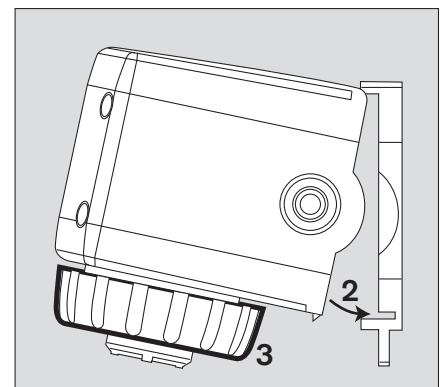

Connecting to the Polytron 7000

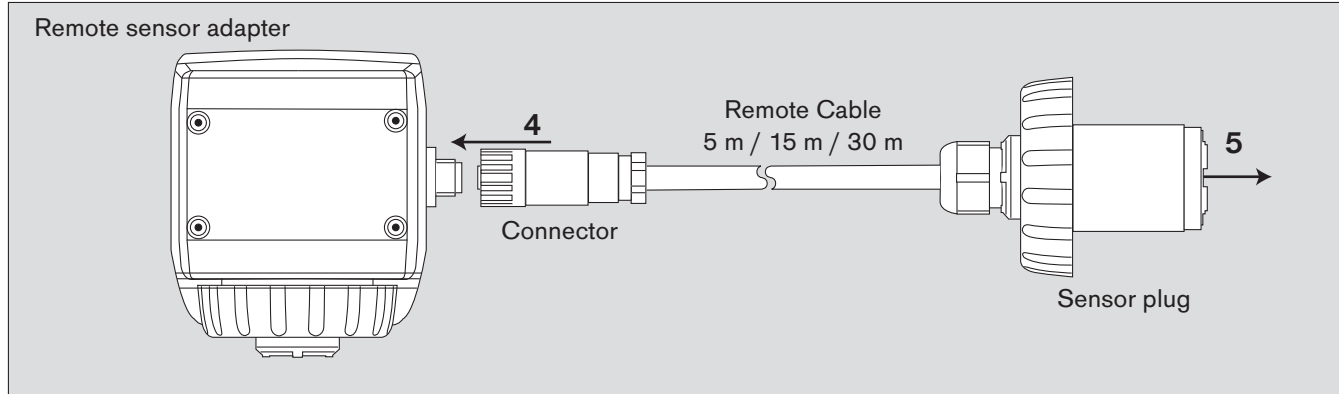

- 4 Connect the plug of the Remote Cable (cable length 5, 15 or 30 m) to the remote sensor adapter and secure it by turning the ring clockwise.
- 5 Insert the sensor plug in the opening on the Dräger Polytron 7000 transmitter with the "Dräger" logo pointing to the front.
- Secure the sensor plug with the bayonet ring.

Attention:

For use in Zone 22, tighten the locking screw (2 mm Allen screw) of the sensor bayonet ring tight enough to ensure that the bayonet ring is secured against unintended loosening.

Note:

The remote sensor is recognised automatically by the transmitter. No further installation steps are required.

Duct adapter for remote sensor


Purpose

Duct adapter for remote sensor – 83 17 617:

- For mounting a remote sensor on a pipe or duct,
- For measuring the gas concentration in the pipe or duct.

Mounting

- Drill a hole for the sensor opening (diameter 35+1 mm) at the desired measuring point on the pipe.
 - Button the sealing sleeve into the hole.
 - Align the retaining clip so that it is centred on the hole.
- 1 Drill the holes for the securing screws. A drilling template is provided on page 137.

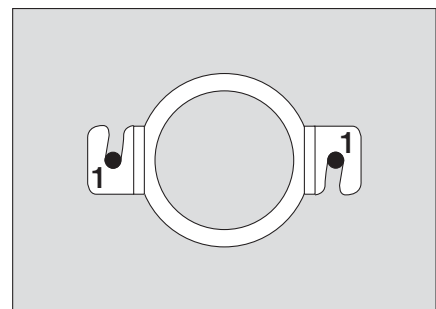

- 2 Loosen the bayonet ring of the remote sensor.
 - 3 Place the retaining clip on the pipe of the case and install the bayonet ring again.
- Insert the sensor opening into the sealing sleeve.
 - Turn the retaining clip to the correct position and screw it down.

Note:

To avoid faulty measurements, pay close attention to the fitting of the sensor in the sealing sleeve!


Removal/changing the sensor

- Loosen the securing screws.
- Swing the retaining clip to one side.
- Pull the remote sensor out of the sealing sleeve.
- Change the sensor.

Attention:

For use in Zone 22, tighten the locking screw (2 mm Allen screw) of the sensor bayonet ring tight enough to ensure that the bayonet ring is secured against unintended loosening.

- Install the remote sensor again.

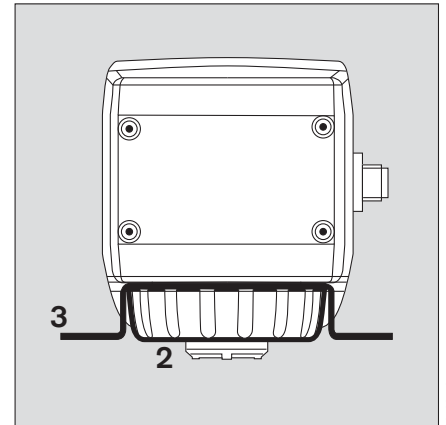

Dräger Polytron 7000 software dongles

Intended use

Dräger Polytron 7000 software dongle – 83 17 618, 83 17 619 or 83 17 860:

- For activating additional functions in the Dräger Polytron 7000:


Data Dongle 83 17 618 Colour-code blue	– Activates the Event Logger, the Datalogger and the graphical concentration display.
Sensor Dongle 83 17 619 Colour-code silver	– Activates the sensor self-test.
Sensor Diagnostic Dongle 83 17 860 Colour-code green	– Activates the sensor self-test, the display of the remaining sensor lifetime and the sensor diagnostic function.

Installing the software dongles


- 1 Release the measuring unit with an Allen key by turning the eccentric catches counter-clockwise (🔒 ⇒ 🔓 = approx. 180°).

Caution! Use only a 5 mm Allen key without a ball head.

- 2 Push the measuring unit up to about half height and then pull it forwards out of the docking station.
- The unit must be disconnected from the mains!

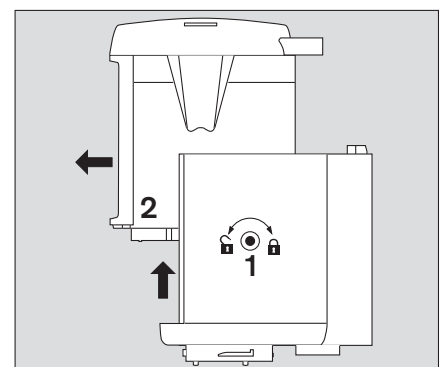


- 3 Bend the snap-hooks on the cover of the measuring unit slightly outwards to release them.
- 4 Remove the cover.

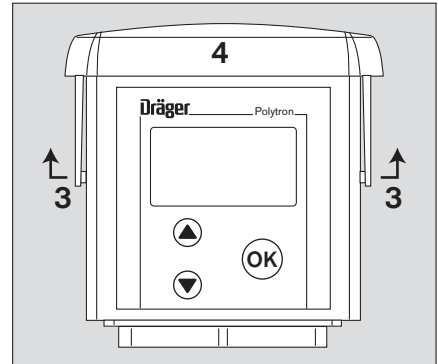


- 5 Hold the dongle with the "Dräger" logo pointing towards the measuring unit. Then insert the dongle into any of the three slots. Up to three dongles may be installed simultaneously.

- Place the cover on the measuring unit and press it down until it snaps into position.

- 6 **Attention:**
Take care that pressure is applied only to the sleeve (6) of measuring unit. Pressure on the inner structure can damage the unit.

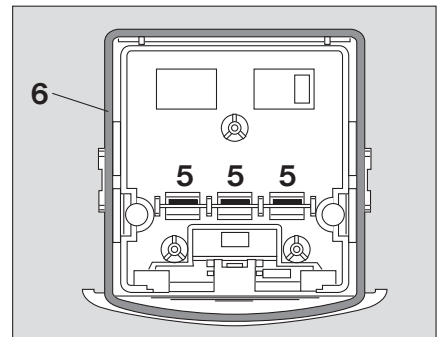

- 7 Slide the measuring unit into the docking station and lower it into position, see page 24.
- 8 Turn the eccentric catches clockwise with an Allen key to lock the measuring unit (🔓 ⇒ 🔒 = approx. 180°).

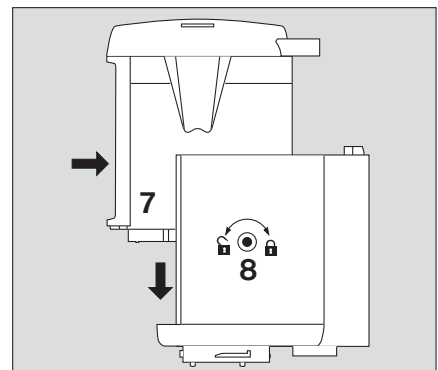

Note:
Correct operation of the software dongle can be checked by switching the measuring unit on and selecting the menu items » Information «, » Instrument «, » Module « from the unit menu, see page 53.

Relay module

Intended use

Relay module – to order:

- For switching of actuators, alarm generators, etc. on the basis of the measured gas concentration.
- **The unit must be disconnected from the mains!**


Caution:

If a Polytron 7000 is subsequently equipped with the relay module and/or the pump module, the complete unit loses its explosion-protection approval. The user must ensure that no related approval markings are left on the Polytron 7000. The explosion-protection markings has to be removed from the transmitter.

The use of the Polytron 7000 with a pump module and/or relay module installed is not permitted in explosion-hazard areas! Explosion hazard!

Note:

For operation with the relay module, the transmitter must have a 3-wire connection to the control unit.

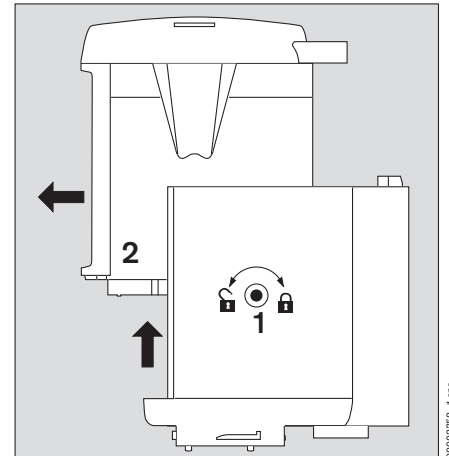

Preparing the docking station


- Remove any existing explosion-protection label from the docking station.
- 1 Release the measuring unit with an Allen key by turning the eccentric catches counter-clockwise (🔒 ⇒ 🔄 = approx. 180°).

Caution! Use only a 5 mm Allen key without a ball head.

- 2 Slide the measuring unit halfway upwards and then pull it forward out of the docking station.

Converting the measuring unit

- 3 Bend the snap-hooks on the cover of the measuring unit slightly outwards to release them.
- Remove the cover.

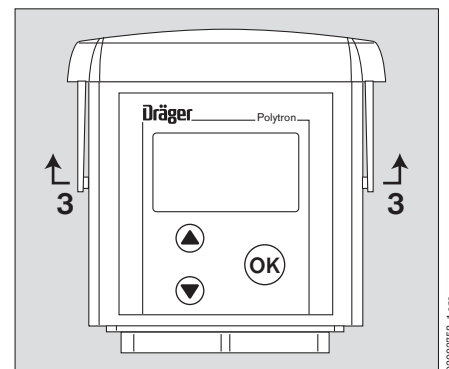


- 4 Plug the connection cable into the male connector behind the display, ensuring that the cable is not twisted.

- Place the relay module on the measuring unit and snap it into position on both sides.

In order to make this step easier, the relay cover may be removed.


5 Attention:

Take care that pressure is applied only to the sleeve of measuring unit. Pressure on the inner structure can damage the unit.

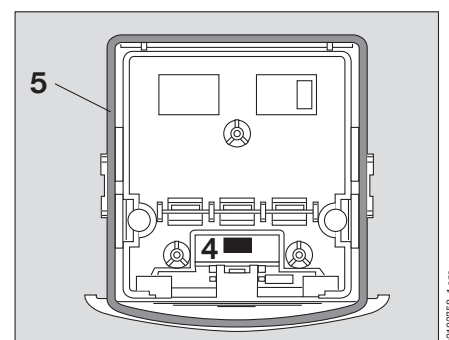

After connecting the relay module to the measuring unit:


- 6 Fit the cover again.

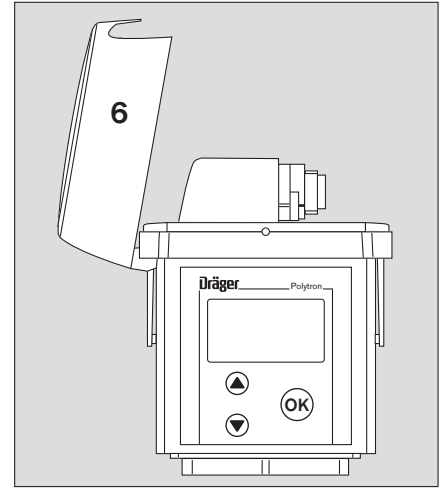

032375L_1.jpg

Mounting the measuring unit with relay module

- 7 Slide the measuring unit with relay module into the docking station and lower it into position, see page 24.
- 8 Turn the eccentric catches clockwise with an Allen key to lock the measuring unit (🔓 ⇒ 🔒 = approx. 180°).

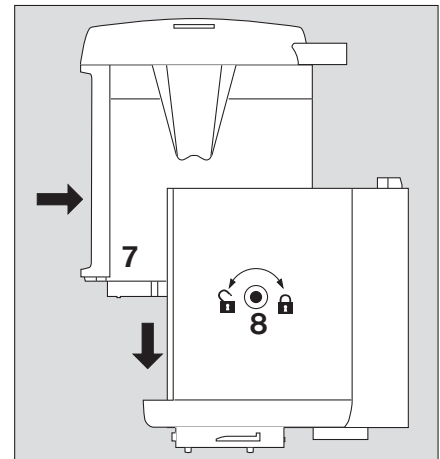

032375L_1.jpg

Connecting the devices to be switched

The relay module has three 3 potential-free outputs, each capable of switching 250 V / 5 A:

- A1 relay (switches when the A1 gas alarm is active)
- A2 relay (switches when the A2 gas alarm is active)
- Fault relay (switches in the case of a device fault)


Setting the alarm thresholds: see page 62.

- Connect the devices to be switched to the cable sockets.
Cable sockets of the following types may be used:
 - Binder Type 692 Part No. 99-0210-00-04
 - Amphenol Type C16-1 Part No. T 3109-001
 - Hirschmann Type CA3 LD Part No. 934-125-100
 - Dräger Safety Part No. 18 90 086

Pin assignments of the built-in plug on the relay module:

(see also the inside of the relay cover)

- 1 normally closed
 - 2 common
 - 3 normally open
 - 4 not connected
- Note the assignments of the relay outputs on the relay cover.
 - Insert and lock the plug.
 - Close the relay cover.

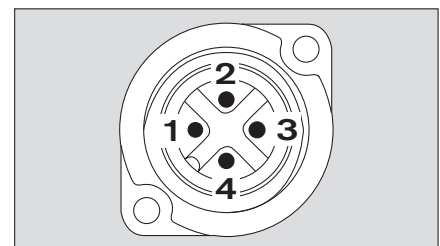

0442575B_1.jpg

Pump module

Intended use

Pump module – to order:

- For drawing measuring gas from a remote site into the Dräger Polytron 7000 transmitter.

Caution:

If a Polytron 7000 is subsequently equipped with the relay module and/or the pump module, the complete unit loses its explosion-protection approval. The user must ensure that no related approval markings are left on the Polytron 7000. Remove or cut away any existing approval label.

The use of the Polytron 7000 with a pump module and/or relay module installed is not permitted in explosion-hazard areas! Explosion hazard! Suitable explosion protection measures such as flame traps are required when drawing measuring gas from potentially explosive atmospheres!



Note:

For operation with the pump module the electrical connection must be done in 3-wire connection.

Caution:


The Polytron 7000 must be disconnected from the supply voltage before the pump module is installed. Explosion hazard!

Preparing the docking station


- Remove any existing approval label/explosion-protection label from the docking station.
- 1 Release the measuring unit with an Allen key by turning the eccentric catches counter-clockwise ( ⇒  = approx. 180°).

Caution! Use only a 5 mm Allen key without a ball head.


- 2 Slide the measuring unit halfway upwards and then pull it forward out of the docking station.
- 3 Special gush holes are provided on the left and right-hand sides of the sensor recess. The glass tubes of the pump can be inserted in these holes. Punch or drill the holes all the way through the docking station from inside. Each hole should have a 6 mm channel. Then deburr the holes from the outside.
- 4 Check, from the bottom side of the docking station, that the holes go all the way through.
- Check that the docking station has no loose parts, and clean it if necessary.
- 3 Remove the O-rings from the glass tube and insert them into the grooves on the bottom of the docking station.

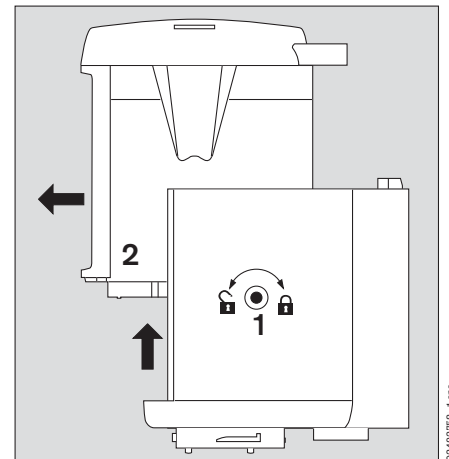

0342379B_1.epa

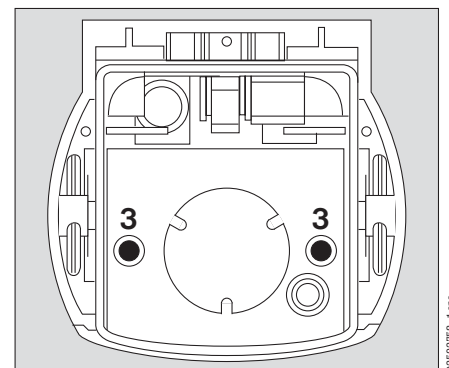


0352379B_1.epa

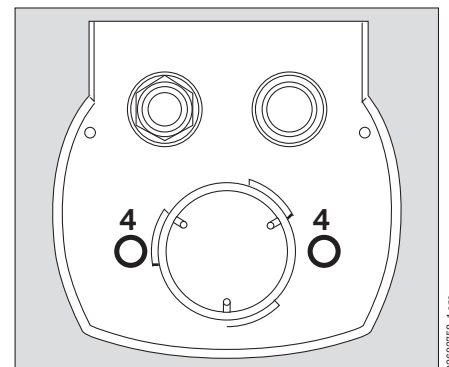

0362379B_1.epa


Installing the pump in the transmitter

- 1 Bend the snap-hooks on the cover of the measuring unit slightly outwards to release them.
- Remove the cover.

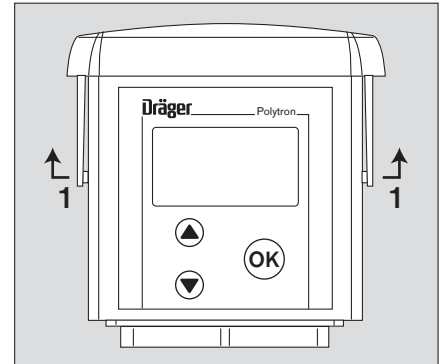

03823758_1.jpg


- 2 Plug the pump connecting cable to the terminal strip.

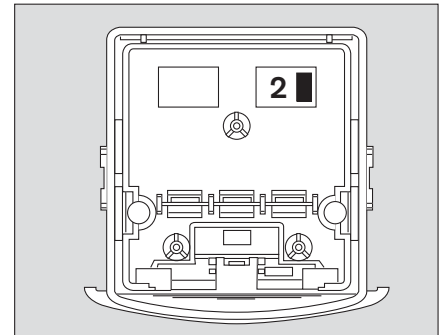

03823758_1.jpg


- 3 Slide the glass tube into the holes on the sides of the case and insert the pump module into its holder. Lay the hoses so that they lie inside the case.
- Place the cover on the measuring unit and press it down until it snaps into position.

4 **Attention:**
 Take care that pressure is applied only to the sleeve of measuring unit.
 Pressure on the inner structure can damage the unit.

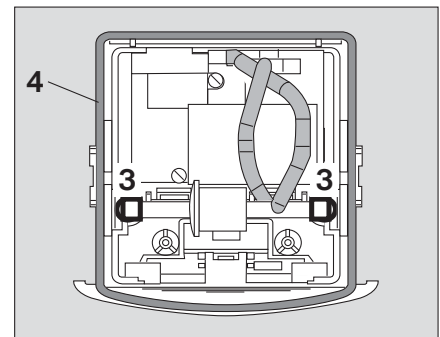

03823758_1.jpg

- Insert the measuring unit about halfway up the docking station and slide it in as far as it will go.
 - Lower the unit along the front edge of the docking station. About 5 mm before it hits the stop, the resistance will increase as the connector engages with the socket on the printed circuit board.
- 5 Slide the measuring unit with pump module into the docking station and lower it into position, see page 24.
 - 6 Turn the eccentric catches clockwise with an Allen key to lock the measuring unit (🔓 ⇒ 🔒 = approx. 180°).

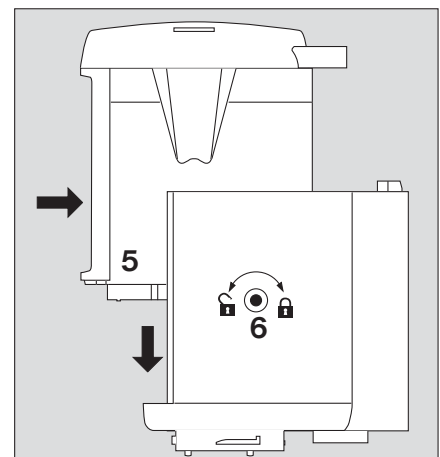

04023758_1.jpg

Installing the sensor and pump adapter

- Unscrew the bayonet ring from the transmitter and remove the blanking disc.
- Place the sensor in the opening with the Dräger logo facing the front, and push upwards gently until the connector engages.
 - 1 Place the fastening ring over the sensor opening.
 - 2 Secure the sensor with the bayonet ring.

The assembly direction of the pump adapter is determined by the gas flow direction between pump and sensor:

- Connectors for intake and exhaust air point to the left, the ⊕ symbol is visible from the front; the pump is positioned in front of the sensor in gas flow direction; the sensor is positioned on the positive pressure side of the pump. This is the preferred operating mode for all sensors.
- Connectors for intake and exhaust air point to the right, the ⊖ symbol is visible from the front; the pump is positioned behind the sensor in gas flow direction; the sensor is positioned on the negative pressure side of the pump. This operating mode should only be selected for special reasons.

Note:

This operating mode is not permissible for DrägerSensor O₂ LS (6809630) and DrägerSensor O₂ (6809720)!

- Insert the pump adapter sleeves into the holes on the underside of the docking station. The seal slides over the sensor.
 - 1 Turn the securing ring clockwise until the pump adapter is secure.

Notes on installation of the inlet line

The material selected for the inlet hose or inlet pipe and the length of the inlet line will affect the reaction time of the measured signal. In the worst cases, reactions with the selected material, or absorption in this material, will prevent a measurable gas concentration from reaching the sensor.


- Please contact your Dräger sales partner for choice on suitable selection of tubing/hose.
- Maximum permissible pressure difference between flow inlet and the environment of the transmitter: 50 mbar
- The pressure difference between the flow inlet and the environment of the transmitter can cause an additional measurement error.

Attention:

In order to check for leaks, we recommend that you measure the flow at the inlet point and behind the transmitter before using the pump module for the first time and every six months thereafter.

Attention:

Do not block the lower gas line of the pump adapter. This can damage the gas sensor.

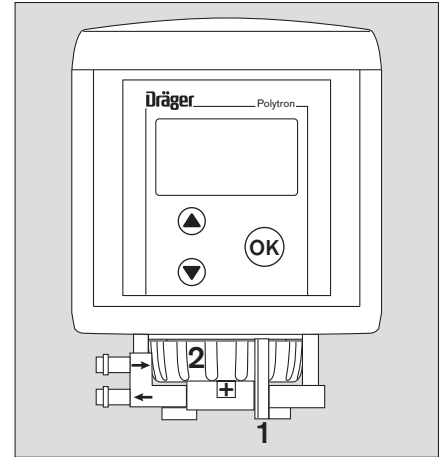

041123789_1.eps

Start-up

- Switch on power supply.
The transmitter begins its warm-up routine:

- The software version, the date and the time are displayed.

Note:
For the correct operation and functionality it is important to set the date and time.

- The sensor is now warming up. The remaining warming-up time for the sensor is displayed.




Note on the operation with relay module:
During the warm-up period, the relay module indicates a fault. Alarms A1 and A2 are not indicated during the warm-up period.

- The sensor is ready for use.

- Depending on the type of sensor installed, the warming-up period time may last between 5 minutes and 12 hours. See the related information in the operating instructions for the sensor. The warm-up phase may take longer in extremely high or low temperatures.

When the sensor has warmed up:

- Calibrate sensor, page 42, when a pre-calibrated sensor is not used.
- Transmitter is ready for use.
- Check the transmission of the signals between to the control unit and the initiation of alarms, see the function group » Analogue interface « on page 70.

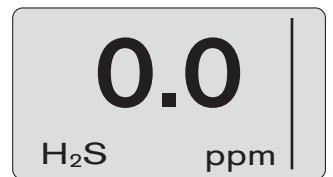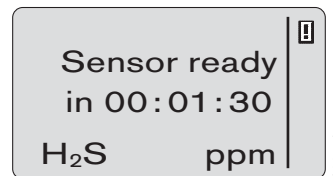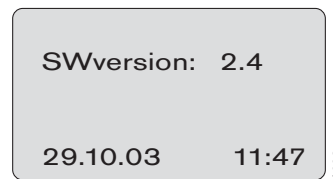

Analogue signal

- A current between 4 and 20 mA flows through the transmitter during normal operation. This current is proportional to the gas concentration.
- The Dräger Polytron 7000 transmitter uses various current values to indicate the operational status of the transmitter:


Current	Meaning
4 mA	Zero point
20 mA	Full-scale value
<3.2 mA	Transmitter fault
3.8 mA ... 4 mA	Sensor drift below zero point
20 mA ... 20.5 mA	Full-scale value exceeded
>23 mA	Fault in analogue output
static signal: 3.4 mA dynamic AC signal: 5 mA for 0.4 seconds and 3 mA for 0.7 seconds	Maintenance signal and signal during the warm-up period (configured on delivery: static)
Every 10 seconds ¹⁾ for 1 second ¹⁾ <3.2 mA ¹⁾	Warning signal (factory setting: off)

¹⁾ Factory setting. Can be configured as desired, page 70.

Caution:
Exceeding or falling below the transmitter supply voltage specified in the technical data can lead to an incorrect display of the analogue signal!


Display

- In measuring mode, the display shows the actual gas concentration, e.g.:

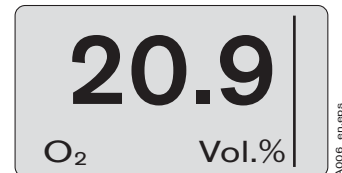


An alarm is triggered:


- when rising above - for O₂ also when falling below - the alarm levels for the concentration alarm,

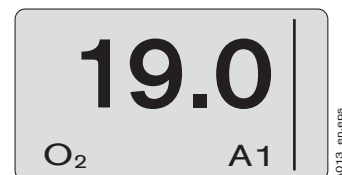



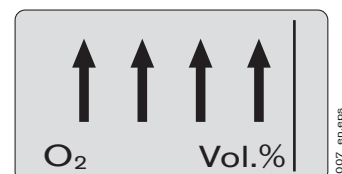



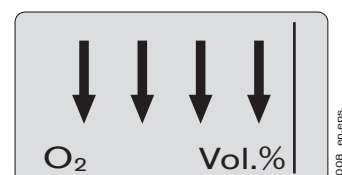






- When the full scale deflection is exceeded:
The special symbol » ↑↑↑↑ « is displayed instead of the measurement value.



- The measured value drops below the measuring range:
The special symbol » ↓↓↓↓ « is displayed instead of the measurement value.



The following icons may be displayed on the right side of the display in measuring mode in order to indicate the operating status of the unit:

-  A warning exists – see page 53 for information on how warnings are displayed. The information can be retrieved in info mode, see page 39.
-  A fault exists – see page 53 for information on how faults are displayed.
-  Maintenance signal to the control unit, see page 74
-  A pump is installed and flow monitoring is active
-  There is a pump flow fault, see page 61
-  The measured value exceeds the full-scale value of the analogue interface
-  The measured value is less than the zero-point of the analogue interface
-  The analogue interface is set to a fixed value (e.g. for multidrop) and is not transmitting measured values
-  "Predictive" maintenance: the sensor is ready for use
-  "Predictive" maintenance: the sensor is ready for use but nearing the end of its operating lifetime
-  "Predictive" maintenance: the sensor is still ready for use but should be replaced as soon as possible
-  The Datalogger is active in roll mode. For details on activating and deactivating the Datalogger, see page 78
-  The Datalogger is active in stack mode. For details of activating and deactivating the Datalogger, see page 80

Activating info mode

The info mode is used to display information on general unit settings and on the unit status.

- Press and hold the » ⏏ « key (longer than 3 seconds) – information about the units is displayed on several screens.
- Briefly press the » ⏏ « key to move to the next screen.
- Briefly press the » ⏏ « to move back to the previous screen.
- The info mode can be terminated at any time by pressing the » ⏏ « key.
- If no key is pressed for 30 seconds, the unit automatically returns to its previous state.

Example of info mode:

Screen 1

Instrument information
 Line 1 – Date and time
 Line 2 – Software version
 Line 3 – Unit Part No.
 Line 4 – Unit Serial No.
 Line 5 – Unit code

Screen 2

Sensor information:
 Line 1 – Sensor name
 Line 2 – Sensor Part No.
 Line 3 – Sensor Serial No.
 Line 4 – EEPROM type
 Line 5 – EEPROM version

Screen 3






Sensor configuration:
 Line 1 – Gas name
 Line 2 – Measuring range (can not be change) and unit of measurement
 Line 3 – Measuring range for the analogue interface.

Displayed only, if the analogue interface card is installed

Line 4 – A1 alarm threshold and unit of measurement¹⁾
 Line 5 – A2 alarm threshold and unit of measurement¹⁾

Screen 4²⁾

Pump Infos:
 Line 1 – Pump flow
 Line 2 – Threshold error
 Line 3 – Threshold warning
 Line 4 – Pump run time

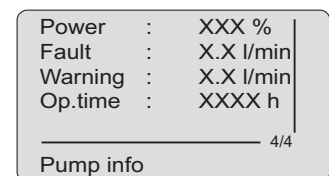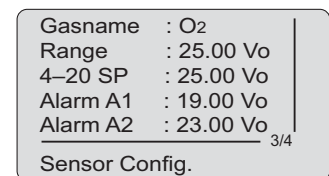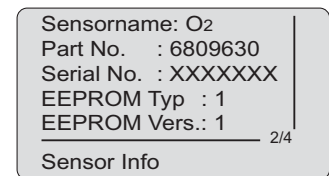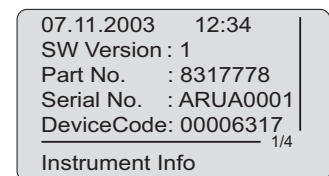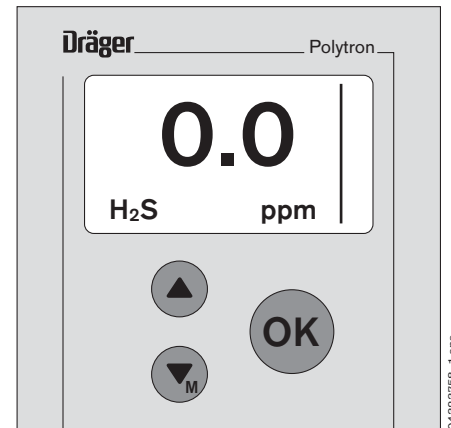

¹⁾ Displayed only if a relay module is fitted!

²⁾ Displayed only if a pump module is fitted!

If "xx.xx.xx xx:xx" is displayed instead of the date and time, or if an incorrect date and time are displayed:

(only after the cock has been reset due to a power failure)

- Set the date and time, see page 65.

Note!

If the date and time are not set correctly, some functions (such as calibration) cannot be executed!

Maintenance

Maintenance intervals

Before starting operation:

- Check the calibration, see page 42.
- Check the transmission of signals to the control unit and the triggering of alarms, page 73.

At regular intervals,

to be defined by the person responsible for the gas warning installation:

- Check the transmission of signals to the control unit and the triggering of alarms, page 73.

If a selective filter specific to the sensor is being used:

- Replace the selective filter –
See the related operating instructions for the sensor for details of the capacity of the selective filter being used.

At regular intervals defined in accordance with the sensor being used by the person responsible for the gas warning system:

- Calibrate the sensor, see page 42.
The interval for regular calibration depends on the sensor being used and on the operating conditions.
The transmitter calculates, from the selected calibration interval (see page 54), when the next calibration is due.
Specific calibration data for the sensor, see the operating instructions for the sensor.

Every six months:

- Inspection by specialists.
The inspection intervals must be established in each individual case and shortened if necessary, depending on technical safety considerations, engineering conditions and the technical requirements of the equipment.
We recommend that a service agreement be concluded with DrägerService and that repairs also be carried out by them.

When using the pump module:

- In order to check for leaks, measure the flow at the inlet point and behind the transmitter.

As required:

- Replace sensor, page 44.

Calibrating the unit

- Ensure that the sensor is warmed up before it is calibrated. See the sensor data sheet for the warming-up time.
- For some sensors (such as oxygen sensors) the function » zero-point calibration « is simply a test of the sensor function. The zero point is not actually calibrated since this is not necessary for these sensors.
- **For critical applications**, the calibration intervals should be defined in accordance with the recommendations in EN 50073¹⁾, EN45544-4²⁾ and national regulations.

Note the calibration sequence!

- First check the zero point and calibrate it if necessary, immediately after this, check the sensitivity and adjust it as necessary.
- Never calibrate the sensitivity before calibrating the zero point.
- Calibration cannot be carried out if the date and time are not set.
- Setting the date and the time, page 65.
- Calibration menu, page 56 to page 57
- Zero gas and test gas: see the information in the sensor data sheet and on the pages 105 to 108.


Caution:

Test gas must not be inhaled. Risk to health! Care must be taken about the risks which can arise when using test gas; hazard instructions and safety advice must be observed.

For details, see appropriate DIN Safety Data Sheets.

Calibrating with test gas

- Use a test-gas cylinder with pressure-reduction valve (a stainless-steel pressure reduction valve for aggressive gases). Observe the information in the sensor data sheet.
- 1 Mount a calibration adapter Part No. 68 06 978 (with two hose connectors) on the Polytron 7000.
- Vent the test gas leaving the adapter into a fume cupboard or into the open air (with a hose connected to the second connector on the calibration adapter).

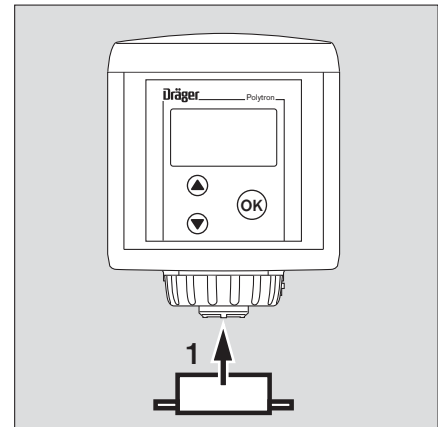

1) EN 50073 – Guidelines for selection, installation, use and maintenance of devices for the detection and measurement of flammable gases and oxygen.

2) EN 45544-4 – Electrical devices for the direct detection and direct concentration measurement of toxic gases and vapours – Part 4: Guidelines for selection, installation, use and maintenance.


Calibration with test-gas ampoules

- Use the calibration flask (Part No. 68 03 407) – Observe the information in the sensor data sheet.
- Follow the instructions printed on the calibration flask and enclosed with the test-gas ampoules.

For units without a pump:



1 Fit the adapter and calibration bottle to the Polytron 7000.

- Break the test-gas ampoule inside the calibration flask.
- Wait until the measured value has settled (see the operating instructions for the sensor for the necessary waiting period). Then carry out calibration.

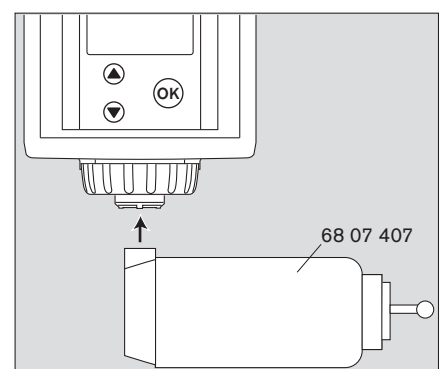**For units with a pump:**

– The pump adapter is already installed on the Polytron 7000.

- Insert the adapter (Part No. 68 04 620) in the calibration flask – connect the hoses.
- Break the test-gas ampoule inside the calibration flask and wait until the measured value has settled (see the operating instructions for the sensor for the necessary waiting period). Then carry out calibration.

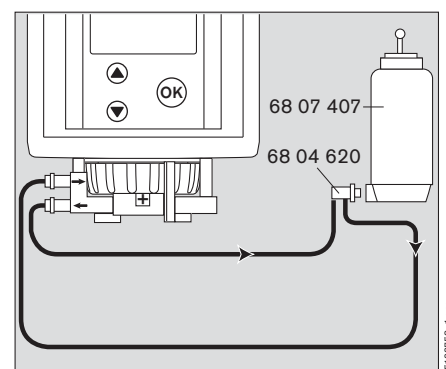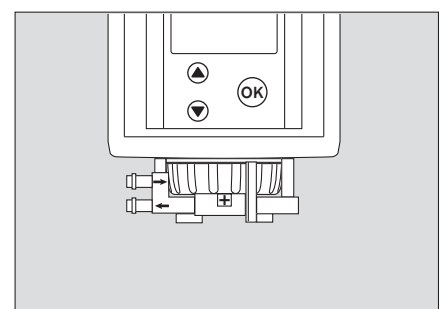

Setting up the unit

- Individual settings can be made:
 - via the keypad in menu mode
 - via the HART interface,
 - with the Dräger hand-held terminal (DHHT)

Note:

After setting up the unit automatically with the copy function of the Dräger Handheld Terminals, the plausibility of the settings must be checked.

Replacing the sensor

The sensor can be replaced, if necessary, without interrupting the power supply in the explosion-hazard area.

Caution:

- When installing the transmitter in Ex areas (zone 22 Class II, Div. 1 & 2, Groups E, F, G), do not open the housing (including sensor replacement) when connected to power (or the Ex area has to be declassified). Explosion hazard!

Use only DrägerSensors which are approved for use with the Dräger Polytron 7000 transmitter.


In the menu » Settings «, select the submenu » Sensor « and then the function » Change sensor « – page 75.

- 1 Remove bayonet ring from transmitter; pull out old sensor.
- Remove sensor from packaging. Make sure that it is approved for use with the transmitter.
- Remove the short-circuit strap from the sensor (if it is fitted).
- There is a coded connector on the back of the sensor. Place the sensor in the opening with the connector at the back and the Dräger logo at the front. Before plugging the connector in the socket, ensure that they are identically coded. Incorrect connection can damage the sensor!
- 1 Secure sensor in transmitter with bayonet ring.

Attention:

For use in Zone 22, tighten the locking screw (2 mm Allen screw) of the sensor bayonet ring tight enough to ensure that the bayonet ring is secured against unintended loosening.

- It is possible to mark the transmitter with the label enclosed in the packaging. It will then be easy to identify the type of gas for which the transmitter is intended if there is a mains failure.

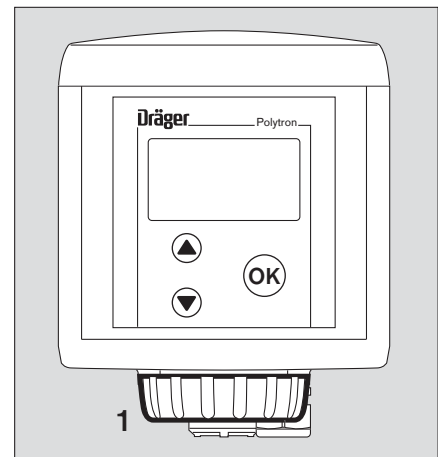

0423765_1.eps

- Check sensor function.
 - If an identical sensor (sensor with the same Part No.) was previously installed, the complete configuration of the transmitter remains unchanged. Otherwise, the transmitter is configured with the default values (see the operating instructions for the sensor).
- See also » Sensorlock «, page 76.

Disposal of electrochemical sensors:

- **Sensors must be disposed of as special waste.**

Caution:

- **Do not throw sensors into the fire – explosion hazard.**
- **Do not open sensors forcibly – risk of caustic burns.**


Note the relevant waste disposal regulations.


Further information can be obtained from the relevant local authority and from appropriate waste disposal companies.


Sensor-diagnosis function

This function is active only if the Polytron 7000 is equipped with a sensor diagnosis dongle (Part No. 83 17 860).

- Extended sensor self-test function, taking such things as the temperature, gas monitoring and remaining sensitivity into account.
- During normal operation, the sensor status is indicated by the sensor-diagnosis icon in the display:

 The sensor is ready

 The sensor is ready, but is approaching the end of its operating lifetime

 The sensor is still ready, but it should be replaced as soon as possible

Fault – Cause – Remedy

If the display will not function: Have the transmitter checked by DrägerService.
The fault and warning numbers shown in the following tables are displayed in the menu under » Information «, » Instrument «, » Fault « or » Warnings « – see page 53.

Fault number	Cause	Remedy
# 1	Serious data error in unit – various causes.	Initialise the unit with the menu items » Settings «, » Instrument «, » Init. device «, page 67. If this error occurs again: have the transmitter checked by DrägerService.
# 2	Serious unit fault – various causes.	Have the transmitter checked by DrägerService.
# 61	Data error on the interface card – various causes	Have the transmitter checked by DrägerService.
# 63	Hardware fault or software error in the pump module.	Change the pump module, page 33.
# 64	Pump gasflow falls below the configured warning threshold. Reliable measurements are no longer possible.	Check the hoses for blockages, If necessary adjust pump flow.
# 65	Open-circuit in 3-wire cable.	Check the connections.
# 67	Bad contact of the relay module.	Check connector of the relay module or fit it again.
# 100	Unit cannot detect a sensor.	Remove the sensor and install it again, page 44. If the problem persists, check the sensor plug or install a new sensor.
# 101	Sensor data error in the unit.	Remove the sensor and install it again, page 44. If this error occurs again: have the transmitter checked by DrägerService.
# 102	Unit does not support this sensor version.	Use a compatible sensor, see the ordering list on page 92.
# 103	Sensor data error in the unit.	Initialise the sensor with the menu items » Settings «, » Sensor «, » Sensor-EC «, » Init. sensor «, page 77. If this error occurs again: have the transmitter checked by DrägerService.
# 106	Zero-point not correctly.	Zero-point calibration, page 56.
# 107	Sensitivity calibration not executed correctly.	Repeat sensitivity calibration, page 57.
# 108	Sensor data error.	Replace the sensor, page 44.
# 109	Unit fault.	Check the sensor contacts; otherwise have the transmitter checked by DrägerService.
# 121	Fresh-air calibration (first step of autocalibration) not executed correctly.	Repeat autocalibration, page 58. Make sure that the ambient air is free of other gases.
# 125	Sensor not ready.	Replace the sensor, page 44.
# 129	Electrolyte liquid evaporates	Refill electrolyte. See sensor data sheet.




Fault number	Cause	Remedy
# 130	The function » Sensor lock « is active. A sensor with a different Part No. has been inserted.	Deactivate the function » Sensor lock «, page 76 or use a sensor with the same Part No. as the one which was removed.
# 134	Bad contact between the sensor and the sensor card.	Check the sensor contacts. Remove and reinstall the sensor several times. If the problem persists, install a new sensor, page 44.
# 136	Sensor hardware fault.	Remove the sensor and install it again. If the problem persists, install a new sensor, page 44.


Warning number	Cause	Remedy
# 1	Data error in the unit. Certain functions such as the Datalogger or the dongle functions may not be available.	Initialise the unit with the menu items » Settings «, » Instrument «, » Init. device «, page 67. If this error occurs again: have the transmitter checked by DrägerService.
# 51	Datalogger is in stack mode and is 100 % full. No more data can be recorded.	Read out the data. Then clear and restart the Datalogger
# 52	Datalogger is in stack mode and is 90 % full.	Read out the data as soon as possible. Then clear and restart the Datalogger.
# 53	No valid date and/or time is set.	Set the date and time, page 65.
# 58	Software dongle was removed without logging off.	Deactivate the function in the menu » Settings «, » Instrument «, » SW dongle «, » XXX dongle «, page 68.
	Hardware fault in the software dongle.	Change the software dongle, page 29.
# 59	Pump worn.	Change the pump module, page 33.
# 64	Pump gasflow falls below the configured warning threshold. Reliable measurements are no longer possible.	Check the hoses for blockages, If necessary adjust pump flow.
# 106	Increased zero-point offset.	Zero-point calibration, page 56.
# 111	Sensor is not working in the specified temperature range.	Operate sensor in the specified temperature range (see Instructions for Use of the sensor).
# 112	Sensor near end of life.	Replace the sensor, page 44.
# 114	Calibration interval expired.	Recalibrate the unit, page 42.
# 115	Sensor was operate for too long with a high concentration.	Reduce overgassing.
# 119	Sensor is not yet fully warmed up. An increased measuring error must be expected.	Wait until the sensor has fully warmed up.
# 120	The sensor has been exposed to an excessively high gas concentration for a long period.	Reduce the exposure to high gas concentrations. If this does not help, replace the sensor, page 44.
# 131	Bad sensor, no longer operating.	Replace the sensor, page 44.
# 132	Electrolyte liquid evaporates. Measurements will soon no longer possible.	Refill electrolyte. See sensor data sheet.
# 135	Information such as the Part No. and the Serial No. is not available.	Disconnect the unit from the mains and restart it. If this error occurs again: have the transmitter checked by DrägerService.

Menu functions


The menu can be operated, as desired:

- from the keypad (with integrated display) of the transmitter,
- from a HART-compatible Hand Held Terminal (HHT),
- from a HART-compatible control unit or
- from a Polytron 7000 Palm Pilot 515 (non-Ex version) or Palm Pilot 515x Ex version.


If the keypad is used, the menus can be operated with the three keys »  «, »  « and »  « as well as via display.

Key »  «

- Use this key to move upwards through the menus.

Key »  «

- Use this key to move downwards through the menus.
- If the key is held down for more than 3 seconds, the main menu is opened.
- If the key is held down for longer than 1 second and less than 3 seconds, the quick menu is opened (the Info menu is displayed without prompting for a password).

Key »  «

- This key is used to confirm inputs and selected menus and functions

Menu structure

Overview: page 49.

The unit has two operating modes: measuring mode and menu mode.

Menu mode contains the menus » Information «, » Calibration « and » Settings «.

Menu » Information «

The menu » Information « can be opened by any user. However, the user is unable to make any changes with this menu option.

Menu » Calibration «

This menu permits routine operations needed for the regular maintenance of the transmitters.

It should be accessible to persons who are responsible for such maintenance. If the maintenance password is entered, only this menu is accessible.

Menu » Settings «

This menu permits the setting of individual transmitter and sensor parameters. It should be accessible to authorised persons from the measuring and regulation department or the work safety department. If the password for this menu is entered, the menu » Calibration « is also accessible.


The passwords for the menus » Calibration « and » Settings « can be changed at any time, page 65.

Default password settings when the unit leaves the factory:

Password for the menu » Calibration «: _ _ _ 1

Password for the menu » Settings «: _ _ _ 2

Overview of the menu structure

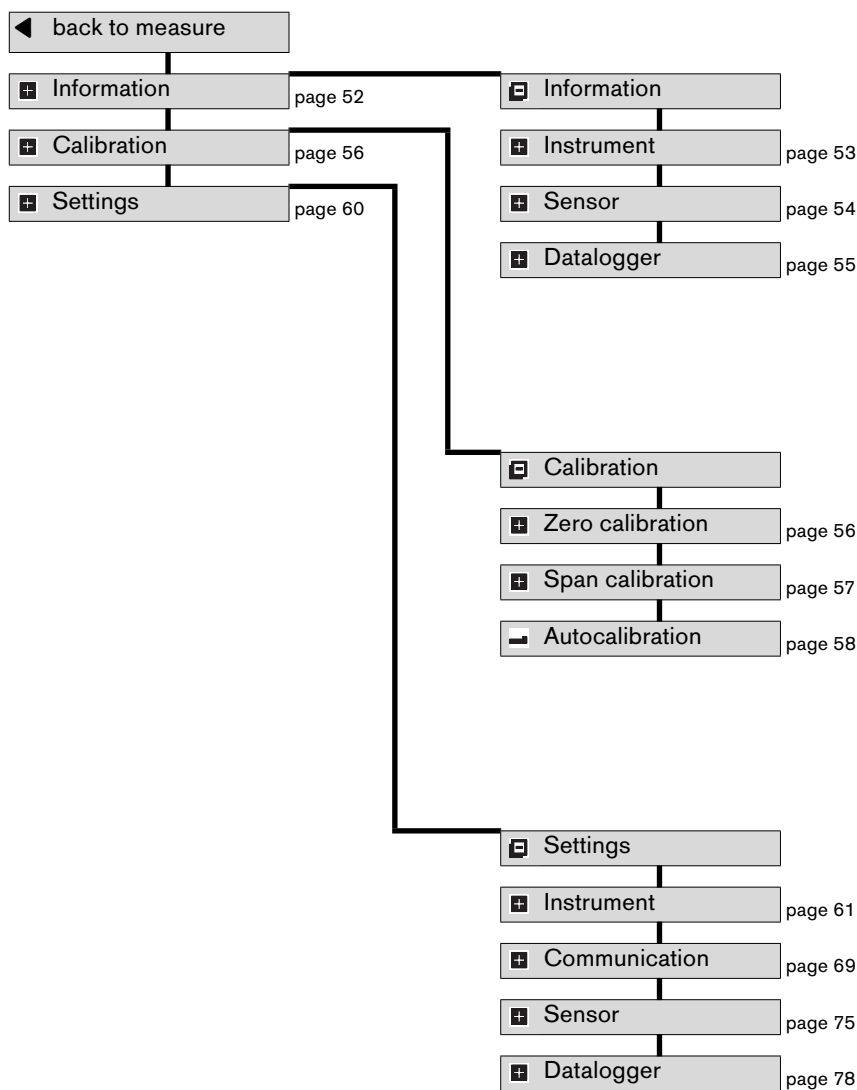



Information about the sub-menus and function:

- See the specified page.


Basic operating procedures

Switching to quick-menu mode

- Press the »  « for longer than 1 second but less than 3 seconds to open the quick menu. Information on the status and the settings of the transmitter can be queried here, see page 52.






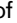






Switching to menu mode

- Press the »  « for longer than 3 seconds. You will then be prompted for the password.

Entering the password





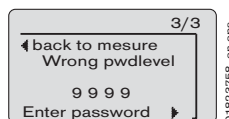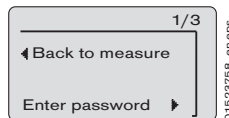






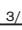
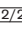
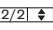


In measuring mode:

- Press the »  « for longer than 3 seconds. You will then be prompted for the password.
- Use the »  « key to move to the line » Enter password « and press the »  « key. The password entry screen appears.
- Use the »  « and »  « keys to set each of the four positions of the password and press the »  « key to confirm each position.
- After you have confirmed the last position, the menu corresponding to the entered password is opened. If the entered password is invalid, a suitable error message is displayed.



Navigation in the menu


Graphical symbols (icons) simplify the navigation through the various menus:

-  Together with the text » Back «, » Menu «, etc. »
 - Exit from the menu or return to previous menu.
-  Closed folder
 - This item contains further functions or sub-menus.
-  Open folder
 - The functions and sub-menus shown here are contained in this item.
-  Function
 - If activated, functions can be executed in a single step or several steps.
-  Selection activated
 - Press the »  « key for functions which can be selected and activated.
-  List closed / complete to the top
 - There are no further functions, menus or sub-menus above those currently displayed.
-  List can be scrolled up
 - There are further functions, menus or sub-menus above those currently displayed.
-  List closed / complete to the bottom
 - There are no further functions, menus or sub-menus below those currently displayed.
-  List can be scrolled down
 - There are further functions, menus or sub-menus below those currently displayed.
-  Next
 - Execute the related action.
-  3/3
 - Number of current screen / total number of screens within the function.
-  
 - Data input with the »  « and »  « keys.

The menu » Information «

The menu » Information « contains all information about the unit status, the sensors and the Datalogger.

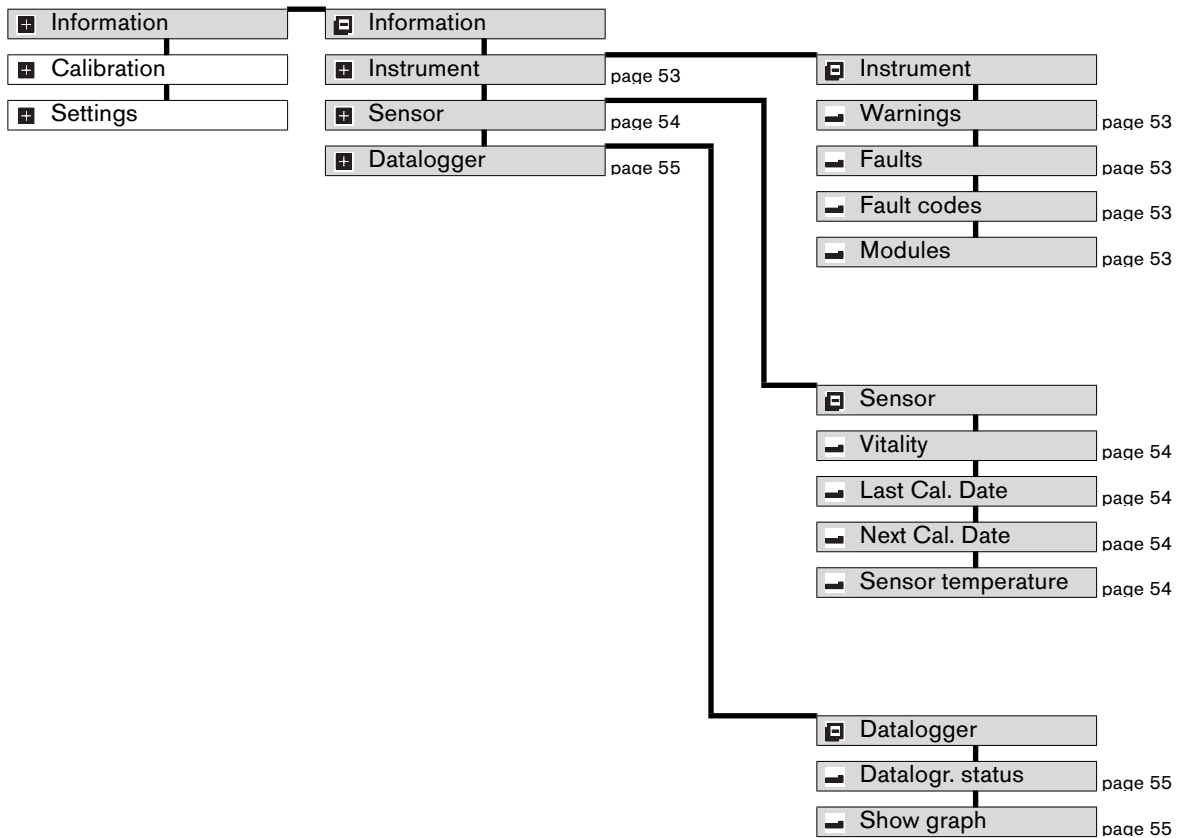

Overview





Submenu » Instrument «

The submenu » Instrument Info « contains all functions for interrogating the unit status.



Warnings

- This function displays any existing warnings in clear text with the warning number, see page 47.
The icon »  « is displayed if any warnings are active.
- Select the menu items » Information «, » Instrument « and » Warnings « in this order, pressing the »  « key after each selection.
- Any existing warnings are displayed in clear text.
If more than one warning exists, the number of the currently displayed warning and the total number of warnings are displayed in the top right corner (example: 1/3 = screen 1 of 3).


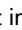

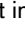


Faults

- This function displays any existing faults in clear text with the error number, see page 46.
If a fault code exists, the icon »  « is displayed.
- Select the menu items » Information «, » Instrument « and » Faults « in this order, pressing the »  « key after each selection.
- Any existing faults are displayed in clear text.
If more than one fault exists, the number of the currently displayed fault and the total number of faults are displayed in the top right corner (example: 1/2 = screen 1 of 2).

Fault codes

- This function displays any existing faults / warning codes in the form of a table.
If a fault code exists, the icon »  « is displayed.
- Select the menu items » Information «, » Instrument « and » Fault codes « in this order, pressing the »  « key after each selection.
- Any existing faults are displayed in the form of numerical codes in a table. If all numerical groups are displayed with the value » 00 «, no faults exist.

Modules


- All installed hardware modules are displayed.
- Select the menu items » Information «, » Instrument « and » Modules « in this order, pressing the »  « key after each selection.
- A list of all possible modules is displayed. The installed modules are indicated by a »  «. Modules which are not installed are marked with a »  «.
- Use the »  « and »  « keys to select individual modules and press the »  « key to display more detailed information.

Submenu » Sensor «


The submenu » Sensor « contains the functions for interrogating the sensor status.

Sensor vitality


This function is active only if the Polytron 7000 transmitter is equipped with the sensor diagnostic dongle, see page 29.

- This function displays the remaining sensitivity of the sensor.
- Select the menu items » Information «, » Sensor « and » Vitality « in this order, pressing the »  « key after each selection.
- The current Sensor Vitality is displayed.
- Dräger Safety recommends that the sensor is exchange when the Sensor Vitality value is less than 25.


Last calibration date

- This function displays the date of the last calibration.
- Select the menu items » Information «, » Sensor « and » Last cal. date « in this order, pressing the »  « key after each selection.
- The date of the last calibration is displayed.

Next calibration date

- This function displays the date on which calibration is next due.
- Select the menu items » Information «, » Sensor « and » Next cal. date « in this order, pressing the »  « key after each selection.
- The date on which the sensor is next due for calibration is displayed.

Sensor temperature


- This function displays the current sensor temperature and the maximum sensor temperature which has been recorded.
- Select the menu items » Information «, » Sensor « and » Show sensortemp. « in this order, pressing the »  « key after each selection.
- The current sensor temperature and the maximum sensor temperature which has been recorded are displayed.

Submenu » Datalogger «

The submenu » Datalogger « contains the functions for interrogating the Datalogger.


Datalogger status

This function is active only if the Polytron 7000 transmitter is equipped with the data dongle 83 17 618, see page 29.

- This function displays the status of the Datalogger and the Eventlogger.
- Select the menu items » Information «, » Datalogger « and » Datalogr status « in this order, pressing the »  « key after each selection.
- The current status of the Datalogger and the Eventlogger is displayed:
 - Datalogr. : on or off (the Datalogger is on or off)
 - Evtlogr. : on or off (the Eventlogger is on or off)
- Activating / deactivating the Datalogger: see page 78.
- Activating / deactivating the Eventlogger: see page 78.

Show graph

This function is active only if the Polytron 7000 transmitter is equipped with the data dongle 83 17 618, see page 29.


- The measured values of the sensor are displayed graphically on a time axis of 15 minutes.
- Select the menu items » Information «, » Datalogger « and » Show graph « in this order, pressing the »  « key after each selection.

The menu » Calibration «

The menu » Calibration « contains all functions needed for the calibration and adjustment of the installed sensor.

Notes on handling the calibration gas and calibration accessories can be found in the section "Maintenance" on page 42.

Overview

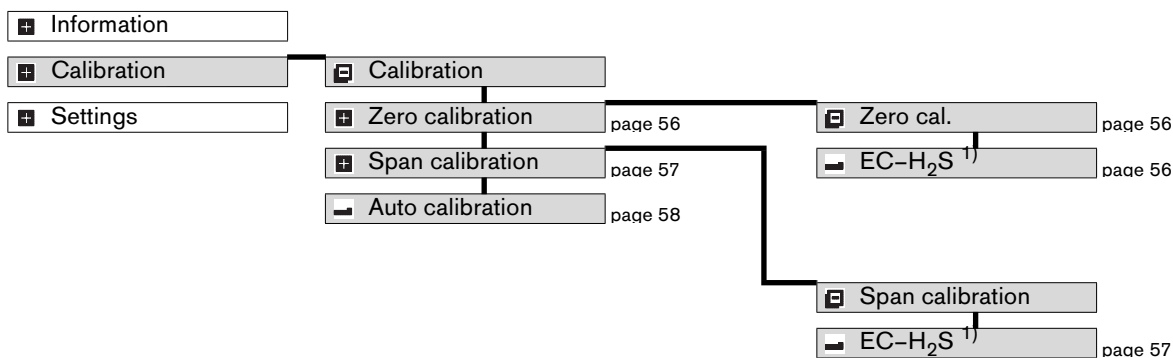

1) The sensor shown in the overview serves only as an example and may differ from the sensor actually installed in the unit.


Submenu » Zero calibration «

The submenu » Zero calibration « contains the functions for calibrating / adjusting the zero point of the installed sensor.



Zero-point calibration / adjustment

Calibration procedure (using an EC-H₂S sensor as an example):

- Select the menu items » Calibration «, » Zero calibration « and » EC-H₂S « in this order, pressing the » OK « key after each selection.
 - The maintenance signal is transmitted on the analogue interface.
 - The message » Supply zero gas with flow rate 500 mL/min" is displayed
- Connect zero gas to the sensor (for some sensors, N₂ must be used – see information in the section "Maintenance" on page 42).
- Select » Next « and press the » OK « key.
 - The current value and the expired time are now displayed.
When the displayed value has stabilised:
 - Select » Accept value « and press the » OK « key.
 - The message » Zero calibration running « is displayed
 - The required value and the actual value are now displayed.
If these are correct as displayed:

- Select » Back to menu « and press the »  « key.
- Disconnect the flow of zero gas.

Zero-point calibration can be aborted at any time:


- Use the »  « key to move to » Back « and press the »  « key.









Submenu » Span cal. «

The submenu » Span cal. « Contains all functions for calibrating the sensitivity of the installed sensor.


Sensitivity calibration

Calibration procedure (using an EC-H₂S sensor as an example):


- Select the menu items » Calibration «, » Span calibration « and » EC-H₂S « in this order, pressing the »  « key after each selection.
- The maintenance signal is transmitted on the analogue interface.
- The values for the calibration gas are displayed, for example:

Cal. gas	: H ₂ S
Unit	: ppm
Concentr.	: 000025
- The calibration gas, concentration and unit can be changed:
 - Select » Cal. gas « and press the »  « key. Select the desired calibration gas from the list and press the »  « key again.
 - Select » Concentr. « and press the »  « key. Set the calibration gas concentration (same procedure as for input of a password).
 - Select » Unit « and press the »  « key: Select the desired unit from the list and press the »  « key again.
- If the settings agree with the available calibration gas:
 - Select » Next « and press the »  « key.
 - The message » Supply gas: H₂S with flow rate 500 ml/min « is displayed.
 - Connect calibration gas (see the information in the section "Maintenance" on page 42) to the sensor.
 - Select » Next « and press the »  « key.
 - The current value and the expired time are now displayed.
When the displayed value has stabilised:
 - Select » Accept value « and press the »  « key.
 - In the display the maximum value and the current value as well as the remainder of the sensor vitality are represented as a bar indication.



If these are correct as displayed:

- Select » Next « and press the »  « key.
- Disconnect the flow of calibration gas.

Attention: An alarm could be triggered in the central unit for as long as the calibration gas concentration is pending!

- The calibration interval and the date of the next calibration are displayed.
- Select » Back to menu « and press the »  « key.

Sensitivity calibration can be aborted at any time:


- Use the »  « key to move to » Back « and press the »  « key.

Autocalibration

Autocalibration consists of fresh-air calibration followed by sensitivity calibration. This function is intended only for users who are familiar with the unit, since the sequence of actions may result in calibration errors.

The function can be activated or deactivated with the menu sequence » Settings «, » Sensor «, » Autocal. «.

Calibration procedure (using an EC-H₂S sensor as an example):

- Select the menu items "Calibration" and "Autocal." in this order, pressing the »  « key after each selection.

Attention: The sensor must be supplied with fresh air, otherwise calibration errors may occur!


- The maintenance signal is transmitted on the analogue interface.
- The message » Fresh-air calibration running « is displayed.
- Expose the sensor to the ambient air (for some sensors, a zero gas such as N₂ must be used – see the information in the section "Maintenance" on page 42).
Then:
 - The values for the calibration gas are then displayed, for example:
Cal. gas : H₂S
Unit : ppm
Concentr. : 000025

- The current value and the calibration gas concentration are now displayed.

The calibration operation depends on whether the selected calibration gas supports so-called autostability.

– Autostability is supported:

When the displayed value has stabilised:

- Select » Accept value « and press the »  « key.

– Autostability is not supported:


The instrument evaluates the stability of the signal and automatically executes the calibration procedure.

– The required value and the actual value are now displayed.

- Disconnect the flow of calibration gas.

Attention: An alarm could be triggered in the central unit for as long as the calibration gas concentration is pending!


If these are correct as displayed:

- Select » Accept value « and press the »  « key.

The menu » Settings «

The menu » Settings « contains all functions needed for individual configuration of the unit.

Overview

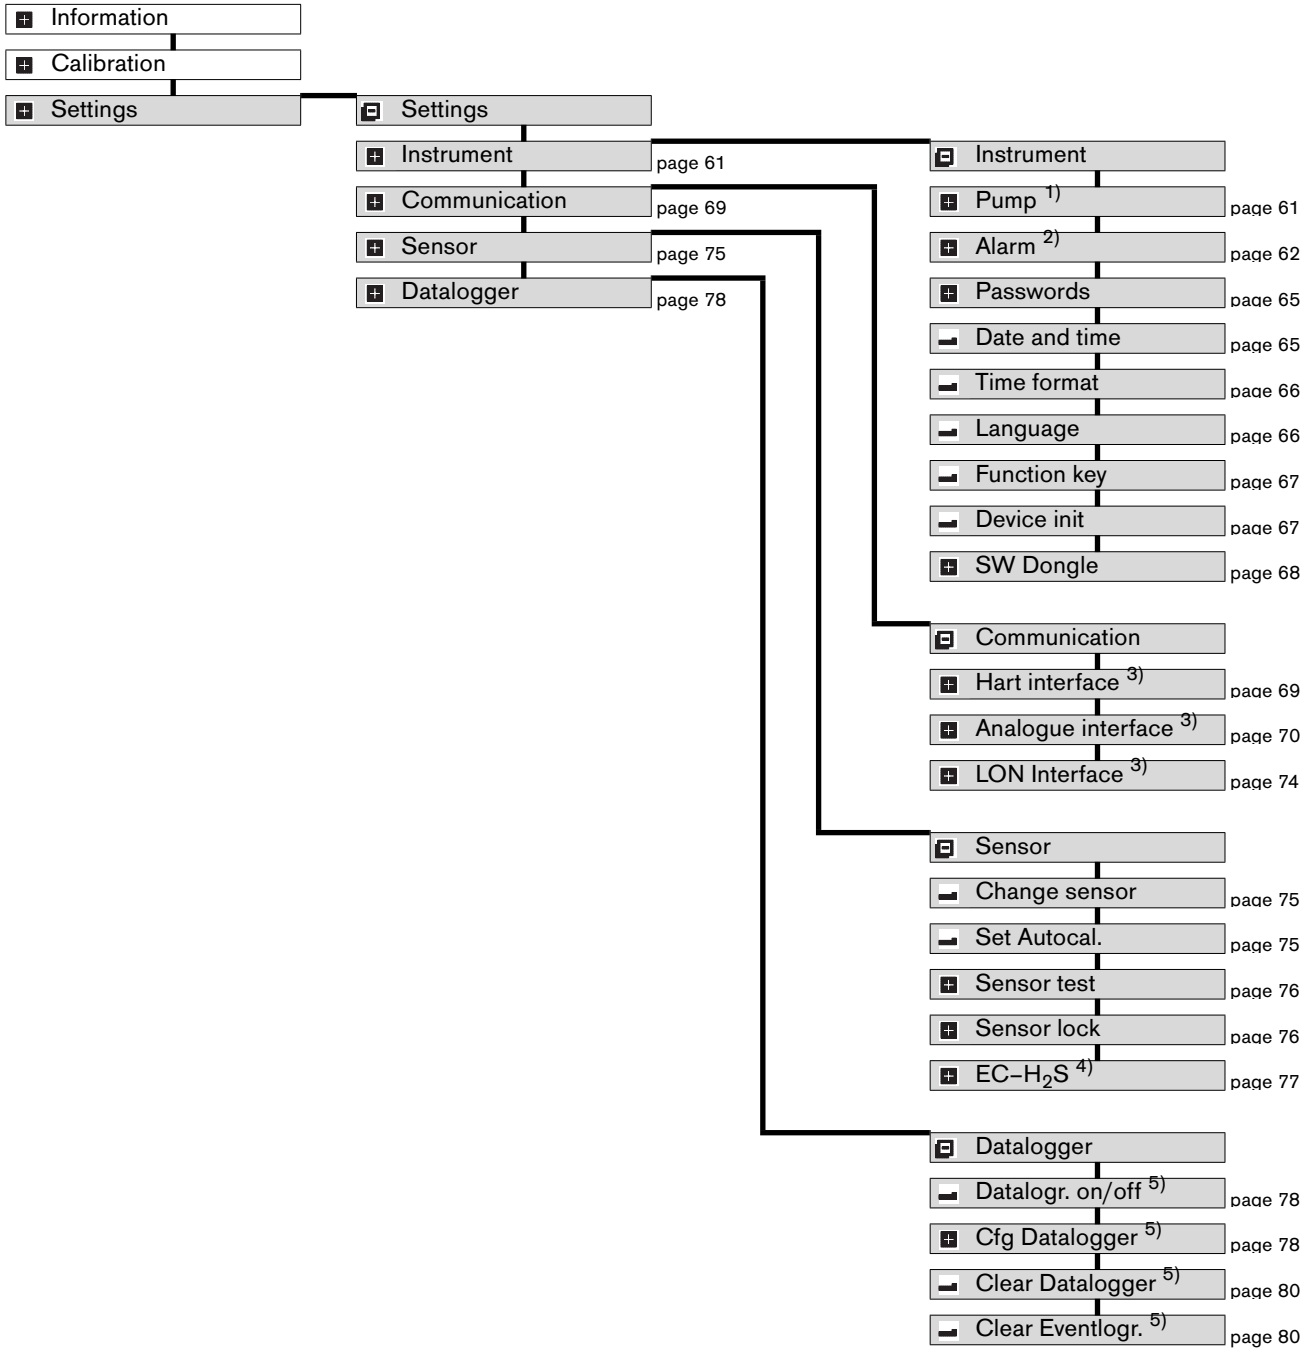

- 1) This menu function can be executed only if the Polytron 7000 transmitter is equipped with a pump module, see page 33.
- 2) This menu function can be executed only if the Polytron 7000 transmitter is equipped with a relay module, see page 31.
- 3) This menu function can be executed only if the Polytron 7000 transmitter is equipped with the appropriate interface card.
- 4) The sensor shown in the overview serves only as an example and may differ from the sensor actually installed in the unit.
- 5) This menu function can be executed only if the Polytron 7000 transmitter is equipped with the data dongle 83 17 618, see page 29.



Submenu » Instrument «

The submenu » Instrument « can be used to make various instrument settings.

Pump

This group contains the setting functions for the pump.

– Flow fault on/off




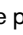
- This function is used to activate and deactivate the generation of a fault if the pump output is too low (flow fault).
- Select the menu items » Settings «, » Instrument « and » Flow fault on/off « in this order, pressing the »  « key after each selection.
- Select » Enable « or » Disable « and press the »  « key to activate.
- If » Enable « is selected, a flow alarm is generated if the pump flow is insufficient. The mass flow controller is factory-preset to 'ON'. We recommend changing this setting only in exceptional cases.

Attention:

The mass flow controller of the pump must be switched on during safety-relevant measurements!


- If » Disable « is selected, no flow alarm is generated if the pump output is too low.

– Pump output



- This function is used to set the pump output.
- Select the menu items » Settings «, » Instrument «, » Pump « and » Pump output « in this order, pressing the »  « key after each selection.
- The maintenance signal is transmitted on the analogue interface, and the display reads: » Flow alarm will be de-energised. Please use a flow meter «.
- Connect a pump adapter and a flowmeter.
- Select » Next « and press the »  « key.
- Use the »  « and »  « keys to set the pump output. Monitor the change on the flowmeter.


Note:

Choose the response time as low as possible and the pump output as high as possible.





- Select » Next « and press the »  « key.
- The flow thresholds are displayed –
Flow threshold for fault: 0.3 L/min (example)
Flow threshold for warning: 0.4 L/min (example)

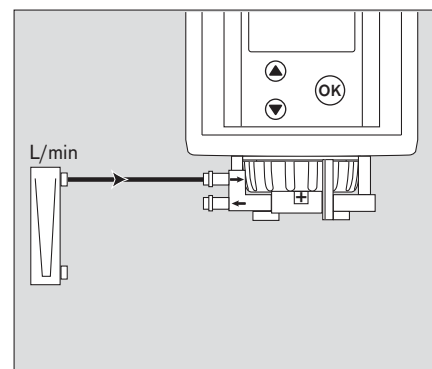If necessary, these flow thresholds can be changed:


- Use the »  « key to select the desired threshold and press the »  « key.



0392976B_1temp

- Use the »  « and »  « keys to set the value in l/min and press the »  « key to confirm the setting.
- Select » Next « and press the »  « key.
- The function is terminated.

– Operating time

- This function is used to display the operating time of the pump.
- Select the menu items » Settings «, » Instrument «, » Pump « and » Operating time « in this order, pressing the »  « key after each selection.
- The actual operating time of the pump is displayed in hours.



Alarm / Relay settings

Alarms can be output via a relay and a digital interface if a relay module is installed. This group contains the setting functions for the alarms.

Attention:

In the normal state, the relays of the relay module are energised. Therefore, the state of the relay changes if the power supply is interrupted!

– Alarm on/off








- This function is used to enable and disable alarm monitoring.
- Select the menu items » Settings «, » Instrument «, » Alarm « and » Alarm on/off « in this order, pressing the »  « key after each selection.
- Select » Enable « or » Disable « and press the »  « key to activate.




Attention:

If the alarm is disabled, no alarms will be signalled via the relay or the HART interface!

A warning »  « appears on the display!

– Set alarm A1

- This function is used to change the alarm configuration for alarm A1.
- Select the menu items » Settings «, » Instrument «, » Alarm « and « alarm A1 « in this order, pressing the »  « key after each selection.
- Use the »  « and »  « keys to set each position of the threshold value for the alarm A1 and press the »  « key to confirm the setting.
- Press the »  « key to confirm the complete alarm threshold value. The setting for the alarm threshold A1 is displayed.
- The function for setting the alarm direction is opened.
- Select » Rising « or » Falling « and press the »  « key to activate your selection.
- Select » Next « and press the »  « key.


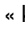
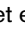



- The function for setting the self-hold function of the A1 alarm is opened.
- Select » Latching « or » Non latching « and press the »  « key to activate.
- Select » Next « and press the »  « key.
- Note: » Latching « means that the relay must be manually acknowledged after the alarm condition is no longer fulfilled, » Non latching « means that the relay is automatically acknowledged after the alarm condition is no longer fulfilled.
- The function for setting the A1 acknowledgement is opened.
- Select » Can be acknowledged « or » Cannot be acknowledged « and press the »  « key to activate.
- Note: » Can be acknowledged « means that the relay can be reset when the alarm condition is fulfilled. » Cannot be acknowledged « means that the relay can only be reset after the alarm condition is no longer fulfilled.

Attention:


If an alarm has been configured as » Can be acknowledged «, it can also be reset when the alarm condition is fulfilled. In the case of safety-relevant switching operations, the alarm must be configured as » Cannot be acknowledged «.

Overview of alarm settings




Alarm configuration		Alarm condition fulfilled		Alarm condition not fulfilled	
		Acknowledgement button actuated	Acknowledgement button not actuated	Acknowledgement button actuated	Acknowledgement button not actuated
Latching	Can be acknowledged	Relay de-energised	Relay energised	Relay de-energised	Relay energised
	Cannot be acknowledged	Relay energised	Relay energised	Relay de-energised	Relay energised
Non latching	Can be acknowledged	Relay de-energised	Relay energised	Relay is automatically de-energised after the alarm condition is no longer fulfilled	
	Cannot be acknowledged	Relay energised	Relay energised	Relay is automatically de-energised after the alarm condition is no longer fulfilled	Relay is automatically de-energised after the alarm condition is no longer fulfilled

- The function for setting the A1 hysteresis is opened.
- This function allows the user to set a bandwidth in which a tripped relay stays in its status until the gas concentration is outside this bandwidth. With this function relays will not "chatter" at the alarm set point. E.g. A1 set point is 40 ppm, hysteresis is set to 3 ppm. Alarm A1 will come on at 40 ppm and will stay active until the concentration falls below 37 ppm.
- Select the line for input of the hysteresis and press the »  « key to switch to edit mode.
- Use the »  « and »  « keys to set each digit of the value and press the »  « key to confirm the setting.
- Select » Next « and press the »  « key.
- The settings of the A1 are indicated.
- To confirm select » Confirm « and press the »  « key.
- The settings for alarm A1 are now complete.

– **Set alarm A2**

- This function is used to change the alarm configuration for alarm A2.
- Select the menu items "Settings «, "Instrument «, "Alarm « and "alarm A2 « in this order, pressing the »  « key after each selection
- The settings are made in the same manner as for alarm A1.

– **Set ack.**

- This function is used to enable or disable the acknowledgement of the alarms with the »  « key.
- Select the menu items » Settings «, » Instrument «, » Alarm « and » Set ack. « in this order, pressing the »  « key after each selection.
- Select » Enable « or » Disable « and press the »  « key to activate.



Attention:

If the functions » Disable acknowledgement « and » Alarm setting latching « are combined, an alarm can only be acknowledged by interrupting the power supply of the Polytron 7000 transmitter!



Attention:

If an alarm has been configured as » Can be acknowledged «, it can also be reset when the alarm condition is fulfilled. In the case of safety-relevant switching operations, the alarm must be configured as » Cannot be acknowledged «.



– **Test alarm A1**

- This function simulates the A1 alarm state for testing purposes.
- Select the menu items » Settings «, » Instrument «, » Alarm « and » Test alarm A1 « in this order, pressing the »  « key after each selection.
- The function » Test A1 status « is opened.
- Select » Enable « or » Disable « and press the »  « key to activate.
- When the function is enabled, the relay and the interfaces are set to the A1 alarm state.

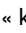– **Test alarm A2**

- This function simulates the A2 alarm state for testing purposes.
- Select the menu items » Settings «, » Instrument «, » Alarm « and » Test alarm A2 « in this order, pressing the »  « key after each selection.
- The function » Test A2 status « is opened.
- Select » Enable « or » Disable « and press the »  « key to activate.
- When the function is enabled, the relay and the interfaces are set to the A2 alarm state.



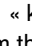
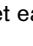
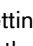

– Test fault

- This function simulates the fault alarm state for testing purposes.
- Select the menu items » Settings «, » Instrument «, » Alarm « and » Test fault alarm « in this order, pressing the »  « key after each selection.
- The function » Test fault status « is opened.
- Select » Enable « or » Disable « and press the »  « key to activate.
- When the function is enabled, the relay and the interfaces are set to the fault alarm state.







Passwords

This group contains the setting functions for the passwords.

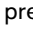




– Password Calibration

- This function is used to change the password for the menu » Calibration «.
- Select the menu items » Settings «, » Instrument «, » Passwords « and » Password Cal. « in this order, pressing the »  « key after each selection.
- Select the line for password input and press the »  « key to switch to edit mode.
- Use the »  « and »  « keys to set each position of the password and press the »  « key to confirm the setting.
- Press the »  « key to confirm the complete password.

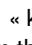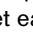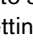




– Password Settings

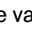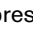- This function is used to change the password for the menu » Settings «.
- Select the menu items » Settings «, » Instrument «, » Passwords « and » Password Cfg. « in this order, pressing the »  « key after each selection.
- Select the line for password input and press the »  « key to switch to edit mode.
- Use the »  « and »  « keys to set each position of the password and press the »  « key to confirm the setting.
- Press the »  « key to confirm the complete password.



Date and time

- This function is used to set the date and / or time.
- Select the menu items « Settings «, « Instrument « and « Date and time « in this order, pressing the »  « key after each selection.
- Select the desired input line (Date or Time) and press the »  « key to switch to edit mode.
- Use the »  « and »  « keys to set the value and press the »  « key to confirm the setting.





Time format

- This function is used to set the display format for the date and/or time.
- Select the menu items « Settings », « Instrument » and « Time format » in this order, pressing the »  « key after each selection.
- Select the desired input line (Date format or Time format) and press the »  « key to switch to edit mode.
- Use the »  « and »  « keys to select the desired format (European or US) and press the »  « key to confirm the setting.

Language

- This function is used to set the language for the menus.
- Select the menu items « Settings », « Instrument » and « Language » in this order, pressing the »  « key after each selection.
- Select the desired language from the list and press the »  « key to activate.

Function key

- This function is used to set the function which is to be activated when the function key (the »  « key) is pressed briefly.
Default setting: Fault report.
- Select the menu items » Settings «, » Instrument « and » Function key « in this order, pressing the »  « key after each selection.
- Select the desired function and press the »  « key to activate. An icon corresponding to the selected function appear on the right side of the display. Possible selections:
 - Show graph – the measured values are displayed on a time axis, see page 55
 - Fault report – existing faults are displayed in clear text, see page 53
 - Notice report – existing warnings are displayed in clear text, see page 53
 - Fault codes – existing fault codes are displayed in a numerical table, see page 53
- In measuring mode, briefly pressing the »  « key will now activate the selected function.

Initialise device



This function resets all parameters of the transmitter to the factory default settings.

This affects the following parameters:

- Sensor lock.
- Gas selection (if the sensor is suitable for measuring several different gases).
- Units in the measured value display (normally ppm).
- Measuring range for the 4 to 20 mA interface.
- Gas configuration of the calibration gas (if the sensor is suitable for calibration with a replacement gas).
- Calibration interval The sensor-specific default values can be found in the related sensor data sheet.

It also affects the setting parameters for:

- Pump output
- Alarm parameters
- Passwords
- Language
- Function key
- HART interface
- Datalogger
- Analogue interface



- Select the menu items » Settings «, » Instrument « and » Device init. « in this order, pressing the »  « key after each selection.
- Select » Confirm « and press the »  « key to initialise the device.

SW dongle



This group permits the deactivation of individual dongles before they are removed or in the case of a fault in a dongle.

A dongle can be reactivated only by restarting the unit.



– Data dongle

- Select the menu items » Settings «, » Instrument «, » SW dongle « and » Data dongle « in this order, pressing the »  « key after each selection.
- Select the line » Disable function « and press the »  « key to disable the data dongle.

– Sensor test dongle

- Select the menu items » Settings «, » Instrument «, » SW dongle « and » Sensor test dongle « in this order, pressing the »  « key after each selection.
- Select the line » Disable function « and press the »  « key to disable the sensor test dongle.

– Diagnosis dongle

- Select the menu items » Settings «, » Instrument «, » SW dongle « and » Diagnosis dongle « in this order, pressing the »  « key after each selection.
- Select the line » Disable function « and press the »  « key to disable the diagnosis dongle.

Submenu » Communication «

The submenu » Communication « permits various settings to be made for the interfaces.






HART interface

This group contains the setting functions for the HART interface.

– Polling address


The polling address configures the transmitter either for the analogue mode (4 to 20 mA) or the multidrop mode. Setting the polling address to " 0 " enables the analogue mode (4 to 20 mA). To enter multidrop mode, the polling address must be set to a value in the range from " 1 " to " 15 ", which disables the analogue interface and freezes it to a constant current of approx. 3 mA. In order to enable the central controller to request the unique identifier (unambiguous HART address) using HART command #0, all transmitters located on one cable trunk need to be configured with a different polling address. It is best to assign sequential polling addresses, starting with "1".

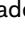This setting corresponds to the HART command #6 ("Write Polling Address").

- Select the menu items » Settings «, » Communication «, » Hart interface « and » Polling address « in this order, pressing the »  « key after each selection.
- Use the »  « and »  « keys to set each position of the polling address and press the »  « key to confirm the setting.
- Press the »  « key to confirm the complete polling address.

– Unique Identifier


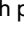



This function can be used to read out the unique identifier (unique HART address), which must be known for the addressing in almost all HART commands. However, knowledge of the unique identifier is necessary only for systems which are not able to read out the unique identifier with the HART command #0 in the short-frame format or the HART command #11. The display corresponds to the address returned by the HART command #0 ("Read Unique Identifier") or #11 ("Read Unique Identifier associated with Tag").

- Select the menu items » Settings «, » Communication «, » Hart interface « and » Identifier « in this order, pressing the »  « key after each selection.

– The unique identifier will be displayed.

– Tag

The tag may be used to mark a specific transmitter. It can comprise up to 8 alphanumeric characters. It can also serve as an address, in order to read the unique identifier using HART command #11 ("Read Unique Identifier associated with Tag"), from the transmitter, even if the polling address is unknown. This presumes that an unambiguous tag has been configured before.

- Select the menu items » Settings «, » Communication «, » Hart interface « and » Tag « in this order, pressing the »  « key after each selection.
- Use the »  « and »  « keys to set each position of the tag and press the »  « key to confirm the setting.
- Press the »  « key to confirm the complete tag.

Analogue interface

This group contains the functions needed for the test and setting functions.


Settings for the analogue interface



– Analogue set point / Set measurement range

When the measuring range of the analogue interface must be adjusted. Here corresponds: 0 ppm = 4 mA; Analogue signal = 20 mA


- According to the standard, the standard measuring range of the sensor automatically ends here.


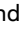
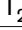
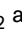
– Warning on/off


This function is used to switch the warning signal »  « on the analogue interface on and off. If the presence of a warning is to be signalled via the analogue interface, the warning signal must be switched on. In the case of a warning, the current on the analogue interface is switched for one second to the state "Warning". For the rest of the time, the measured signal is transmitted. The interval between the warning signals and the level of the analogue signal can be configured as desired, see "Warning signal" on page 71 and "Warning level" on page 71.


- Select the menu items » Settings «, » Communication «, » Analogue interface « and » Warning on/off « in this order, pressing the »  « key after each selection.
- Select » Enable « or » Disable « and press the »  « key to activate.

– Warning interval


This function is used to set the interval between the warning signals »  « on the analogue interface.


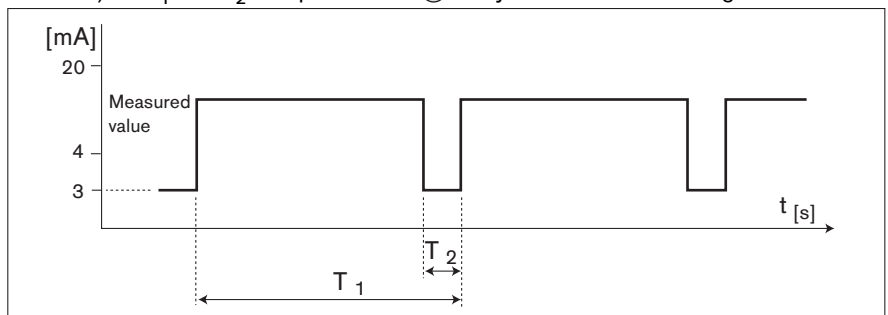



- Select the menu items » Settings «, » Communication «, » Analogue interface « and » Warning interval « in this order, pressing the »  « key after each selection.
- Use the »  « and »  « keys to set each position of the time interval (in seconds) for T_1 and T_2 and press the »  « key to confirm the setting.




- Press the »  « key to confirm the complete time interval.

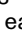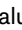

– Warning level

– This function is used to set the current on the analogue interface for the warning signal »  «.

- Select the menu items » Settings «, » Communication «, » Analogue interface « and » Warning level « in this order, pressing the »  « key after each selection.
- Use the »  « and »  « keys to set each position of the current value and press the »  « key to confirm the setting.
- Press the »  « key to confirm the complete current value.

– Maintenance signal


– This function is used to set the signal type on the analogue interface for the maintenance signal »  «.

- Select the menu items » Settings «, » Communication «, » Analogue interface « and » Maintenance signal « in this order, pressing the »  « key after each selection.
- Select the » static « or » dynamic signal type, as required, and activate it by pressing the »  « key.


Note:


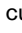
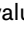

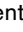
The » static « signal type is a DC current signal whose current value can be configured (see » Maintenance level «).

The » dynamic « signal type is an AC signal with the following characteristic:

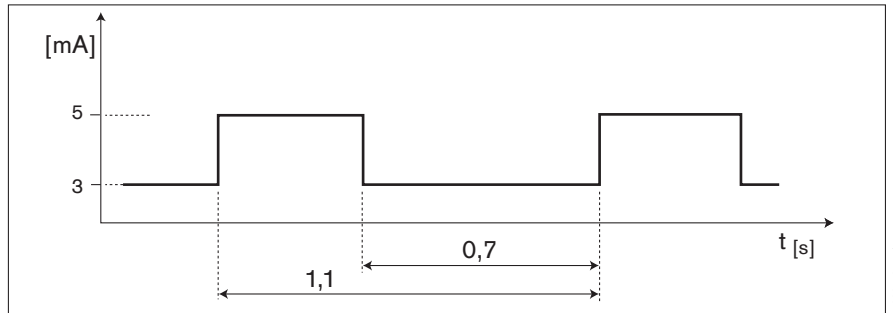

– Maintenance level

– This function is used to set the current on the analogue interface for the maintenance signal »  «.

- Select the menu items » Settings «, » Communication «, » Analogue interface « and » Warning level « in this order, pressing the »  « key after each selection.
- Use the »  « and »  « keys to set each position of the current value and press the »  « key to confirm the setting.
- Press the »  « key to confirm the complete current value.

Test functions for the analogue interface

– Test analogue

- This function is used to set various currents in the range 3 to 22 mA on the analogue interface.

Note:

These functions may trigger alarms in the control unit! If necessary, the alarms should be disabled in the control unit before using the functions.

- Select the menu items » Settings «, » Communication «, » Analogue interface « and » Test analogue « in this order, pressing the » OK « key after each selection.
- If the alarms are disabled in the control unit, confirm the message » Switch off all alarms « by pressing the » OK « key.
- Use the » ▲ « and » ▼ « keys to set each position of the current value and press the » OK « key to confirm the setting.
- Use the » » « and » ⏻ « keys to select the state » Set current output « and press the » OK « key to activate.
- The selected current is transmitted on the analogue interface.
- Use the » ▲ « and » ▼ « keys to select the line » Next « and press the » OK « key to confirm the selection. The function is terminated.
- When the alarms in the control unit have been enabled again, confirm the message » Switch on all alarms « by pressing the » OK « key.

– Test fault

- This function is used to set the analogue interface to the fault signal » X «.

Note:

These functions may trigger alarms in the control unit! If necessary, the alarms should be disabled in the control unit before using the functions.

- Select the menu items » Settings «, » Communication «, » Analogue interface « and » Test fault « in this order, pressing the » OK « key after each selection.
- Use the » ▲ « and » ▼ « keys to select » Enable « and press the » OK « key to activate.
- The current for the fault signal is transmitted on the analogue interface.
- Use the » ▲ « and » ▼ « keys to select » Disable « and press the » OK « key to activate.
- The current for the fault signal is switched off.




– Test warning




- This function is used to set the analogue interface to the warning signal » W «.

Note:


These functions may trigger alarms in the control unit! If necessary, the alarms should be disabled in the control unit before using the functions.

- Select the menu items » Settings «, » Communication «, » Analogue interface « and » Test warning « in this order, pressing the » OK « key after each selection.

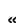- Use the »  « and »  « keys to select » Enable « and press the »  « key to activate.
- The current for the warning signal is transmitted on the analogue interface.








- Use the »  « and »  « keys to select » Disable « and press the »  « key to activate.
- The current for the warning signal is switched off.

– Test maintenance

- This function is used to set the analogue interface to the maintenance signal »  «.

Note:

These functions may trigger alarms in the control unit! If necessary, the alarms should be disabled in the control unit before using the functions.

- Select the menu items » Settings «, » Communication «, » Analogue interface « and » Test maintenance « in this order, pressing the »  « key after each selection.
- Use the »  « and »  « keys to select » Enable « and press the »  « key to activate.
- The current for the maintenance signal is transmitted on the analogue interface.
- Use the »  « and »  « keys to select » Disable « and press the »  « key to activate.
- The current for the maintenance signal is switched off.


LON Interface

This function group contains the functions for the LON interface. For details of operation with LON, see also "Polytron 7000 Operation via LON" on page 81.

– Neuron ID





Every Polytron 7000 has a Neuron ID. The Neuron ID uniquely defines the Neuron chip on the LON network.

To display the Neuron ID:

- Select the menu items » Settings «, » Communication «, » LON Interface « and » Neuron ID «, pressing the »  « key after each selection.
- The Neuron ID is displayed.

– Service PIN


The Polytron 7000 can be commissioned by sending its Neuron ID to the LON network with the aid of the function "Service PIN".

- Select the menu items » Settings «, » Communication «, » LON Interface « and » Service PIN « pressing the »  « key after each selection.
- Use the »  « and »  « to select » Confirm « and press the »  « key to activate this selection.
- The Neuron ID of the Polytron 7000 is transmitted.


Submenu » Sensor «

The submenu » Sensor « can be used to make various settings for the installed sensor.



Change sensor

- This function can be used to change a sensor while the unit is running without sending a fault alarm to the control unit. It also ensures that all sensor data currently in the microprocessor can be saved to the EEPROM of the sensor before the sensor plug is disconnected.
- In principle, a sensor can be replaced at any time. However, for technical safety reasons, a fault alarm will be activated until a new sensor is connected, in case a sensor is disconnected accidentally.
- Select the menu items » Settings «, » Sensor « and » Change sensor « in this order, pressing the »  « key after each selection.
- The maintenance signal is transmitted on the analogue interface, and the display reads: » Please remove sensor«.
- Remove the old sensor and plug in the new one (see page 44).
When the new sensor has been installed:
- The message » Loading database, please wait « is displayed.

When the sensor data have been loaded:

- The message » Database is loaded « is displayed.
- Select » Back to menu « and press the »  « key.
- The maintenance signal on the analogue interface remains until the sensor operates normally.
The duration of the warming-up period depends on the type of sensor and its history. If, for example, the sensor had already been warmed up on another transmitter and it was disconnected only for a short time, the warming-up period may be shorter than that shown in the operating instructions for the sensor.
See the operating instructions for the sensor for the maximum warming-up period.
If the old sensor is replaced with an identical sensor (with the same Part No.), the configuration of the transmitters (gas type, measuring range, calibration gas, calibration interval) remains unchanged.
Otherwise, the default values for the sensor (see the operating instructions for the sensor) are used by the transmitter if the sensor-lock function (page 76) is disabled.

Autocalibration setting

- This function is used to enable and disable the autocalibration (page 58).
- Select the menu items » Settings «, » Sensor « and » Set autocal. « in this order, pressing the »  « key after each selection.
- Select » Enable « or » Disable « and press the »  « key to activate.
- Autocalibration from the menu "Calibration" can be used only if this function is enabled.


Sensor test




This group contains the setting functions for the sensor selftest.

These functions can be used only if the Polytron 7000 transmitter is equipped with the Sensor Dongle 83 17 619 or the Sensor Diagnostic Dongle 83 17 860, see page 29.

– Sensor test setting

– This function can be used to activate or reactivate the sensor selftest.

● Select the menu items « Settings «, « Sensor « and « Set sensor test « in this order, pressing the »  « key after each selection.



● Use the »  « and »  « keys to select « Enable « or « Disable « and press the »  « key to activate.

– If the sensor selftest is enabled, the transmitter continually tests the sensor in order to ensure reliable operation. If the sensor does not pass the selftest, a suitable warning or fault is generated.

– Sensor self-test


– This function is used to start the sensor self-test.

● Select the menu items « Settings «, « Sensor «, » ECXX « and « Sensor self-test «.

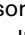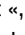● If a sensor self-test can be executed (depending on sensor or device status): Use »  « to select » Start sensor self-test «, then press »  « button to start.


– After a few seconds the result is indicated in the display.


To terminate the function:

● Select » Back to menu « and press the »  « key.

– Sensor lock

– This function is used to enable or disable the sensor lock.

● Select the menu items » Settings «, » Sensor «, « EC-O₂ « and » Sensor lock « in this order, pressing the »  « key after each selection.

● Select » Enable « or » Disable « and press the »  « key to activate.

Enable = The transmitter will accept a new sensor only if it has the same Part No. (=Dräger Order No.) as the old sensor and thus the same sensor type.


Disable = The transmitter will accept other sensor types. In this case, the transmitter uses the default settings for the new sensor, which means that the transmitter configuration will be changed.

Sensor configuration**(using an EC-O₂ sensor as an example):**








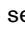
This group contains the setting functions for the sensor.

– Gas setting

– This function is used to change the settings for the gas to be measured.



- Select the menu items » Settings «, » Sensor «, » EC-O₂ « and » Set gas « in this order, pressing the »  « key after each selection.

When several measuring gases of the sensor are displayed:

- Use the »  « and »  « keys to select from the list of measuring gases and the »  « key to activate.
- The selected gas is indicated.
- Use the »  « and »  « keys to select the unit of measurement (e.g. Vol.%) from the list and press the »  « key to activate.
- The overview of the settings are displayed.
- If the settings are correct:
- Use the »  « key to select the line » Confirm « and press the »  « key.






– Sensor initialisation

– This function is used to set all parameters of the sensors back to the factory default values.

- Select the menu items » Settings «, » Sensor «, » EC-O₂ « and » Sensor init. « in this order, pressing the »  « key after each selection.
- Select » Confirm « and press the »  « key to initialise the sensor.

– Set calibration interval

– This function is used to set the calibration interval.

- Select the menu items » Settings «, » Sensor «, » EC-O₂ « and » Set cal. Int. « in this order, pressing the »  « key after each selection.
- Use the »  « and »  « keys to set each position of the calibration interval (in days) and press the »  « key to confirm the setting.
To confirm the entered calibration interval:
- Select » Confirm « and press the »  « key.

Submenu » Datalogger «

The submenu » Datalogger « permits various settings to be made for the Datalogger and the Eventlogger.

These functions are available only if the Polytron 7000 transmitter is equipped with the Data Dongle 83 17 618, see page 29.

The contents of the Datalogger or Eventlogger can be evaluated only with the PC software GasVision (Version 5.5 or higher). The contents of the Datalogger for the previous 15 minutes can be viewed with the menu sequence » Information «, » Datalogger « and » Show graph «, page 55.



Datalogger:

The Datalogger saves the measured values in accordance with the configuration set under » Set Datalogger «. The Datalogger can save at least 3000 measured values. If the data is saved at intervals of one minute, this is sufficient for a monitoring period of 50 hours. The monitoring period can be extended considerably by using the setting » Trigger « (page 79).

Eventlogger:

The Eventlogger saves unit and sensor events (such as: A1 threshold value exceeded; flow fault in pump). The Eventlogger can save a maximum of 100 events




Logger on/off

- This function is used to enable or disable the Data- or Eventlogger.
- Select the menu items » Settings «, » Datalogger « and » Datalgr. On/off « in this order, pressing the »  « key after each selection.
- Select » Enable « or » Disable « and press the »  « key to activate.



Datalogger setting

This group contains the setting functions for the Datalogger.

– Sample time



- This function can be used to set the sample time for the Datalogger.
- Select the menu items » Settings «, » Datalogger «, » Set Datalogger « and » Sample time « in this order, pressing the »  « key after each selection.
- Select the desired sample time from the list and press the »  « key to activate it (»  «).

– Peak / average

- This function can be used to select whether the Datalogger is to save peak or average values.
- Select the menu items » Settings «, » Datalogger «, » Set Datalogger « and » Peak/average « in this order, pressing the »  « key after each selection.
- Select » Peak « or » Average « and press the »  « key to activate.






Peak	The maximum concentration value measured during the selected sample time is saved.
Average	The average of all concentration values measured during the selected sample time is saved.

– Trigger on/off

- This function can be used to enable or disable the threshold criterion for saving of concentration values.
- If this function is enabled and a suitable trigger value is selected, it is possible to monitor the measured values for a longer period.
- Select the menu items » Settings «, » Datalogger «, » Set Datalogger « and » Peak/average « in this order, pressing the »  « key after each selection.
- Select » Enable « or » Disable « and press the »  « key to activate.


Enable	Concentration values are saved only if they exceed the threshold set under » Trigger value « (referred to the previously saved value).
Disable	All measured values which occur during the sample time are saved.

– Trigger value

- This function can be used to set the trigger value.
This value refers proportionally to the whole measuring range.
Example: with a measuring range of 500 ppm a trigger value of 2 % is entered.
Then the datalogger will only store measured values (refer to the last stored measured value) that deviate by more than 10 ppm.
- Select the menu items » Settings «, » Datalogger «, » Set Datalogger « and » Trigger value « in this order, pressing the »  « key after each selection.
- Use the »  « and »  « keys to set each position of the trigger value and press the »  « key to confirm the setting.
- Press the »  « key to confirm the complete trigger value.

– **Stack/roll**

– This function can be used to set the operating mode of the Datalogger and the Eventlogger.

● Select the menu items » Settings «, » Datalogger «, » Set Datalogger « and » Stack/roll « in this order, pressing the »  « key after each selection.


● Select » Stack « or » Roll « and press the »  « key to activate (»  «).

Roll when the Datalogger storage space is use up, the oldest data will be overwritten first



Stack when the Datalogger storage is full, no further data can be saved. An appropriate warning is generated.

Clear Datalogger

– This function is used to delete all data from the Datalogger.

● Select the menu items » Settings «, » Datalogger « and » Clear Datalogger « in this order, pressing the »  « key after each selection.


– The message » Clear Datalogger data « is displayed.

● Use the »  « key to select the line » Confirm « and press the »  « key.



– The data are deleted from the Datalogger.

Clear Eventlogger

– This function is used to delete all data from the Eventlogger.

● Select the menu items » Settings «, » Datalogger « and » Clear Eventlogger « in this order, pressing the »  « key after each selection.

– The message » Clear Eventlogger data « is displayed.

● Use the »  « key to select the line » Confirm « and press the »  « key.

– The data are deleted from the Eventlogger.

Polytron 7000 Operation via LON

There are 3 LED's behind the display window that indicate the different status of the Polytron 7000.


- The red LED indicates an error.
- The orange LED indicates communication with the central controller via LON of LON specific data e.g. sending the Service PIN.
- The green LED indicates the correct operation of the Polytron 7000 when it is continuously on.
When the green LED flashes it indicates a warning in the Polytron 7000.

Every Polytron 7000 has a Neuron ID. The Neuron ID uniquely defines the Neuron chip on the LON network.

To view the Neuron ID:

- Select menu items » Settings «, » Communication «, » LON Interface « and » Neuron ID «.

To commission the device the Neuron ID can be sent to the controller via LON using the Service PIN function.

- Select menu items » Settings «, » Communication «, » LON Interface « and » Service PIN «.
- Select » Confirm « and press the »  « key to sent the Neuron ID.

Use the Polytron 7000 Plugin for configuration and commissioning the Polytron 7000 via LON.

The plugin is available for free download under:

<http://www.echelon.com/products/integration/plugin/>

Polytron 7000 Operation via Foundation Fieldbus

For the Polytron 7000, three support files are available: two device description files (FFO and SYM) and a capability file (CFF).


Use the Polytron 7xx Foundation Fieldbus Manuel for configuration and commissioning the Polytron 7000 via LON.

The Manual is available for free download under: <http://www.draeger.com>

1 By connecting the Foundation Fieldbus jumper, the following Foundation Fieldbus functions are activated:

Simulate: If the Foundation Fieldbus jumper has been connected, the simulate function can be activated by SW or via the fieldbus. The fieldbus master then receives defined simulation values. This may be helpful when commissioning or maintaining the fieldbus system.

Writeprotect: If the Foundation Fieldbus jumper has been connected, all writeable parameters of the fieldbus transmitter can only be read. This may be helpful during commissioning and prevents accidental changes from being made to the transmitter setting during normal operation.

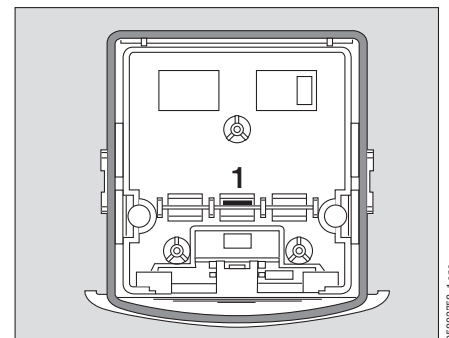

Polytron 7000 Operation via PROFIBUS PA

For the Polytron 7000 PROFIBUS PA transmitter, a GSD file and a DD file (for the SIMATIC PDM) are available. For the Polytron 7000, a DTM is also available.

Use the Polytron 7xx PROFIBUS PA Manual for configuration and commissioning the Polytron 7000. The manual is available for free download under: <http://www.draeger.com>

Structure of primary value:

description:	quality		sub-status				limit value	
bits:	7	6	5	4	3	2	1	0

Primary value PROFIBUS PA and Foundation Fieldbus:

PRIMARY_VALUE Quality – The quality used will be determined by highest priority condition

Value Bit 7, 6	Name	Description
0	Bad	The value is not useful
1	Uncertain	The quality of the value is less than normal, but the value may still be useful.
2	Good (Non-cascade)	The quality of the value is good. Possible alarm conditions may be indicated by the sub-status. Alarm indication is applies only to the PV and primary output parameters not in the cascade path.
3	Good (Cascade)	The value may be used in control.

BAD sub-status

Value Bit 5, 4, 3, 2	Name	Description
0	Non-specific	There is no specific reason why the value is bad. Used for propagation.
1	Configuration Error	Set if the value is not useful because there is some other problem with the block, depending on what specific manufacturer can detect.
2	Not Connected	Set if this input is not referenced in by a link object within the resource.
3	Device Failure	Set if the source of the value is affected by a device failure.
4	Sensor Failure	Set if the device can determine this condition. The Limits define which direction has been exceeded.
5	No Communication, with last usable value	Set if this value had been set by communication, which has now failed.
6	No Communication, with no usable value	Set if there has never been any communication with this value since it was last Out of Service.
7	Out of Service	The value is not reliable because the block is not being evaluated, and may be under construction by a configurator. Set if the block mode is O/S.

Uncertain sub-status

Value Bit 5, 4, 3, 2	Name	Description
0	Non-specific	There is no specific reason why the value is uncertain. Used for propagation.
1	Last Usable Value	Whatever was writing this value has stopped doing so. (This happens when an input is disconnected by a configurer.)
2	Substitute	Set when the value is written when the block is not Out of Service.
3	Initial Value	Set when the value of an input parameter is written while the block is Out of Service.
4	Sensor Conversion not Accurate	Set if the value is at one of the sensor limits. The Limits define which direction has been exceeded. Also set if the device can determine that the sensor has reduced accuracy (e.g. degraded analyzer), in which case no limits are set.
5	Engineering Unit Range Violation	Set if the value lies outside of the range of values defined for this parameter. The Limits define which direction has been exceeded.
6	Sub-normal	Set if a value derived from multiple values has less than the required number of Good sources.

Good (Non-cascade) sub-status

Value Bit 5, 4, 3, 2	Name	Description
0	Non-specific	There is no specific reason why the value is good. No error or special condition is associated with this value.
1	Active Block Alarm	Set if the value is good and the block has an active Block Alarm.
2	Active Advisory Alarm	Set if the value is good and the block has an active Alarm with a priority less than 8.
3	Active Critical Alarm	Set if the value is good and the block has an active Alarm with a priority greater than or equal to 8.
4	Unacknowledged Block Alarm	Set if the value is good and the block has an unacknowledged Block Alarm.
5	Unacknowledged Advisory Alarm	Set if the value is good and the block has an unacknowledged Alarm with a priority less than 8.
6	Unacknowledged Critical Alarm	Set if the value is good and the block has an unacknowledged Alarm with a priority greater than or equal to 8.

PROFIBUS PA:

Coding of the Physical Block Parameter DIAGNOSIS

Octet	Bit	Mnemonic	Description
1	0	DIA_HW_ELECTR	Hardware failure of the electronic
1	1	DIA_HW_MECH	Hardware failure mechanics
1	2	DIA_TEMP_MOTOR	Motor- temperature too high
1	3	DIA_TEMP_ELECTR	Electronic temperature too high
1	4	DIA_MEM_CHKSUM	Memory error
1	5	DIA_MEASUREMENT	Failure in measurement
1	6	DIA_NOT_INIT	Device not initialized (No selfcalibration)
1	7	DIA_INIT_ERR	Selfcalibration failed
2	0	DIA_ZERO_ERR	Zero point error (limit position)
2	1	DIA_SUPPLY	Power supply failed (electrical, pneumatic)
2	2	DIA_CONF_INVALID	Configuration not valid
2	3	DIA_WARMSTART	New-start-up (warmstart up) carried out.
2	4	DIA_COLDSTART	Re-start-up (coldstart up) carried out.
2	5	DIA_MAINTAINANCE	Maintenance required
2	6	DIA_CHARACTER	Characterization invalid
2	7	IDENT_NUMBER_VIOLATION	Set to 1 (one), if the Ident_Number of the running cyclic data transfer and the value of Physical Block IDENT_NUMBER_SELECTOR parameter are different.
3	0...7	reserved	Reserved
4	0...6	reserved	Reserved
4	7	EXTENSION_AVAILABLE	More diagnosis information is available

Coding of the Physical Block Parameter DIAGNOSIS_EXTENSION

Octet	Bit	Mnemonic	Description
1	0	DIA_SENSOR_ERR	Sensor failure
1	1	DIA_OTHER	An error has occurred that was not identified.
1	2	DIA_SOFTWARE_ERR	The software has detected an error.
1	3	DIA_CALIBRATION_ERR	An error occurred during calibration of the device or a calibration error has been detected during operation of the device.
1	4	DIA_MAINTAINCANCE_SOON	Maintenance required soos

Foundation Fieldbus:

Resource Block and Transducer Block

BLOCK_ERR: The block error parameter reflects the error status of associated hardware or software components and directly impacts the correct operation of a block. Block errors will notified as block alarms.

Value	Error	Description
0	Other	
1	Block Configuration Error	
2	Link Configuration Error	
3	Simulate Active	For the resource block, Simulate Active will be used to indicate that the simulate hardware jumper is present. An active state (1) of this attribute will indicate that the jumper is present and that it is possible for the user to enable simulation in an input or output class function block.
4	Local Override	
5	Device Fault State Set	
6	Device Needs Maintenance Soon	
7	Sensor Failure	detected by this block/process variable has a status of BAD, Sensor Failure
8	Output Failure	
9	Memory Failure	detected by this block/back calculation input has a status of BAD, Device Failure
10	Lost Static Data	
11	Lost NV Data	
12	Readback Check Failed	
13	Device Needs Maintenance Now	
14	Power-up	
14	Out-of-Service	






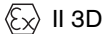



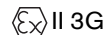
Transducer block

XD_ERROR: An additional parameter, XD_ERROR, must be used to hold the single error subcode that the manufacturer considers most important when one or more errors occur. BLOCK_ERR will have bit 0 set whenever XD_ERROR is non-zero.

Value	Error	Description
16	Unspecified error	An error has occurred that was not identified.
17	General error	An error has occurred that could not be classified as one of the errors below.
18	Calibration error	An error occurred during calibration of the device or a calibration error has been detected during operation of the device.
19	Configuration error	An error occurred during configuration of the device or a configuration error has been detected during operation of the device.
20	Electronics Failure	An electronic component has failed.
21	Mechanical Failure	A mechanical component has failed.
22	I/O Failure	An I/O failure has occurred
23	Data Integrity Error	Indicates that data stored within the system may no longer be valid due to NVM checksum failure, Data verify after write failure, etc.
24	Software Error	The software has detected an error. This could be caused by an improper interrupt service routine, an arithmetic overflow, a watchdog timer, etc.
25	Algorithm Error	The algorithm used in the transducer block produced an error. This could be due to an overflow, data reasonableness failure, etc.

Technical Data

The measuring range and the measuring properties depend on which type of sensor is installed – see the operating instructions for the sensor being used.

<p>CE markings ¹⁾</p>	<ul style="list-style-type: none"> – Devices and protective systems for use for the intended purpose in explosion-hazard area (Directive 94/9/EC) – Electromagnetic compatibility (Directive 89/336/EEC) max. influence on sensor: 2 x repeatability
<p>Ingress protection</p>	<p>IP 66 / IP 67, according to EN 60 529 / IEC 529 (NEMA 4)</p>
<p>Approvals</p>	<p>Polytron 7000 is approved as type P3U and type P3FB.</p>
<p>ATEX</p>	<p>Device markings in accordance with 94/9/EC</p>
<p>– Type P3U</p>	<p>   II 1G EEx ia IIC T4 (-40 °C Ta +65 °C) EEx ia IIC T6 (-40 °C Ta +40 °C) </p> <p>   II 3G EEx nL IIC T4 (-25 °C Ta +65 °C) EEx nL IIC T6 (-25 °C Ta +40 °C) </p> <p>BVS 03 ATEX E 406 X Power Supply: $U_i = 30 \text{ V}$, $I_i = 0,3 \text{ A}$, $P_i = 700 \text{ mW}$, $C_i = 5 \text{ nF}$, $L_i = 50 \mu\text{H}$</p> <p>   II 3D IP6x T65 °C (-40 °C Ta +65 °C) maximum supply voltage 30 V DC </p> <p>Year of manufacture (indicated by Serial No.) ²⁾ Dräger Safety, 23560 Lübeck, Germany</p> <p>Safety parameters for the supply-voltage and signalling circuit (centre terminals of the docking station): $U_i = 30 \text{ V}$, $I_i = 0.3 \text{ A}$, $P_i = 700 \text{ mW}$ $C_i = 5 \text{ nF}$, $L_i = 50 \mu\text{H}$</p>
<p>– Type P3FB:</p>	<p>   II 1G EEx ia IIC T4 (-40 °C ≤ Ta ≤ +65 °C) EEx ia IIC T6 (-40 °C ≤ Ta ≤ +40 °C) </p> <p>   II 3G EEx nL IIC T4 (-25 °C ≤ Ta ≤ +65 °C) EEx nL IIC T6 (-25 °C ≤ Ta ≤ +40 °C) </p> <p>BVS 03 ATEX E 406 X FISCO Field Device, FNICO Field Device Power Supply: $U_i = 24 \text{ V}$, $I_i = 0.38 \text{ A}$, $P_i = 5.32 \text{ W}$, $C_i = 5 \text{ nF}$, $L_i = 10 \mu\text{H}$</p> <p>Year of manufacture (indicated by Serial No.) ²⁾ Dräger Safety, 23560 Lübeck, Germany</p>

¹⁾ EN 50270 – For the display valid for table 2.1 and for table 3.1 is assessment criterion B.

²⁾ EN 50270: For HART-Communication with connected Remote-Sensor valid for table 3.1 is assessment criterion B.

The year of manufacture is indicated by the third letter in the serial number shown on the rating plate: T = 2003, U = 2004, W = 2005, X = 2006, Y = 2007, Z = 2008, A = 2009, B = 2010, C = 2011, etc.

Example: Serial No. ARUH-0054: the third letter is U, which means that the unit was manufactured in 2004.

IECEX

- **Type P3U:**

EEx ia IIC T4 (-40 °C Ta +65 °C)
 EEx ia IIC T6 (-40 °C Ta +40 °C)
 IECEX BVS 04 0003 X
 Power Supply: $U_i = 30 \text{ V}$, $I_i = 0,3 \text{ A}$, $P_i = 700 \text{ mW}$, $C_i = 5 \text{ nF}$, $L_i = 50 \text{ }\mu\text{H}$
 Year of construction (via serial number) ¹⁾
 Dräger Safety, 23560 Lübeck, Germany

UL (Underwriters Laboratories Inc.)

- **Type P3U:**

Only as to Intrinsic Safety for use in Hazardous Locations
 Class I, Div. 1, Groups A, B, C, D
 Class II, Div. 1, Groups E, F, G
 Use in accordance with Dräger Control Drawing SE20105.
 T4: -40 Ta +65 °C, T6: -40 Ta +40 °C.
 Not tested in oxygen enriched atmospheres (>21 % O₂).
 Power Supply: $V_{\text{max}} = 30 \text{ V}$, $I_{\text{max}} = 0.3 \text{ A}$, $P_i = 700 \text{ mW}$,
 $C_i = 5 \text{ nF}$, $L_i = 50 \text{ }\mu\text{H}$



CSA (Canadian Standards Association)

- **Type P3U:**

Intrinsic safe
 Class I, Div. 1, Groups A, B, C, D
 Class II, Div. 1, Groups E, F, G
 Ex ia T4 (-40 °C Ta +65 °C),
 Ex ia T6 (-40 °C Ta +40 °C)



Use in accordance with Dräger Control Drawing SE20106.
 Power supply: $V_{\text{max}} = 30 \text{ V}$, $I_{\text{max}} = 0.3 \text{ A}$, $P_{\text{max}} = 700 \text{ mW}$,
 $C_i = 5 \text{ nF}$, $L_i = 50 \text{ }\mu\text{H}$

Signal transmission to central unit

Analogue

- Measured-value signal 4 mA to 20 mA
- Drift below zero point 3.8 mA to 4 mA
- Full-scale value exceeded 20 mA to 20.5 mA
- Unit fault <3.2 mA
- Maintenance signal 3.4 mA

Options which can be switched on or off:

- Warning Fault signal for 1 second every 10 seconds ¹⁾

Digital

HART compatible,
transmission on two- or three-wire, shielded cable

Analogue (4 to 20 mA) signal transmission (2-wire)

- Supply voltage (w/o pump or relay module) 16.5 V DC to 30 V DC
- for a current of 3 mA min. 8.0 V DC at the transmitter
- For a current of 22 mA <0.5 V_{SS}
- AC component <0.5 V_{SS}

Analogue (4 to 20 mA) signal transmission (3-wire)

- Supply voltage – 12 V DC to 30 V DC (w/o pump or relay module)
- AC component <0.5 V_{SS}
- Load resistance 0 ohm to 40 [ohm/volt] x (U_S²) – 4 V)

Digital signal transmission (2-wire)

- Supply voltage 16.5 V DC to 30 V DC
- AC component <0.2 V_{SS} ; <2.2 mV_{eff} (500 to 10 000 Hz)
- Load resistance 0 ohm to 40 [ohm/volt] x (U_S²) – 4 V)

Digital signal transmission (3-wire)

- supply voltage 12 V DC to 30 V DC (w/o pump or relay module)
- AC component <0.2 V_{SS}
- load resistance 230 ohm to 40 [ohm/volt] x (U_S²) – 4 V), max. 600 ohm

Digital signal transmission (4-wire)

- supply voltage 12 V DC to 30 V DC (w/o pump or relay module)
- AC component <0.2 V_{SS}
- load resistance 230 ohm to 40 [ohm/volt] x (U_S²) – 4 V), max. 600 ohm

PROFIBUS PA

- Communication rate 31.25 kBaud
- Data volume 244 Byte
- Bus length max. 1900m
- Segment size max. 32 slaves
- Physical layer IEC 61158-2; digital, bit-synchronous, Manchester Encoding
- Segment current 18.1 mA

Foundation Fieldbus:

- Communication rate 31.25 kBaud
- Data volume 128 Byte
- Bus length max. 1900m
- Segment size max. 240 nodes
- Physical layer IEC 61158-2; digital, bit-synchronous, Manchester Encoding

¹⁾ Can be configured as desired. Factory setting: disabled.

²⁾ Actual supply voltage at the transmitter.

Power consumption (without analogue signal transmission)	typical 50 mW
Cable inlet	M20 x 1.5; cable diameter 6 mm (0.24") to 12 mm (0.47")
Wire cross-section	0.5 mm ² (AWG 20) to 2.5 mm ² (AWG 13)
Weight	approx. 0.9 kg / 2.0 lb, without pump and relay module.
Ambient conditions for operation	Specifications for the sensor: see sensor data sheet –40 to 65 °C (–40 to 160°F) ¹⁾ 700 to 1300 hPa (20.7 to 38.4 inch Hg) 0 to 100 % relative humidity, non condensing
during storage	–40 to 70 °C (–40 to 150°F) 700 to 1300 hPa (20.7 to 38.4 inch Hg) 0 to 100 % relative humidity, non condensing

¹⁾ The legibility of the display is restricted at temperatures below –20 °C (–5 °F). Operation of the transmitters becomes more difficult at subzero temperatures due to the increasing slowness of the display.

²⁾ Actual supply voltage at the transmitter.

Relay module

Caution:

The relay module is not covered by the explosion protection approvals. Use is not permitted in explosion-hazard areas! Explosion hazard!

Supply voltage (DC)	12 V to 30 V at the transmitter
Relay outputs	
– logical channels	A1, A2, fault
– principle	normally energised (for fail-safe operation)
– contacts	1-pole changeover (SPDT)
– contact rating	5 A at 30 V DC; 5 A at 250 V AC
Ambient conditions for operation	–40 to 65 °C (–40 to 160°F) 700 to 1300 hPa (20.7 to 38.4 inch Hg) 0 to 100 % relative humidity, non condensing
during storage	–40 to 70 °C (–40 to 150°F) 700 to 1300 hPa (20.7 to 38.4 inch Hg) 0 to 100 % relative humidity, non condensing
CE markings	– Electromagnetic compatibility (Directive 89/336/EEC) – Low-voltage equipment (Directive 72/23/EEC), when used with transmitter)

Pump module

Caution:

The pump module is not covered by the explosion protection approvals.
Use is not permitted in explosion-hazard areas! Explosion hazard!

Supply voltage (DC)

- for an output of 0.5 L/min 12 V to 30 V at the transmitter
- for an output of 1.0 L/min 16 V to 30 V at the transmitter
- for an output of 1.5 L/min 20 V to 30 V at the transmitter

Power consumption

- for an output of 0.5 L/min <2 W
- for an output of 1.0 L/min <4 W
- for an output of 1.5 L/min <6 W

Output

- Setting range approx. 0.5 l/min to 1.5 l/min (approx. 30 % to 100 %)
- Factory setting 0.5 L/min

Flow warning

- Setting range 0.4 L/min to 1.4 L/min (at least 0.1 L/min below set output)
- Factory setting 0.4 L/min

Flow alarm

- Setting range 0.3 L/min to 1.3 L/min (at least 0.2 L/min below set output)
- Factory setting 0.3 L/min

Hose connectors

- Internal hose diameter 6 mm to 8 mm

Materials used in the gas path

- Pump adapter PP, Viton
- Gas guides PP, glass
- Dust filter PE
- Pump EPDM, PTFE, Niro

Ambient conditions

for operation
0 to 55 °C (32 to 130°F)
700 to 1300 hPa (20.7 to 38.4 inch Hg)
0 to 100 % relative humidity, non condensing

during storage
–40 to 70 °C (–40 to 150°F)
700 to 1300 hPa (20.7 to 38.4 inch Hg)
0 to 100 % relative humidity, non condensing

CE markings

- Electromagnetic compatibility (Directive 89/336/EEC) when used with transmitter

Order List

Part name and description	Order No.
Dräger Polytron 7000 4 to 20 mA, without display and keypad	83 17 590
Dräger Polytron 7000 4 to 20 mA with relay module, without display and keypad	83 17 626
Dräger Polytron 7000 4 to 20 mA with pump module, without display and keypad	83 17 627
Dräger Polytron 7000 4 to 20 mA with relay and pump mod- ules, without display and keypad	83 17 628
Dräger Polytron 7000 4 to 20 mA D, with display and keypad	83 17 610
Dräger Polytron 7000 4 to 20 mA D with relay module, with display and keypad	83 17 636
Dräger Polytron 7000 4 to 20 mA D with pump module, with display and keypad	83 17 637
Dräger Polytron 7000 4 to 20 mA D with relay and pump mod- ules, with display and keypad	83 17 638
Dräger Polytron 7000 4 to 20 mA HART, without display and keypad	83 17 690
Dräger Polytron 7000 4 to 20 mA HART with relay module, without display and keypad	83 17 696
Dräger Polytron 7000 4 to 20 mA HART with pump module, without display and keypad	83 17 697
Dräger Polytron 7000 4 to 20 mA HART with relay and pump modules, without display and keypad	83 17 698
Dräger Polytron 7000 4 to 20 mA HART D, with display and keypad	83 17 710
Dräger Polytron 7000 4 to 20 mA HART D with relay module, with display and keypad	83 17 776
Dräger Polytron 7000 4 to 20 mA HART D with pump mod- ule, with display and keypad	83 17 777
Dräger Polytron 7000 4 to 20 mA HART D with relay and ump modules, with display and keypad	83 17 778
Dräger Polytron 7000 LON, without display and keypad	83 17 790
Dräger Polytron 7000 LON with relay module, without display and keypad	83 17 796
Dräger Polytron 7000 LON with pump module, without display and keypad	83 17 797
Dräger Polytron 7000 LON with relay and pump modules, without display and keypad	83 17 798

Part name and description	Order No.
Dräger Polytron 7000 LON D, with display and keypad	83 17 810
Dräger Polytron 7000 LON D with relay module, with display and keypad	83 17 816
Dräger Polytron 7000 LON D with pump module, with display and keypad	83 17 817
Dräger Polytron 7000 LON D with relay and pump modules, with display and keypad	83 17 818
Dräger Polytron 7000 PB, with PROFIBUS module with display and keypad	83 19 430
Dräger Polytron 7000 PB, with PROFIBUS module, relay module, display and keypad	83 19 427
Dräger Polytron 7000 PB, with PROFIBUS module, pump module, without display and keypad	83 19 436
Dräger Polytron 7000 PB, with PROFIBUS module, relay module and pump module, without display and keypad	83 19 438
Dräger Polytron 7000 FF, with Foundation Fieldbus module, with display and keypad	83 19 440
Dräger Polytron 7000 FF, with Foundation Fieldbus module, relay module, with display and keypad	83 19 428
Dräger Polytron 7000 FF, with Foundation Fieldbus module, pump module, without display and keypad	83 19 437
Dräger Polytron 7000 FF, with Foundation Fieldbus module, relay module and pump module, without display and keypad	83 19 439
Dräger Docking Station	83 17 990
Sensors	
DrägerSensor AC	68 10 595
DrägerSensor Cl ₂	68 09 665
DrägerSensor CO	68 09 605
DrägerSensor CO LS	68 09 620
DrägerSensor COCl ₂	68 09 930
DrägerSensor H ₂	68 09 685
DrägerSensor H ₂ S	68 10 435
DrägerSensor H ₂ S	68 09 610
DrägerSensor H ₂ S HC	68 09 710
DrägerSensor H ₂ O ₂	68 09 705
DrägerSensor H ₂ O ₂ HC	68 09 675
DrägerSensor HCl	68 09 640
DrägerSensor HCN	68 09 650
DrägerSensor Hydrazine	68 10 180
DrägerSensor Hydride	68 09 635

Part name and description	Order No.
DrägerSensor Hydride SC	68 09 980
DrägerSensor NH ₃	68 09 680
DrägerSensor NH ₃ HC	68 09 645
DrägerSensor NO	68 09 625
DrägerSensor NO HC	68 09 715
DrägerSensor NO ₂	68 09 655
DrägerSensor O ₂	68 09 720
DrägerSensor O ₂ LS	68 09 630
DrägerSensor O ₃	68 10 290
DrägerSensor OV1 (Organic Vapours)	68 10 740
DrägerSensor OV2 (Organic Vapours)	68 10 745
DrägerSensor SO ₂	68 09 660
Accessories	
Pump module	on request
Relay module	on request
Cable Entry Set – Daisy Chain	83 17 282
Remote sensor	83 17 275
Remote adapter, 5 m	83 17 270
Remote adapter, 15 m	83 17 998
Remote adapter, 30 m	83 17 999
Duct adapter for remote sensor	83 17 617
Dräger Polytron 7000 Data Dongle	83 17 618
Dräger Polytron 7000 Sensor Dongle	83 17 619
Dräger Polytron 7000 Sensor Diagnostic Dongle	83 17 860
Pump adapter for AC sensor used with 68 09 380	83 17 976
Gas Vision	83 14 034
CC Vision	64 08 515
IR Cable (for PC)	64 08 140
Palm m515Ex	83 17 995
IR Adapter Palm m515	83 18 080
Calibration accessories	
Calibration adapter	68 06 978
Calibration adapter V	68 10 536
Calibration adapter for AC sensor	68 09 380
Calibration flask	68 03 407
Adapter for calibration flask	68 04 620
Manual pump	68 01 933
Test-gas ampoules and calibration gas, see operating instructions for the DrägerSensor being used	

ATEX approval



Translation

(1) EC-Type Examination Certificate

- (2) - Directive 94/9/EC -
Equipment and protective systems intended for use
in potentially explosive atmospheres

(3) **BVS 03 ATEX E 406 X**

(4) **Equipment:** Gas measuring transmitter type P3S and type P3U

(5) **Manufacturer:** Dräger Safety AG & Co. KGaA

(6) **Address:** D - 23560 Lübeck

(7) The design and construction of this equipment and any acceptable variation thereto are specified in the schedule to this type examination certificate.

(8) The certification body of EXAM BBG Prüf- und Zertifizier GmbH, notified body no. 0158 in accordance with Article 9 of the Directive 94/9/EC of the European Parliament and the Council of 23 March 1994, certifies that this equipment has been found to comply with the Essential Health and Safety Requirements relating to the design and construction of equipment and protective systems intended for use in potentially explosive atmospheres, given in Annex II to the Directive.
The examination and test results are recorded in the test and assessment report BVS PP 03.2298 EG.

(9) The Essential Health and Safety Requirements are assured by compliance with:

EN 50014:1997+A1-A2	General requirements
EN 50020:2002	Intrinsic safety 'i'
EN 50021:1999	Type of Protection 'n'
EN 50284:1999	Equipment Group II Category 1G

(10) If the sign "X" is placed after the certificate number, it indicates that the equipment is subject to special conditions for safe use specified in the schedule to this certificate.

(11) This EC-Type Examination Certificate relates only to the design, examination and tests of the specified equipment in accordance to Directive 94/9/EC.
Further requirements of the Directive apply to the manufacturing process and supply of this equipment. These are not covered by this certificate

(12) The marking of the equipment shall include the following:

II 1G EEx ia IIC T4/T6

II 3G EEx nL IIC T4/T6

EXAM BBG Prüf- und Zertifizier GmbH

Bochum, dated 15. January 2004

Signed: Jockers

Signed: Eickhoff

Certification body

Special services unit

Page 1 of 3 to BVS 03 ATEX E 406 X
This certificate may only be reproduced in its entirety and without change
Dinnendahlstrasse 9 44809 Bochum Germany Phone +49 201 172-3947 Fax +49 201 172-3948
(until 31.05.2003: Deutsche Montan Technologie GmbH Am Technologiepark 1 45307 Essen)



(13) Appendix to

(14) **EC-Type Examination Certificate**

BVS 03 ATEX E 406 X

(15) 15.1 Subject and type

Gas measuring transmitter type P3S and type P3U

15.2 Description

The Gas measuring transmitter type P3S and P3U are intended for gas detection under atmospheric conditions in fixed installations. The device is housed in a plastic enclosure (surface resistance $< 10^9 \Omega$). Supply of the electronics and signalling is accomplished by a 2-, 3- or 4-wire connection. For all cases, supply and signalling occur from one common intrinsically safe circuit. Both device types may be equipped with a "Duct Extension". This enables direct mounting of the device to a duct, due to the protruding sensor.

P3S:

The device may be equipped with an integral LC-Display for displaying the measurement value. The front of the device provides a circular bayonet cover, which may be opened for maintenance work (calibration). Behind the opening, control elements and 2 contacts are located. The contacts allow connection of an I.S. certified voltage meter, which enables reading of the measurement value in case no internal display is provided.

P3U:

The device may be equipped with an integral LC-Display for displaying the measurement value and a membrane keypad. For measurements at remote locations the P3U Remote Adapter may be plugged in, instead of the electrochemical sensor. The cable of the P3U Remote Adapter, which may be up to 100 m in length, connects to the P3U Remote Sensor which now accepts the electrochemical sensor.

15.3 Parameters

15.3.1 Gas measuring transmitter type P3S

15.3.1.1 Supply-/signal circuit

Connection via terminals X1/1 and X1/2

Maximum input voltage	U_i	DC	30	V
Maximum input current	I_i		300	mA
Maximum input power	P_i		700	mW
Maximum internal capacitance	C_i		negligible	
Maximum internal inductance	L_i		50	μ H

15.3.1.2 Measuring circuit, for calibration only

Connection via 2 contact areas

Maximum output voltage	U_o	DC	7,6	V
Maximum output current	I_o		1	mA
Maximum external capacitance	C_o		2,5	μ F
Maximum external inductance	L_o		10	mH
Maximum input voltage	U_i	DC	10,4	V
Maximum internal capacitance	C_i		negligible	
Maximum internal inductance	L_i		negligible	



15.3.2 Gas measuring transmitter type P3U

Supply-/signal circuit
 Connection via terminals X7/1 - X7/4 or X8/1 - X8/4 (looped through)

Maximum input voltage	U_i	DC	30	V
Maximum input current	I_i		300	mA
Maximum input power	P_i		700	mW
Maximum internal capacitance	C_i		5	nF
Maximum internal inductance	L_i		50	μ H

15.3.3 Ambient temperature range

II 1G EEx ia IIC T6	- 40 °C up to + 40 °C
II 1G EEx ia IIC T4	- 40 °C up to + 65 °C
II 3G EEx nL IIC T6	- 25 °C up to + 40 °C
II 3G EEx nL IIC T4	- 25 °C up to + 65 °C

(16) Test and assessment report
 BVS PP 03.2298 EG as of 15.01.2004

(17) Special conditions for safe use

17.1 For use in Category 3 areas, the Gas measuring transmitter has been tested according to EN 50021, part 26, Mechanical strength test. The display window has been tested as a light transmitting part and has passed the test at 1 Joule at -25 °C, low risk for mechanical damage.

17.2 The measurement function for explosion protection is not the subject of this EC-Type Examination Certificate.

We confirm the correctness of the translation from the German original.
 In the case of arbitration only the German wording shall be valid and binding.

44809 Bochum, 15.01.2004
 BVS-Rip/Mi A 20030560

EXAM BBG Prüf- und Zertifizier GmbH



 Certification body



 Special services unit



Translation

1st Supplement

(Supplement in accordance with Directive 94/9/EC Annex III number 6)

to the EC-Type Examination Certificate BVS 03 ATEX E 406 X

Equipment: Gas detection transmitter type P3S and P3U

Manufacturer: Dräger Safety AG & Co. KGaA

Address: D-23560 Lübeck

Description

The Essential Health and Safety Requirements with respect to the measuring function for explosion protection are assured by application of:

EN 50104:2002 + A1:2004
EN 50271:2001

This supplement to the EC-type examination certificate covers devices type P3U with software versions 7.2 (main) and V13 (SIOS) for data transmission via the 4-20 mA interface and operation without pump module and without relay module.

This supplement to the EC-type examination certificate covers the measuring function for oxygen (measurement of inertisation) in the measuring range 0 - 25 %(v/v).

Test report

Test report PFG-no. 413000504P dated 22/06/2005

Special conditions for safe use

- see EC-type examination certificate BVS 03 ATEX E 406 X, 17.1
- For the sensor O2 (part-no. 68 09 720), the test "unpowered storage of the apparatus" was performed in the temperature range -20 ... +40 °C.

EXAM BBG Prüf- und Zertifizier GmbH

Bochum, dated 23/06/2005

Signed: Jockers

Signed: Kiesewetter

Certification body

Special services unit

Page 1 of 2 to BVS 03 ATEX E 406 X N1

This certificate may only be reproduced in its entirety and without change.


Dinuendahlstrasse 9 44809 Bochum Telefon-Phone 0234/3696-105 Telefax-Fax 0234/3696-110



We confirm the correctness of the translation from the German original.
In the case of arbitration only the German wording shall be valid and binding.

44809 Bochum, 23. June 2005
PFG-Kie

EXAM BBG Prüf- und Zertifizier GmbH

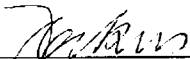

Certification body



Special services unit



Translation
2nd Supplement

(Supplement in accordance with Directive 94/9/EC Annex III number 6)

to the EC-Type Examination Certificate
BVS 03 ATEX E 406 X

Equipment: Gas measuring transmitter type P3FB
Manufacturer: Dräger Safety AG & Co. KGaA
Address: 23560 Lübeck, Germany

Description

The Gas measuring transmitter type P3U can be modified according to the descriptive documents as mentioned in the pertinent test and assessment report and receives then the marking:

type P3FB

The gas measuring transmitter type P3FB is identical to the type P3U, except that the printed circuit board "4-20mA/HART" is replaced by the printed circuit board "PB/FF module", which provided a field bus connection in accordance with the FISCO/FNICO concept classified in IEC 60079-27 (Terminal X7).

The Essential Health and Safety Requirements of the modified equipment are assured by compliance with:

EN 50014:1997+A1-A2	General requirements
EN 50020:2002	Intrinsic safety 'i'
EN 60079-15:2003	Type of Protection 'n'
EN 50284:1999	Equipment Group II Category 1G
IEC 60079-27:2005	Fieldbus intrinsically safe concept (FISCO) and Fieldbus non-incendive concept (FNICO)

The marking of the equipment shall include the following:

II 1G EEx ia IIC T4/T6
 II 3G EEx nL IIC T4/T6

Page 1 of 3 to BVS 03 ATEX E 406 X / N2

This certificate may only be reproduced in its entirety and without change.

Dinnendahlstrasse 9 44809 Bochum Germany Phone +49 234/3696-105 Fax +49 234/3696-110 E-mail ZS@bg-exam.de



Parameters

1 Gas measuring transmitter type P3FB

Field bus connection in accordance with the FISCO/FNICO concept, connection only via terminal X7

Maximum input voltage	U_i	DC	24	V
Maximum input current	I_i		380	mA
Maximum input power	P_i		5.32	W
Maximum internal capacitance	C_i		5	nF
Maximum internal inductance	L_i		10	μ H

2 Ambient temperature range

II 1G EEx ia IIC T6	-40 °C up to +40 °C
II 1G EEx ia IIC T4	-40 °C up to +65 °C
II 3G EEx nL IIC T6	-25 °C up to +40 °C
II 3G EEx nL IIC T4	-25 °C up to +65 °C

Special conditions for safe use

The measurement function for explosion protection is not the subject of this supplement to the EC-Type Examination Certificate.

Test and assessment report

BVS PP 03.2298 EG as of 07.11.2006

EXAM BBG Prüf- und Zertifizier GmbH
Bochum, dated 07. November 2006

Signed: Dr. Eickhoff

Certification body

Signed: Schumann

Special services unit



We confirm the correctness of the translation from the German original.
In the case of arbitration only the German wording shall be valid and binding.

44809 Bochum, 07.11.2006
BVS-Rip/Mi A 20060540

EXAM BBG Prüf- und Zertifizier GmbH



Certification body



Special services unit



Translation

3rd Supplement

(Supplement in accordance with Directive 94/9/EC Annex III number 6)

to the EC-Type Examination Certificate

BVS 03 ATEX E 406 X

Equipment: Gas detection transmitter type P3U
Manufacturer: Dräger Safety AG & Co. KGaA
Address: D-23560 Lübeck

Description

The Essential Health and Safety Requirements with respect to the measuring function for explosion protection are assured by application of:

EN 50104:2002 + A1:2004
EN 50271:2001

This supplement to the EC-type examination certificate covers operation of the devices with pump module or relay module and modifications of the software (main).

This supplement to the EC-type examination certificate covers devices type P3U with software versions 7.5, 7.6 and 7.8 (main), V13 (SIOS) and V11 and V12 (pump module) for data transmission via the 4-20 mA interface.

This supplement to the EC-type examination certificate covers the measuring function for oxygen (measurement of inertisation) in the measuring range 0 - 25 %(v/v).

Test report

Test report PFG-no. 413000504P NI dated 27/04/2007

Special conditions for safe use

- See 1st supplement to the EC-type examination certificate BVS 03 ATEX E 406 X
- Devices with pump module or relay module shall not be operated in potentially explosive atmospheres. Suitable measures for explosion protection shall be taken when the gas probe is pumped out of potentially explosive atmospheres.
- The relay module shall be operated with devices with software version 7.8 (main).
- Alarms shall only be configured to be "non acknowledgeable".
- If the pump module is used the flow failure detection shall be activated.
- The sensor O2 LS shall only be used in conjunction with the pump module in vibration-free installations.

DEKRA EXAM GmbH

Bochum, dated 30/04/2007

Signed: Jockers

Certification body

Signed: Kiesewetter

Special services unit

Page 1 of 2 to BVS 03 ATEX E 406 X N3

This certificate may only be reproduced in its entirety and without change.

Dissemination 44809 Bochum Telefon-Phone 0234/3696-105 Telefax-Fax 0234/3696-110 e-mail ex-am@dekra.com



We confirm the correctness of the translation from the German original.
In the case of arbitration only the German wording shall be valid and binding.

44809 Bochum, 30. April 2007
PFG-Kie

DEKRA EXAM GmbH



Certification body



Special services unit

Metrological certificate of approval

Neutralization measurements for the explosion protection according to BVS 03 ATEX E 406 X and monitoring of oxygen deficiency or excess of oxygen according to EN 50104, PFG No. 41300504.

Caution:

Not suitable for use in oxygen-enriched atmospheres, i.e. oxygen content exceeds 21 vol. %. Explosion hazard!

Section 5 of the Suitability Test Report

5. Notes on use

Based on the measurement results and the specifications of test report PFG No. 41300504P, the P3U transmitter (Polytron 7000) made by Dräger Safety AG & Co. KGaA is suitable for oxygen measurements within a measuring range of 0 to 25 % O₂ (regarding its use for ambient air monitoring for oxygen deficiency or excess oxygen), in as far as its characteristics and its design matches the records stated in the test report PFG No. 41300504P, is operated accordingly and if the conditions stipulated below are met:

- The instructions for use made available to and examined by EXAM are to be followed precisely. The stipulated operating conditions are to be met when using the gas warning device.
- Prior to using the gas warning device, the time settings are to be checked to ensure that the warning function of the device is triggered early enough to avoid critical safety conditions. If necessary, the alarm level is to be set high above (or, depending on the application, below) the safety limit value.
- The German BG Chemie-Information BGI 836 (3) are to be observed.
- A permanent identification tag is to be applied to the devices, which, in addition to information on manufacturer, type and production order number, is labelled as follows:

"PFG No. 41300504"

This does not render other obligations to mark the device invalid. With this identification tag, the manufacturer confirms that the devices described in this report have the specified characteristics and technical features. Any device without this identification tag does not correspond with this report.
- On request, the operator is to receive a complete copy of this report as well as one of the test report PFG No. 41300504P.
- The relay module may only be operated with devices equipped with software version 7.8 (main).
- Alarms must always be configured as "Cannot be acknowledged".
- If the pump module is used, the flow rate alarm must be activated.
- The O₂ LS sensor must always be installed at vibration-free locations when used in combination with the pump module.

Overview of the adjustment ranges

	page	Adjustment range	Default value	Note
Calibration gas concentration	52	3,750 ppm to 262,500 ppm 2,997 ppm to 1,050,000 ppm	209,000 ppm 209,000 ppm	for DrägerSensor O ₂ -LS (6809630) for DrägerSensor O ₂ (6809720)
A1 alarm threshold	57	999 ppm to 250,000 ppm 999 ppm to 1,000,000 ppm	190,000 ppm 190,000 ppm	for DrägerSensor O ₂ -LS (6809630) for DrägerSensor O ₂ (6809720)
A1 alarm direction	57	exceeding/falling below	falling below falling below	for DrägerSensor O ₂ -LS (6809630) for DrägerSensor O ₂ (6809720)
A1 alarm latching	57	latching/non-latching	latching latching	for DrägerSensor O ₂ -LS (6809630) for DrägerSensor O ₂ (6809720)
A1 alarm acknowledgement	58	acknowledgeable/not acknowledgeable	not acknowledgeable/ not acknowledgeable	for DrägerSensor O ₂ -LS (6809630) for DrägerSensor O ₂ (6809720)
A1 alarm hysteresis	58	dropping below A1 alarm: 999 ppm to 2,500,000 ppm – A1 999 ppm to 1,000,000 ppm – A1 exceeding A1 alarm: 999 ppm to A1 – 999 ppm 999 ppm to A1 – 999 ppm	0 ppm 0 ppm 0 ppm 0 ppm	for DrägerSensor O ₂ -LS (6809630) for DrägerSensor O ₂ (6809720) for DrägerSensor O ₂ -LS (6809630) for DrägerSensor O ₂ (6809720)
A2 alarm threshold	58	999 ppm to 250,000 ppm 999 ppm to 1,000,000 ppm	230,000 ppm 230,000 ppm	for DrägerSensor O ₂ -LS (6809630) for DrägerSensor O ₂ (6809720)
A2 alarm direction	58	exceeding/falling below	exceeding exceeding	for DrägerSensor O ₂ -LS (6809630) for DrägerSensor O ₂ (6809720)
A2 alarm latching	58	latching/non-latching	latching latching	for DrägerSensor O ₂ -LS (6809630) for DrägerSensor O ₂ (6809720)
A2 alarm acknowledgement	58	acknowledgeable/not acknowledgeable	not acknowledgeable/ not acknowledgeable	for DrägerSensor O ₂ -LS (6809630) for DrägerSensor O ₂ (6809720)
A2 alarm hysteresis	58	dropping below A2 alarm: 999 ppm to 2,500,000 ppm – A2 999 ppm to 1,000,000 ppm – A2 exceeding A2 alarm: 999 ppm to A2 – 999 ppm 999 ppm to A2 – 999 ppm	0 ppm 0 ppm 0 ppm 0 ppm	for DrägerSensor O ₂ -LS (6809630) for DrägerSensor O ₂ (6809720) for DrägerSensor O ₂ -LS (6809630) for DrägerSensor O ₂ (6809720)
Analogue measuring range	64	49,988 ppm to 250,000 ppm 49,988 ppm to 1,000,000 ppm	250,000 ppm 250,000 ppm	for DrägerSensor O ₂ -LS (6809630) for DrägerSensor O ₂ (6809720)
Settings for calibration interval	70	0 to 540 days 0 to 366 days	270 days 183 days	for DrägerSensor O ₂ -LS (6809630) for DrägerSensor O ₂ (6809720)
Flow fault	56	On / Off	ON	
Pump output	56	0 % to 100 %	30 %	
Flow threshold for fault	56	0.3 L/min to 1.4 L/min	0.3 L/min	
Flow threshold for note	56	0.4 L/min to 1.4 L/min	0.4 L/min	
Alarm	57	On / Off	ON	
Set acknowledgement	58	On / Off	ON	
Warning on/off	64	On / Off	Off	
Warning interval T1	65	2 s to 60 s	10 s	
Warning interval T2	65	1 s to 59 s	1 s	
Warning level	65	3 mA to 22 mA	3 mA	
Maintenance level	65	3 mA to 22 mA (2-wire) 1 mA to 22 mA (3-wire)	3.4 mA	
Autocalibration setting	68	On / Off	Off	
– Sensor test setting	69	On / Off	ON	
Sensor lock	69	On / Off	Off	
Logger on/off	71	On / Off	ON	
Peak / average	72	Peak value/ average value	Average	
Trigger on/off	72	On / Off	ON	
Trigger value	72	0 % to 20 %	1 %	
Stack/roll	73	overwrite/hold	Roll	

Information on DrägerSensor O₂ (6809720)

Principle of measurement: The DrägerSensor O₂ (6809720) is an electrochemical two-electrode-sensor for measurement of oxygen (O₂) in air. The sensor can only be operated in connection with a suitable Dräger transmitter.

Reaction at the measuring electrode: $O_2 + 2 H_2O + 4 e^- \Rightarrow 4 OH^-$

Reaction at the counter-electrode: $2 Pb \Rightarrow 2 Pb_2^+ + 4 e^-$

Ambient conditions:

Operational Characteristics -5 °C to 40 °C, temporarily -20 °C to 55 °C
700 hPa to 1300 hPa

10 to 95 % relative humidity, non condensing

Storage 0 °C to 40 °C

700 hPa to 1300 hPa

30 to 70 % relative humidity, non condensing

Measured value time setting:

t_{0...20} <12 seconds

t_{0...90} <30 seconds

Note: In the case of temperatures below -5 °C, the measured value time setting may increase.

Calibration:

Flow rate: 0.5 L/min

Zero gas Nitrogen (99.9 Vol.-% N₂)

Calibration gas Oxygen / nitrogen – mixed gas

Warming-up time:

Sensor is ready to operate after 15 minutes

Sensor is ready to calibrate after 2 hours

Cross sensitivities

No cross sensitivities against pollution gases with a range up to 100 ppm. For gases in a concentration range larger than 1 Vol.-%: see table. The influence of the O₂ displacement is in not taken into account in the table (partial pressure measurement).

Gas / vapour	Chemical symbol	Gas concentration	Measurement value deviation in Vol.-% O ₂
acetone	CH ₃ COCH ₃	1 Vol.-%	0.1
ethane	C ₂ H ₆	10 Vol.-%	0.1
ethanol	C ₂ H ₅ OH	1 Vol.-%	0.1
ethylene	C ₂ H ₄	5 Vol.-%	0.1
ethine	C ₂ H ₂	2 Vol.-%	0.1
carbon dioxide	CO ₂	5 Vol.-%	0.1
carbon monoxide	CO	1 Vol.-%	0.1
methane	CH ₄	10 Vol.-%	0.1
methanol	CH ₃ OH	1 Vol.-%	0.1
propane	C ₃ H ₈	5 Vol.-%	0.1
hydrogen	H ₂	10 Vol.-%	0.1

Increased sensor drift can be caused by high sour gas concentrations (> 1 Vol.-%), which could make shorter calibration intervals necessary. The sensor service life is reduced in dependence on the duration and the concentration of the sour gases (e.g. lifetime in atmospheres containing CO₂: 5000 Vol.-% CO₂ x hours).

Organic solvents (e.g. acetone, propyl alcohol, etc.) dissolve in the plastic parts of the sensor. If allowed to react over several days in larger concentrations (> 1 Vol.-%), these substances can cause sensor drift can which could make shorter calibration intervals necessary. This will not reduce the sensor service life.

Information on DrägerSensor O₂-LS (6809630)

Principle of measurement:	The DrägerSensor O ₂ -LS (6809630) is an electrochemical three-electrode-sensor for measurement of oxygen (O ₂) in air. The sensor can only be operated in connection with a suitable Dräger transmitter. The sensor cannot be used for oxygen measurements in the presence of helium!
Reaction at the measuring electrode:	$O_2 + 4 H^+ + 4 e^- \Rightarrow 2 H_2O$
Reaction at the counter-electrode:	$2 H_2O \Rightarrow O_2 + 4 H^+ + 4 e^-$
Ambient conditions:	
Operational Characteristics	-40 °C to 60 °C, short-term up to 65 °C 700 hPa to 1300 hPa 5 to 95 % relative humidity, non condensing
storage (in original packaging)	0 °C to 40 °C
Measured value time setting:	
t _{0...20'}	<12 seconds
t _{0...90}	<30 seconds
Calibration:	
Flow rate:	0.5 L/min
Zero gas	Nitrogen (99.9 Vol.-% N ₂)
Calibration gas	Oxygen / nitrogen - mixed gas
Warming-up time:	
Sensor is ready to operate after	90 minutes
Sensor is ready to calibrate after	6 hours

Cross sensitivities

The table shows the reactions of the sensor to other gases than the measured gas (cross sensitivities). The listed values are typical and are valid for new sensors. The table does not lay a claim on completeness. Gas mixtures can be displayed as the sum of all components. Gases with negative sensitivity can cancel out a positive sensor display. The influence of the O₂ displacement is in not taken into account in the table.

Example:

With 2 Vol.-% ethylene in the air – measurement value deviation due to cross sensitivities (table value) = -1 Vol.-% O₂ O₂ displacement caused by 2 Vol.-% ethylene (2% of 20 Vol.-% O₂) = -0.4 Vol.-% O₂

Polytron transmitter display (20.9 - 1 - 0.4) = 19.5 Vol.-% O₂.

Gas / vapour	Chemical symbol	Gas concentration	Measurement value deviation in Vol.-% with dust filter
acetaldehyde	CH ₃ CHO	50 ppm	no influence
acrylonitrile	H ₂ C=CH-CN	80 ppm	no influence
ammonia	NH ₃	50 ppm	no influence
arseniuretted hydrogen	AsH ₃	3 ppm	no influence
butadiene	CH ₂ CHCHCH ₂	50 ppm	no influence
tert-butylmercaptane	(CH ₃) ₃ CSH	4 ppm	no influence
chlorine	Cl ₂	8 ppm	no influence
hydrogen chloride	HCl	20 ppm	no influence
hydrocyanic acid	HCN	20 ppm	no influence
boroethane	B ₂ H ₆	5 ppm	no influence
1.1-dichloroethane	C ₂ H ₄ Cl ₂	50 ppm	no influence
diethylamine	(C ₂ H ₅) ₂ NH	100 ppm	no influence
diethyl ether	(C ₂ H ₅) ₂ O	400 ppm	0.1 (-) *
epichlorhydrine	C ₂ H ₃ OCH ₂ Cl	35 ppm	no influence
ethanol	C ₂ H ₅ OH	250 ppm	no influence
ethylene	C ₂ H ₄	2 Vol.-%	1 (-) *

Gas / vapour	Chemical symbol	Gas concentration	Measurement value deviation in Vol.-% with dust filter
ethine	C ₂ H ₂	1 Vol.-%	0.5 (-) *
ethylene oxide	C ₂ H ₄ O	20 ppm	2 (-) *
hydrogen fluoride	HF	15 ppm	no influence
formaldehyde	HCHO	40 ppm	no influence
carbon dioxide	CO ₂	5 Vol.-%	no influence
carbon monoxide	CO	100 ppm	0.1 (-) *
methyl methacrylate	CH ₂ C(CH ₃)COOCH ₃	50 ppm	no influence
methylamine	CH ₃ NH ₂	100 ppm	no influence
carbonyl chloride	COCl ₂	1 ppm	no influence
phosphine	PH ₃	10 ppm	no influence
i-propyl alcohol	(CH ₃) ₂ CHOH	500 ppm	no influence
propylene	CH ₃ CHCH ₂	50 ppm	0.2 (-) *
sulphur dioxide	SO ₂	20 ppm	no influence
hydrogen sulfide	H ₂ S	20 ppm	no influence
hydrogen selenide	SeH ₂	5 ppm	no influence
hydrosilicon	SiH ₄	5 ppm	no influence
nitrogen dioxide	NO ₂	50 ppm	no influence
nitrogen monoxide	NO	20 ppm	no influence
styrene	C ₆ H ₅ CHCH ₂	30 ppm	no influence
tetrahydrofurane	C ₄ H ₈ O	60 ppm	no influence
tetrahydrothiophene	C ₄ H ₈ S	5 ppm	no influence
vinyl chloride	C ₂ H ₃ Cl	50 ppm	no influence
hydrogen	H ₂	1 Vol.-%	1.5 (-) *
hydrogen peroxide	H ₂ O ₂	5 ppm	no influence

(-) * Negative display.


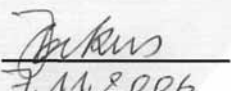

Attention:


The influence of unsaturated hydrocarbons, alcohols or hydrogen in higher concentrations or over a longer period of time (dose approx. 100,000 ppm x hours) will let the sensor drop out.


Attention:


When used in transmitters with pump module, the O₂ LS sensor (68 09 630) must always be installed at vibration-free locations. If used in this combination, vibrations may cause the measured value to deviate outside of the permissible range.


IECEX approval

		<h2 style="text-align: center;">IECEX Certificate of Conformity</h2>	
INTERNATIONAL ELECTROTECHNICAL COMMISSION IEC Certification Scheme for Explosive Atmospheres <small>for rules and details of the IECEX Scheme visit www.iecex.com</small>			
Certificate No.:	IECEX BVS 04.0003X	Issue No.:	1
Status:	Current		
Date of Issue:	2006-11-07	Page	1 of 5
Applicant:	Dräger Safety AG & Co. KGaA Revalstrasse 1 23560 Lübeck Germany		
Electrical Apparatus:	Gas measuring transmitter type P3S, type P3U and type P3FB <i>Optional accessory:</i>		
Type of Protection:	General Requirements, intrinsic safety, fieldbus intrinsically safe concept (FISCO) and Fieldbus non-incendive concept (FINCO)		
Marking:	Ex ia IIC T6 Tamb -40 °C up to +40 °C Ex ia IIC T4 Tamb -40 °C up to +65 °C		
Approved for issue on behalf of the IECEX Certification Body:	Dr. R. Jockers Head of Certification Body		
Signature: (for printed version)			
Date:	7.11.2006		
	1. This certificate and schedule may only be reproduced in full. 2. This certificate is not transferable and remains the property of the issuing body. 3. The Status and authenticity of this certificate may be verified by visiting the Official IECEX Website.		
Certificate issued by:	EXAM BBG Prüf- und Zertifizier GmbH Dinnendahlstrasse 9 44809 Bochum Germany		
			

		IECEX Certificate of Conformity	
Certificate No.:	IECEX BVS 04.0003X	Issue No.:	1
Date of Issue:	2006-11-07	Page 2 of 5	
Manufacturer:	Dräger Safety AG & Co. KGaA Revalstrasse 1 23560 Lübeck Germany		
Manufacturing location(s):			
<p>This certificate is issued as verification that a sample(s), representative of production, was assessed and tested and found to comply with the IEC Standard list below and that the manufacture's quality system, relating to the Ex products covered by this certificate, was assessed and found to comply with the IECEX Quality system requirements. This certificate is granted subject to the conditions as set out in IECEX Scheme Rules, IECEX 02 and Operational Documents as amended.</p>			
STANDARDS: The electrical apparatus and any acceptable variations to it specified in the schedule of this certificate and the identified documents, was found to comply with the following standards:			
IEC 60079-0 : 2000 Edition: 3.1	Electrical apparatus for explosive gas atmospheres - Part 0: General requirements		
IEC 60079-11 : 1999 Edition: 4	Electrical apparatus for explosive gas atmospheres - Part 11: Intrinsic safety 'i'		
IEC 60079-27 : 2005-04 Edition: 1.0	Electrical apparatus for explosive atmospheres- Part 27: Fieldbus intrinsically safe concept (FISCO) and Fieldbus non-incendive concept (FINCO)		
<p><i>This Certificate does not indicate compliance with electrical safety and performance requirements other than those expressly included in the Standards listed above.</i></p>			
TEST & ASSESSMENT REPORTS: A sample(s) of the equipment listed has successfully met the examination and test requirements as recorded in			
IECEX ATR:		File Reference:	
DE/BVS/04/2009		A 20030561	
DE/BVS/04/2009/N1		A 20060541	

		<h2 style="margin: 0;">IECEX Certificate of Conformity</h2>	
Certificate No.:	IECEX BVS 04.0003X		Issue No.: 1
Date of Issue:	2006-11-07	Page 3 of 5	
<h3 style="margin: 10px 0;">Schedule</h3>			
<p>EQUIPMENT: <i>Equipment and systems covered by this certificate are as follows:</i></p>			
<p><u>Description</u> The Gas Detectors type P3S and P3U are intended for gas detection under atmospheric conditions in fixed installations. The device is housed in a plastic enclosure (surface resistance < 1 GΩ). Supply of the electronics and signalling is accomplished by a 2-, 3- or 4-wire connection. For all cases, supply and signalling occur from one common intrinsically safe circuit. Both device types may be equipped with a "Duct Extension". This enables direct mounting of the device to a duct, due to the protruding sensor.</p>			
<p><u>P3S:</u> The device may be equipped with an integral LC-Display for displaying the measurement value. The front of the device provides a circular bayonet cover, which may be opened for maintenance work (calibration). Behind the opening, control elements and 2 contacts are located. The contacts allow connection of an I.S. certified voltage meter, which enables reading of the measurement value in case no internal display is provided.</p>			
<p><u>P3U:</u> The device may be equipped with an integral LC-Display for displaying the measurement value and a membrane keypad. For measurements at remote locations the P3U Remote Adapter may be plugged in, instead of the electro-chemical sensor. The cable of the P3U Remote Adapter, which may be up to 100 m in length, connects to the P3U Remote Sensor which now accepts the electrochemical sensor.</p>			
<p><u>Marking</u></p>			
1	For the gas measuring transmitter P3:	2	For the remote adapter:
	The name of the manufacturer or his trademark Type P3S or P3U Ex ia IIC T4 (Tamb -40 °C up to +65 °C) Ex ia IIC T6 (Tamb -40 °C up to +40 °C) Serial number Certificate number		The name of the manufacturer or his trademark Type P3U Remote Adapter Ex ia IIC T4 (Tamb -40 °C up to +65 °C) Ex ia IIC T6 (Tamb -40 °C up to +40 °C) Serial number Certificate number
3	For the remote sensor:		
	The name of the manufacturer or his trademark Type P3U Remote Sensor Ex ia IIC T4 (Tamb -40 °C up to +65 °C) Ex ia IIC T6 (Tamb -40 °C up to +40 °C) Serial number Certificate number		
<p>CONDITIONS OF CERTIFICATION: YES as shown below:</p>			
<p>The measurement function for explosion protection is not the subject of this IECEX ASSESSMENT AND TEST REPORT.</p>			

		<h2 style="margin: 0;">IECEX Certificate of Conformity</h2>	
Certificate No.:		IECEX BVS 04.0003X	
Date of Issue:		2006-11-07	Issue No.: 1
		Page 4 of 5	
EQUIPMENT(continued):			
<u>Parameters</u>			
1	Gas measuring transmitter type P3S		
1.1	Supply-/signal circuit		
	Connection via terminals X1/1 and X1/2		
	Voltage	U _i	DC 30 V
	Current	i _i	300 mA
	Power	P _i	700 mW
	maximum internal capacitance	C _i	negligible
	maximum internal inductance	L _i	50 µH
1.2	Measuring circuit, for calibration only		
	Connection via 2 contact areas		
	Voltage	U _o	DC 7.6 V
	Current	i _o	1 mA
	maximum external capacitance	C _o	2.5 µF
	maximum external inductance	L _o	10 mH
	Voltage	U _i	DC 10.4 V
	maximum internal capacitance	C _i	negligible
	maximum internal inductance	L _i	negligible
2	Gas measuring transmitter type P3U		
	Supply-/signal circuit		
	Connection via terminals X7/1 - X7/4 or X8/1 - X8/4 (looped through)		
	Voltage	U _i	DC 30 V
	Current	i _i	300 mA
	Power	P _i	700 mW
	maximum internal capacitance	C _i	5 nF
	maximum internal inductance	L _i	50 µH
3	Ambient temperature range Tamb		
	Ex ia IIC T6	-40 °C up to +40 °C	
	Ex ia IIC T4	-40 °C up to +65 °C	

		<h2 style="margin: 0;">IECEX Certificate of Conformity</h2>	
Certificate No.:	IECEX BVS 04.0003X		
Date of Issue:	2006-11-07	Issue No.:	1
		Page 5 of 5	
DETAILS OF CERTIFICATE CHANGES (for issues 1 and above):			
<u>Description</u>			
The gas measuring transmitter type P3FB provides a field bus connection in accordance with the FISCO concept classified in IEC 60079-27 (Terminal X7).			
Further minor changes were accomplished at the gas measuring transmitter type P3U, the PCB Remoteadapter and the PCB Remotesensor.			
<u>Parameters</u>			
Gas measuring transmitter type P3FB			
Field bus connection in accordance with the FISCO concept, connection only via terminal X7			
Maximum input voltage	U_i	DC 24	V
Maximum input current	I_i	380	mA
Maximum input power	P_i	5.32	W
Maximum internal capacitance	C_i	5	nF
Maximum internal inductance	L_i	10	μ H

UL approval



Northbrook Division
333 Pfingsten Road
Northbrook, IL 60062-2096 USA
www.ul.com
tel: 1 847 272 8800
fax: 1 847 272 8129
Customer service: 1 877 854 3577

NOTICE OF AUTHORIZATION TO APPLY THE UL MARK

2004-02-12

Mr. Thomas Treptow
Draeger Safety AG & Co KGaA
Revalstrasse 1
23560 Luebeck Germany

Fax number: 49-451-882-73191

Reference: File E180059 Project 03NK30215

Product: Models P3S (Polytron 3000) And P3U (Polytron 7000) Gas Detectors,
Intrinsically Safe For Use In Class I, Division 1, Groups A, B, C, D;
Class II, Division 1, Groups E, F, G When Connected Per Draeger Control Drawing SE20105

Dear Mr. Treptow,

UL's investigation of your product has been completed under the above project number and the subject product was determined to comply with the applicable requirements.

This letter temporarily supplements the UL Follow-Up Services Procedure and serves as authorization to apply the UL Classification Mark only at the factory under UL's Follow-Up Service Program to the subject product, which is constructed as described below:

Identical to Model P3U, which was submitted to UL for this investigation and identical to Model P3S (Polytron C) which is covered in Follow-Up Services Procedure, File E180059, Volume 1, Section 2.

This authorization is effective from the date of this Notice and only for products at the indicated manufacturing locations. Records in the Follow-Up Services Procedure covering the product are now being prepared and will be sent to the indicated manufacturing locations in the near future. Please note that Follow-Up Services Procedures are sent to the manufacturers only unless the Applicant specifically requests this document.

Products that bear the UL Mark shall be identical to those that were evaluated by UL and found to comply with UL's requirements. If changes in construction are discovered, appropriate action will be taken for products not in conformance with UL's requirements and continued use of the UL Mark may be withdrawn.

Sincerely,


Reviewed by:

Frederic J. Cleary
Lead Engineering Associate
Hazardous Locations, Gas & Oil
Conformity Assessment Services
Tel: 847-664-2743
Fax: 847-313-2743
E-mail: Frederic.J.Cleary@us.ul.com

Benjamin P. Schaefer
Staff Engineer
Hazardous Locations, Gas & Oil
Conformity Assessment Services
E-mail: benjamin.schaefer@us.ul.com

An independent organization working for a safer world with integrity, precision and knowledge.



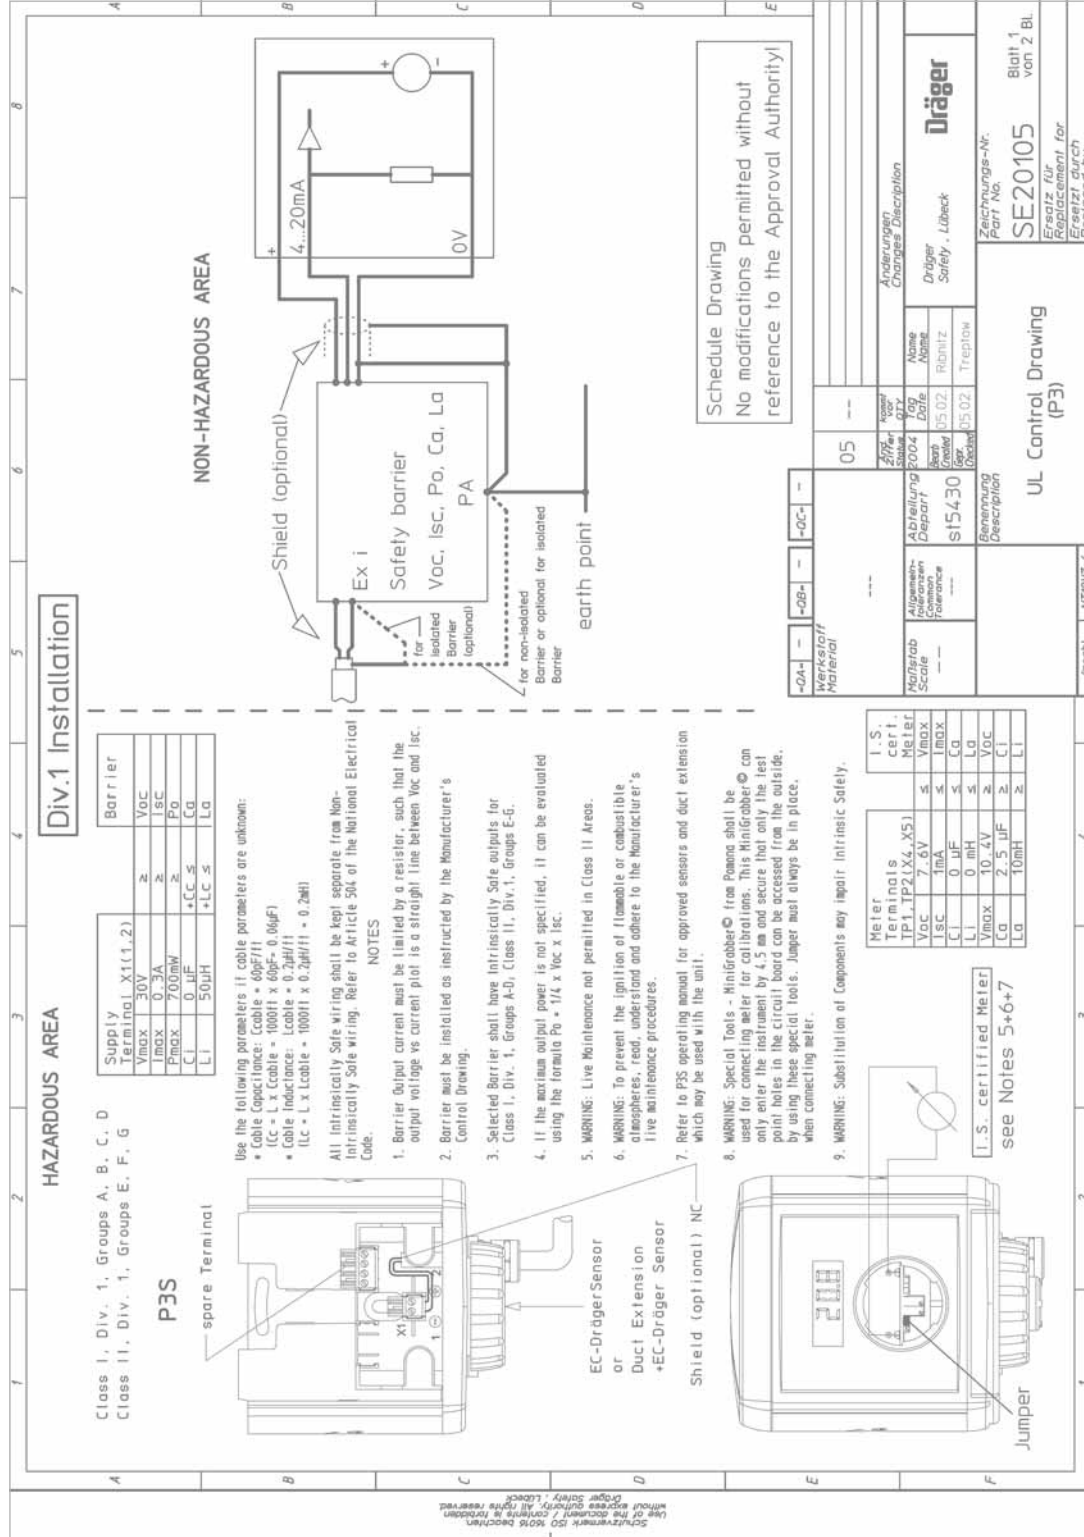

Div.1 Installation

HAZARDOUS AREA

Class I, Div. 1, Groups A, B, C, D
Class II, Div. 1, Groups E, F, G

Supply Terminal, X1(1,2)	Barrier
Vmax 30V	≥ Voc
Imax 70mA	≥ Isc
Pmax 700mW	≥ Po
LI 0 μF	≥ CC ≤
LI 50 μH	≥ LC ≤

Use the following parameters if cable parameters are unknown:

- Cable Capacitance: $C_{cable} = 60pF/m$
- $I_{CC} = L \times C_{cable} = 1000fI \times 60pF = 0.06pF$
- Cable Inductance: $L_{cable} = 0.2mH/m$
- $I_{LC} = L \times C_{cable} = 1000fI \times 0.2mH/m = 0.2mH$

All Intrinsic Safe wiring shall be kept separate from Non-Intrinsic Safe wiring. Refer to Article 304 of the National Electrical Code.


NOTES

- Barrier output current must be limited by a resistor, such that the output voltage vs current plot is a straight line between Voc and Isc.
- Barrier must be installed as instructed by the Manufacturer's Control Drawing.
- Selected Barrier shall have Intrinsically Safe outputs for Class I, Div. 1, Groups A-D, Class II, Div. 1, Groups E-G.
- If the maximum output power is not specified, it can be evaluated using the formula $P_o = I_{Isc} \times V_{oc} \times I_{sc}$.
- WARNING:** Live Maintenance not permitted in Class II Areas.
- WARNING:** To prevent the ignition of flammable or combustible atmospheres, read, understand and adhere to the Manufacturer's live maintenance procedures.
- Refer to P3S operating manual for approved sensors and duct extension which may be used with the unit.

- WARNING:** Special Tools - MiniGrabber® from Pommers shall be used for connecting meter for calibrations. This MiniGrabber® can only enter the instrument by 4.5 mm and secure that only the test point notes in the circuit board can be accessed from the outside. by using these special tools. Jumper must always be in place, when connecting meter.
- WARNING:** Substitution of Components may impair intrinsic safety.

Meter Terminals	I.S. Cert. Me Let
Voc	7.6V ≤ Vmax
Isc	1mA ≤ Imax
LI	0 μF ≤ Ca
LI	0 mH ≤ La
Vmax	10.2V ≤ Voc
Ca	2.5 μF ≤ C1
La	10mH ≥ L1

I.S. certified Meter see Notes 5+6+7

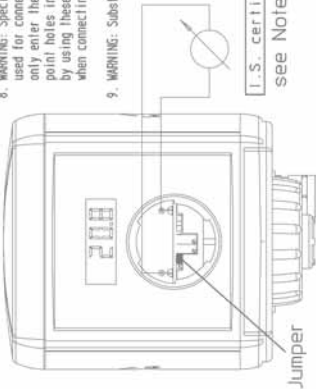


Schedule Drawing
No modifications permitted without reference to the Approval Authority

Material		05	---		---		---		---		---		---		---		---	
Material		Abteilung		E0004		Name		Dräger		Safety - Löbeck		Zustimmungs-Nr.		SE20105		Blatt 1		
Material		Abteilung		E0004		Name		Dräger		Safety - Löbeck		Zustimmungs-Nr.		SE20105		Blatt 1		
Material		Abteilung		E0004		Name		Dräger		Safety - Löbeck		Zustimmungs-Nr.		SE20105		Blatt 1		
Material		Abteilung		E0004		Name		Dräger		Safety - Löbeck		Zustimmungs-Nr.		SE20105		Blatt 1		
Material		Abteilung		E0004		Name		Dräger		Safety - Löbeck		Zustimmungs-Nr.		SE20105		Blatt 1		
Material		Abteilung		E0004		Name		Dräger		Safety - Löbeck		Zustimmungs-Nr.		SE20105		Blatt 1		
Material		Abteilung		E0004		Name		Dräger		Safety - Löbeck		Zustimmungs-Nr.		SE20105		Blatt 1		
Material		Abteilung		E0004		Name		Dräger		Safety - Löbeck		Zustimmungs-Nr.		SE20105		Blatt 1		
Material		Abteilung		E0004		Name		Dräger		Safety - Löbeck		Zustimmungs-Nr.		SE20105		Blatt 1		

UL Control Drawing (P3)

Mech: NTRDZ-4

Schutzartmark 150 1015 beachten
Ul approval
Dräger Safety - Löbeck

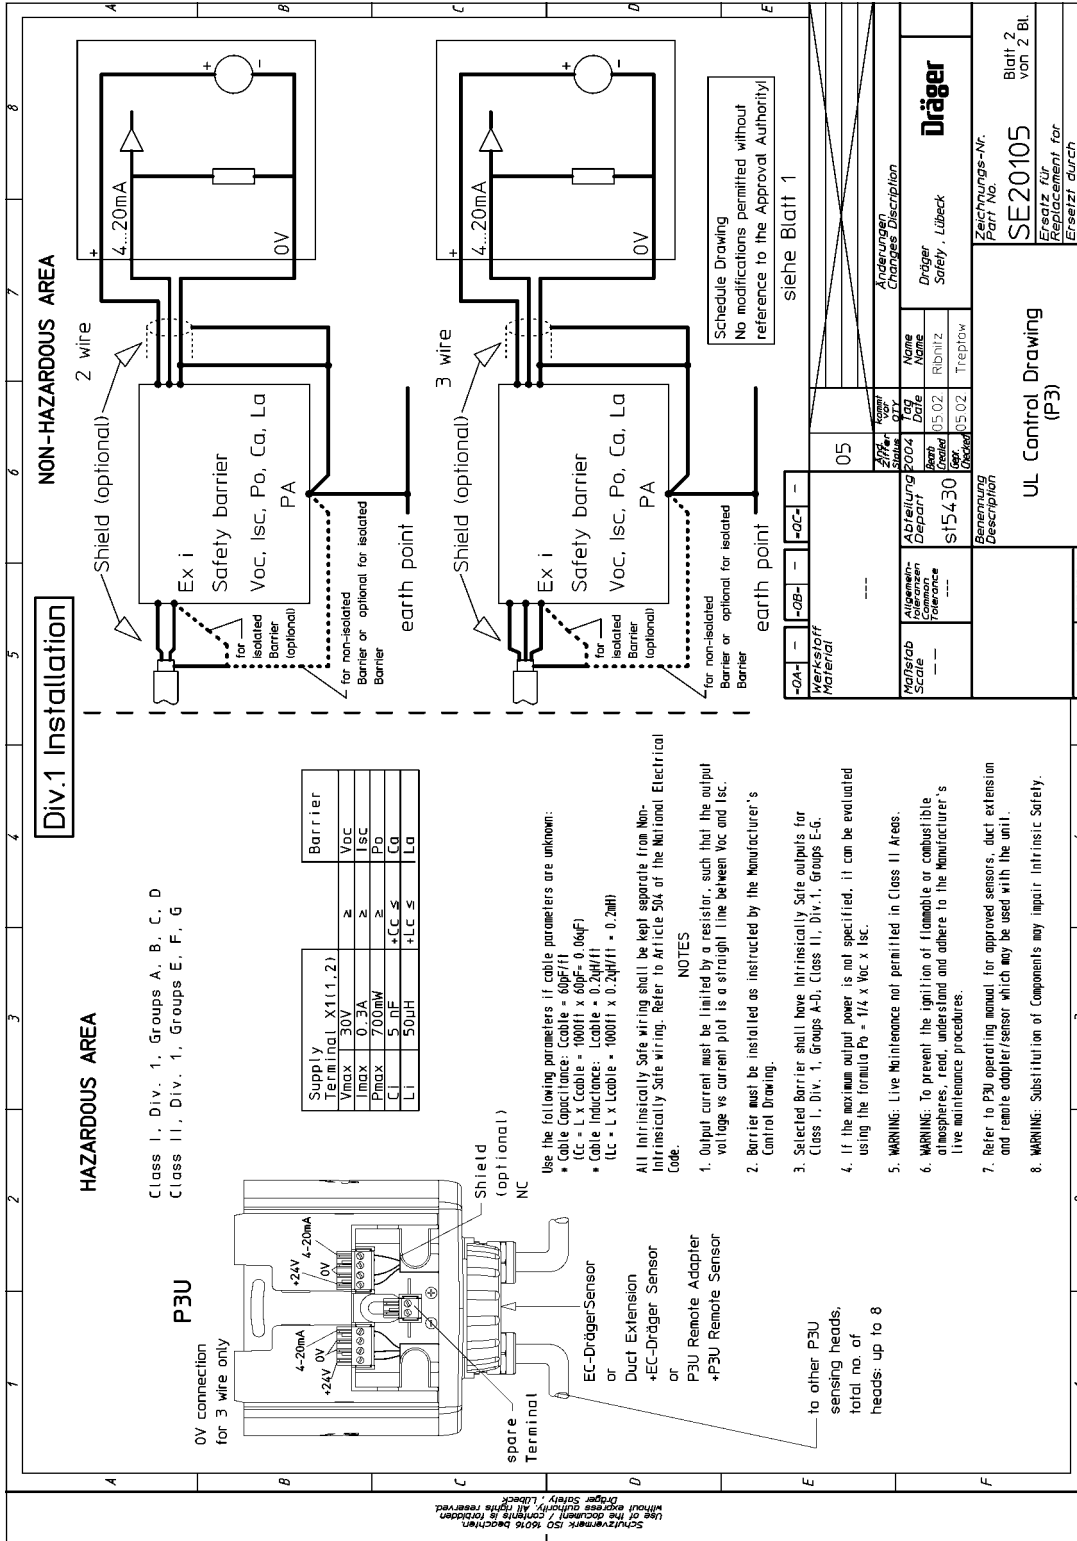

Material	05	Abteilung	0004	Name	Dräger
Material	---	Depart	---	Ribnitz	Safety, Lübeck
Material	---	Created	05.02	Treptow	---
Material	---	Revised	05.02	---	---
Material	---	Scale	1:54.30	---	---
Material	---	Description	UL Control Drawing (P3)		
Material	---	Zeichnungs-Nr.	SE20105 Blatt 2 von 2 Bl.		
Material	---	Ersetzt für	Ersetzt durch		
Material	---	Ersetzt durch	Ersetzt durch		
Material	---	Replaced by	Replaced by		



Northbrook Division
333 Pfingsten Road
Northbrook, IL 60062-2096 USA
www.ul.com
tel: 1 847 272 8800
fax: 1 847 272 8129
Customer service: 1 877 854 3577

NOTICE OF AUTHORIZATION TO APPLY THE UL MARK

2006-12-07

Mr. Thomas Treptow
Draeger Safety AG & Co. KGaA
Revalstrasse 1
23560 Luebeck
Germany

E-mail: Thomas.Treptow@draeger.com

Reference: File E180059 Project 06NK23867
Product(s): USL - Model P3FB Gas Detector for Use in Class I, Division 1, Groups A, B, C and D and Class II, Division 1, Groups E, F and G Hazardous Locations

Dear Mr. Treptow:

UL's investigation of your product has been completed under the above project number and the subject product was determined to comply with the applicable requirements.

This letter temporarily supplements the UL Follow-Up Services Procedure and serves as authorization to apply the UL Listing Mark only at the factory under UL's Follow-Up Service Program to the subject products, which is are constructed as described below:

Identical to the model submitted which was to UL for this investigation. The UL records covering the product will be in the Follow-Up Services Procedure, File E180059, Vol. 1, Sec. 2.

This authorization applies only to the address on this letter.

This authorization is effective from the date of this Notice and only for products at the indicated manufacturing locations. Records in the Follow-Up Services Procedure covering the product are now being prepared and will be sent to the indicated manufacturing locations in the near future. Please note that Follow-Up Services Procedures are sent to the manufacturers only unless the Applicant specifically requests this document.


Products that bear the UL Mark shall be identical to those that were evaluated by UL and found to comply with UL's requirements. If changes in construction are discovered, appropriate action will be taken for products not in conformance with UL's requirements and continued use of the UL Mark may be withdrawn.

Sincerely,
David P. Malohn
Staff Engineer
Hazardous Locations, Gas & Oil
Conformity Assessment Services

Reviewed by:
Benjamin P. Schaefer
Senior Staff Engineer
Hazardous Locations, Gas & Oil
Conformity Assessment Services

An independent organization working for a safer world with integrity, precision and knowledge.



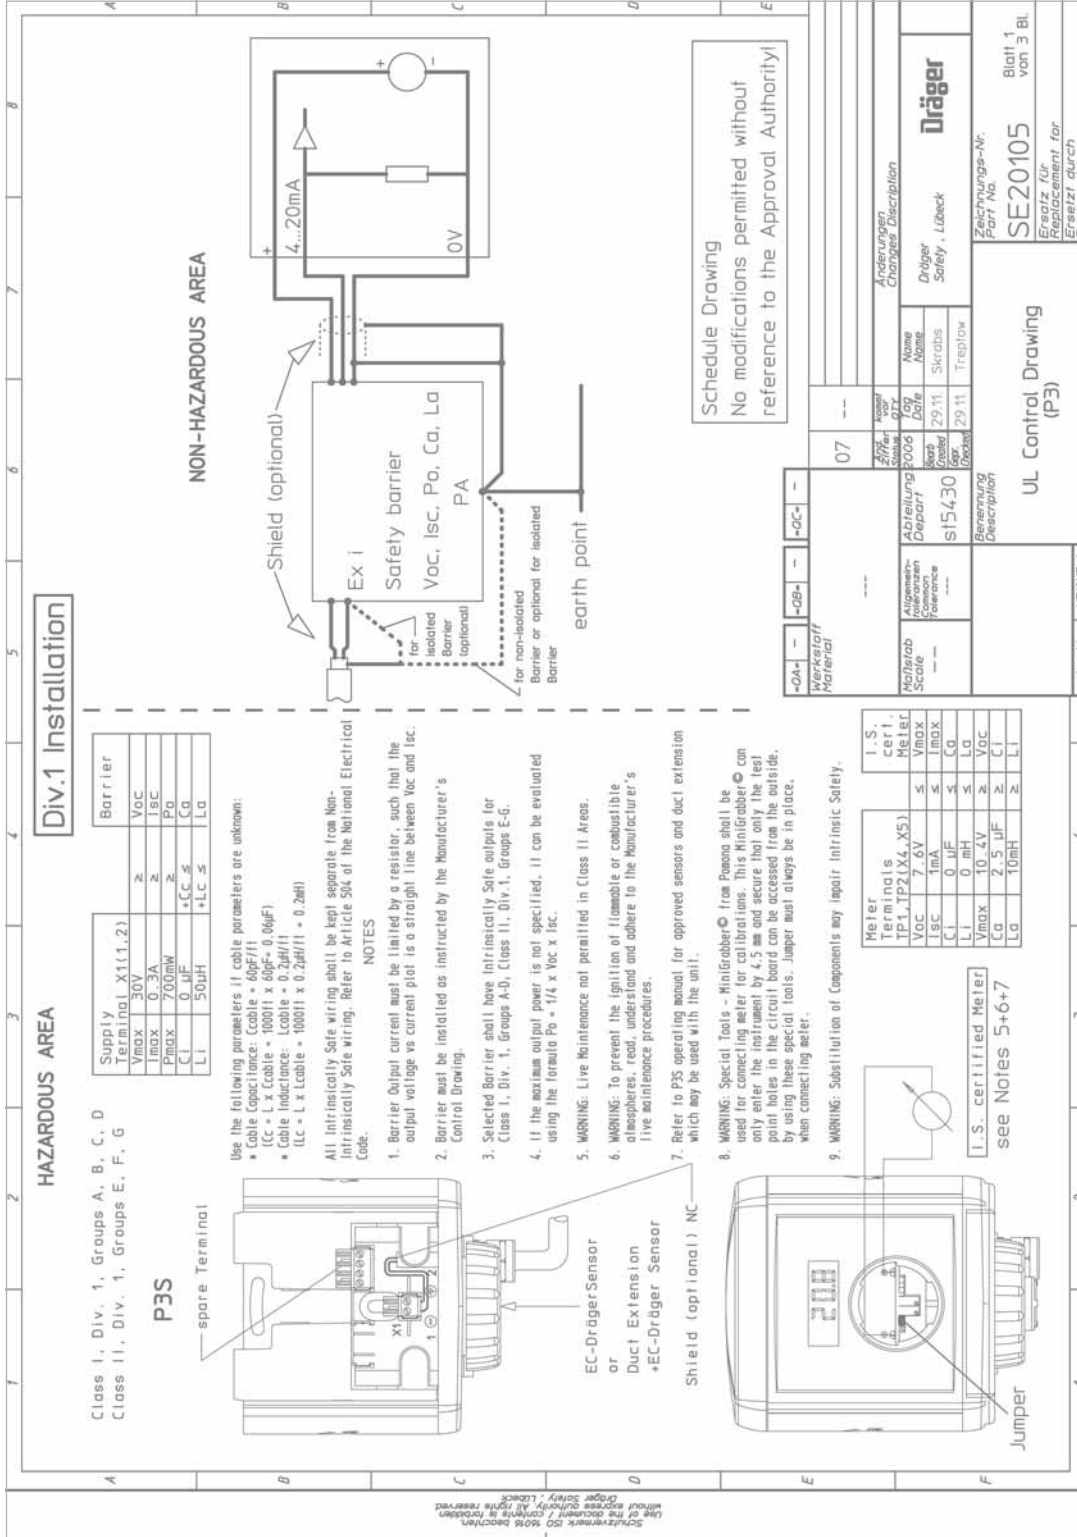

Meter

Parameter	Value
Voc	7...0V
Isc	10mA
CI	0.1µF
LI	10mH
Vmax	10kV
Ca	2.5µF
La	10mH

I.S. certified Meter
see Notes 5+6+7

Jumper

The diagram shows a jumper wire connecting the meter terminals to the sensor terminals.


Schedule Drawing
No modifications permitted without reference to the Approval Authority!

Werkstoff Material	07	Material Status	07	Abteilung	Safety
Material Scale	---	Department	---	Name	---
Material Scale	---	Created	29.11.2006	Skrabs	---
Material Scale	---	Revised	29.11.2006	Trepplow	---
Material Scale	---	Approved	29.11.2006	Dräger	---

UL Control Drawing (P3)

Blatt 1 von 3 BL

SE20105
Ersetzt durch
Ersetzt durch
Ersetzt durch

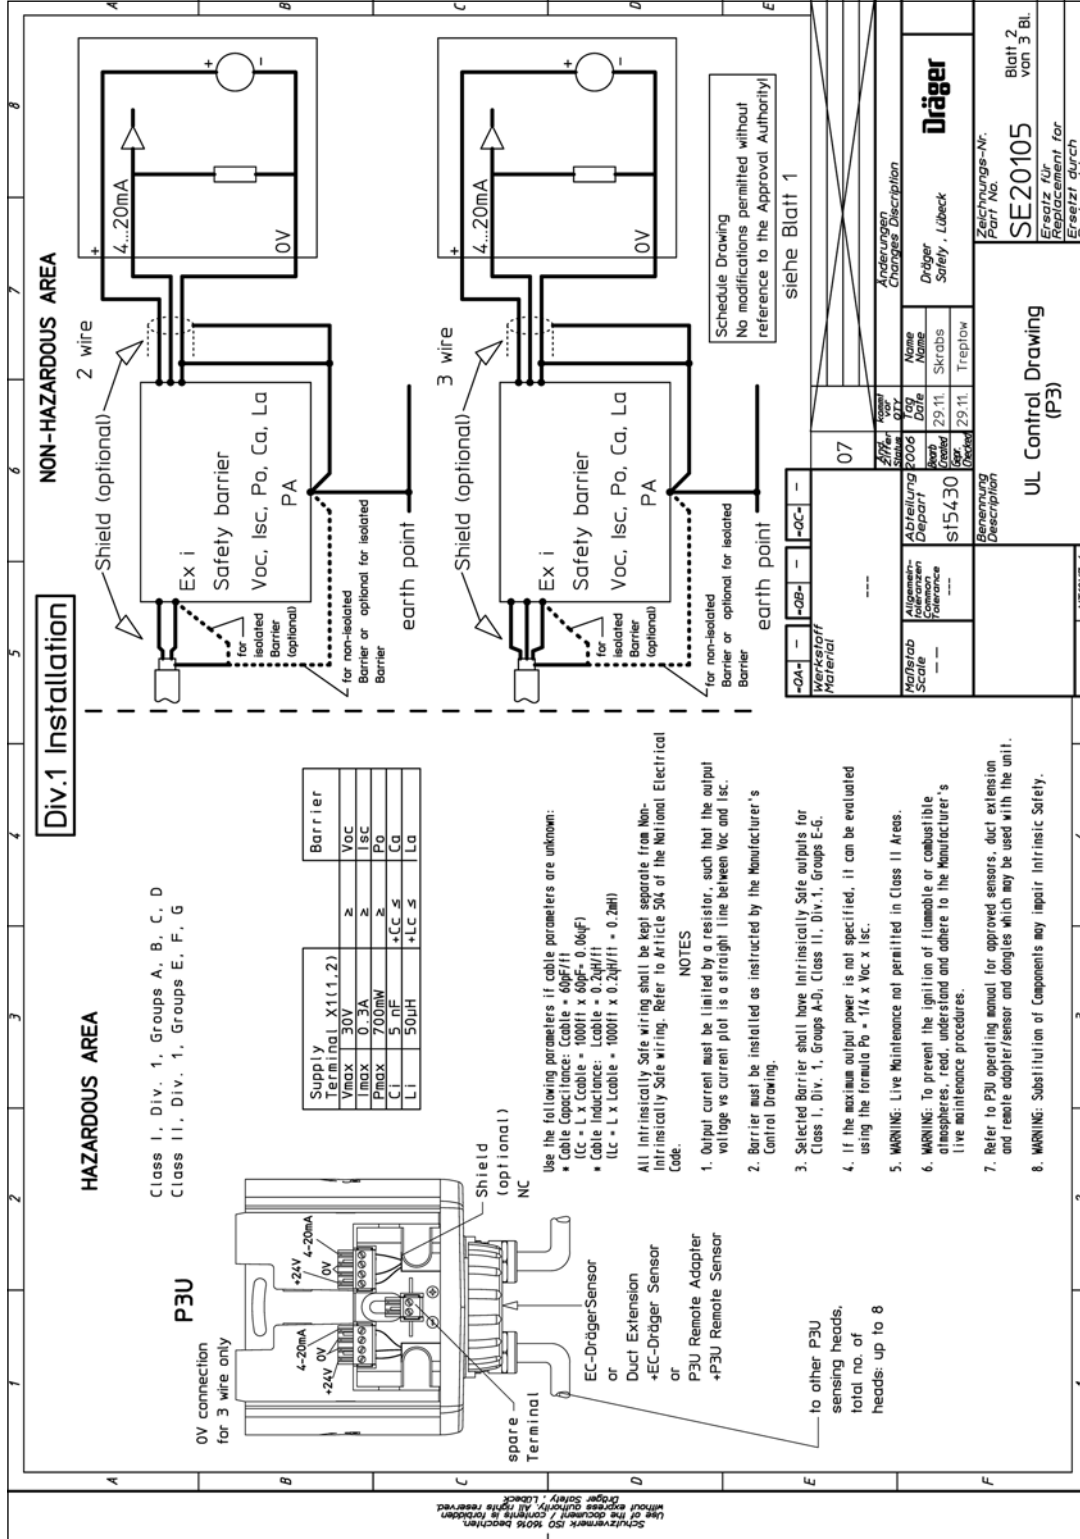

07	APR 2006	07	Dräger Safety, Lübeck
Abteilung	Dräger	Name	Dräger
Scale	Scale	Date	29.11.2011
Material	Material	Created	29.11.2011
		Drawn	Treploew
		Checked	
		Approved	
		Released	
		Part No.	SE20105
		Part No.	Blatt 2 von 3 Bl.
		Replaces	Ersetzt
		Replaced by	Ersetzt durch

UL Control Drawing (P3)


- NOTES**
- Output current must be limited by a resistor, such that the output voltage vs current plot is a straight line between Voc and Isc.
 - Barrier must be installed as instructed by the Manufacturer's Control Drawing.
 - Selected Barrier shall have Intrinsically Safe outputs for Class I, Div. 1, Groups A-D, Class II, Div. 1, Groups E-G.
 - If the maximum output power is not specified, it can be evaluated using the formula $P_o = 1/4 \times V_{oc} \times I_{sc}$.
 - WARNING:** Live Maintenance not permitted in Class II Areas.
 - WARNING:** To prevent the ignition of flammable or combustible atmospheres, read, understand and adhere to the Manufacturer's live maintenance procedures.
 - Refer to P3U operating manual for approved sensors, duct extension and remote adapter/sensor and dongles which may be used with the unit.
 - WARNING:** Substitution of Components may impair Intrinsic Safety.

Use the following parameters if cable parameters are unknown:

- Cable Capacitance: Cable = $60pF/ft$ ($CC = L \times \text{Cable} = 1000ft \times 60pF = 0.06\mu F$)
- Cable Inductance: Cable = $0.2\mu H/ft$ ($LI = L \times \text{Cable} = 1000ft \times 0.2\mu H/ft = 0.2mH$)

All Intrinsically Safe wiring shall be kept separate from Non-Intrinsically Safe wiring. Refer to Article 504 of the National Electrical Code.

Schützwerkmark ISO 5016 beachten
Line of the document's contents is forbidden
Dräger Safety, Lübeck

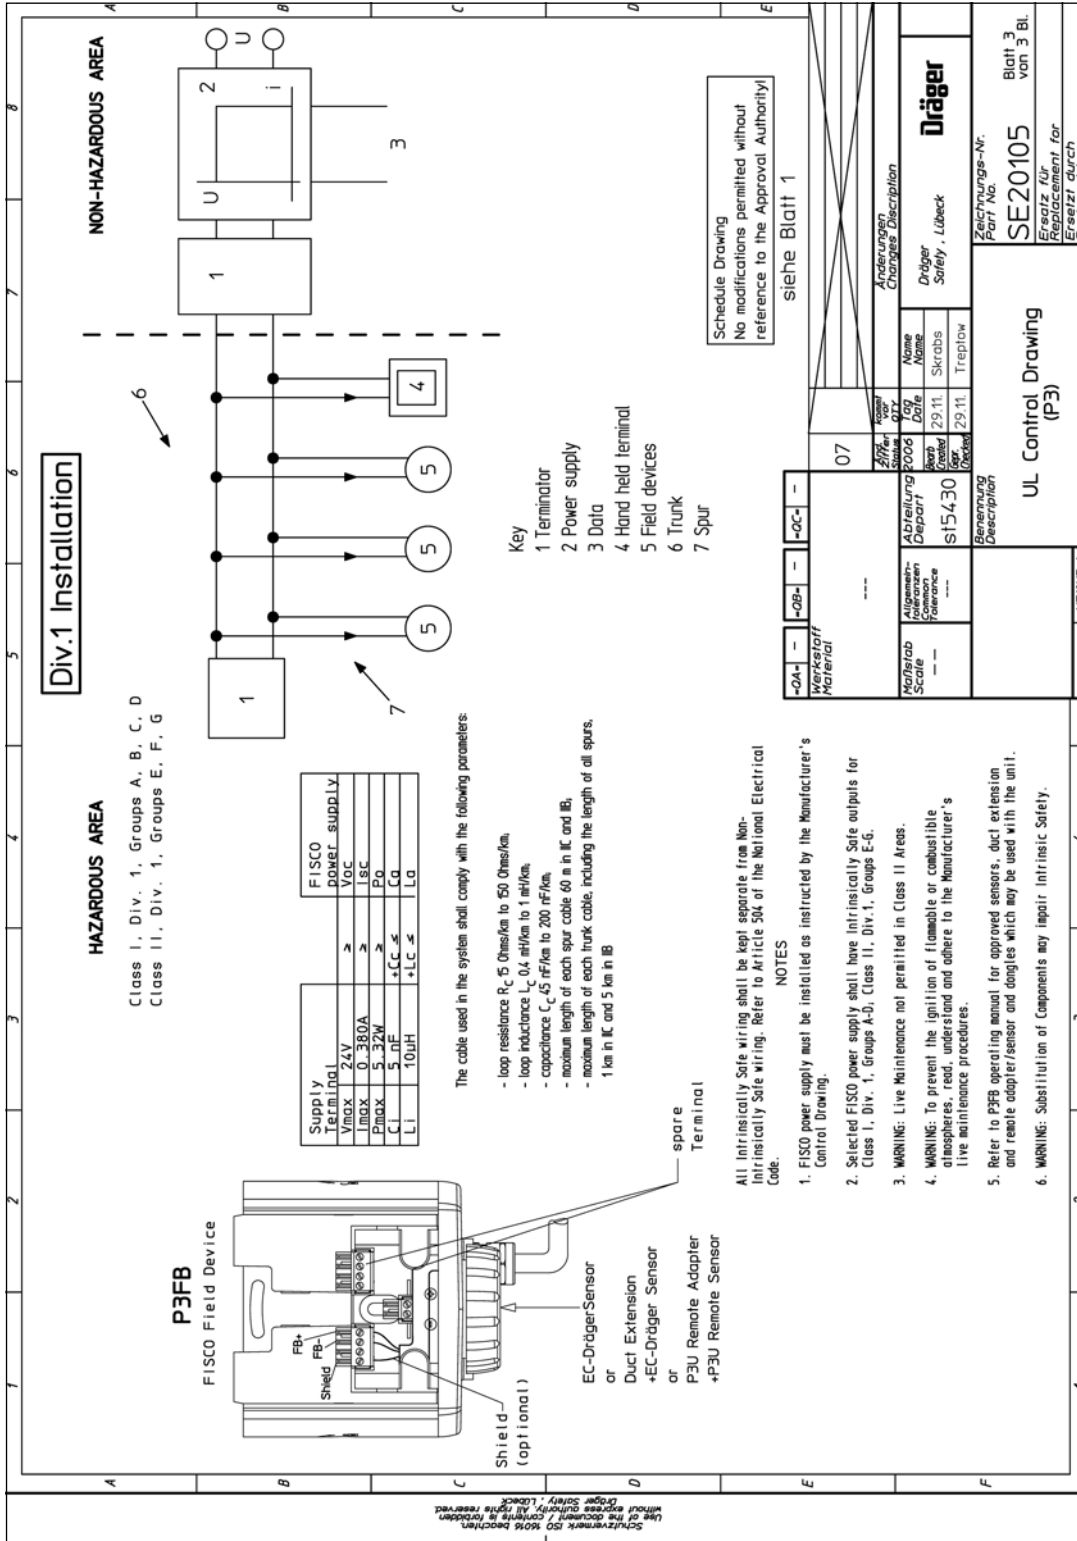

CSA - Approval



Certificate of Compliance

Certificate:	1562835 (LR 97594)	Master Contract:	160220
Project:	1856978	Date Issued:	2007/01/24
Issued to:	Draeger Canada Limited 7555 Danbro Cres Mississauga, ON L5N 6P9 Canada Attention: Mr. Sasha Vuksanov		

The products listed below are eligible to bear the CSA Mark shown with adjacent indicator 'NRTL/C'



Issued by: Glenn Black

Authorized by: Patricia Pasemko, Operations Manager

PRODUCTS

- CLASS 4828 82** - SIGNAL APPLIANCES-Toxic Gas Detection Instruments - For Hazardous Locations. Certified to U.S. Standards
- CLASS 4828 02** - SIGNAL APPLIANCES - Toxic Gas Detection Instruments - For Hazardous Locations

Class I, Groups A, B, C and D; Class II, Groups E, F and G:

Model P3S, stationary, input rated 30 V dc max., 0.3 A max., intrinsically safe with entity parameters when installed in accordance with Draeger Control Drawing No. SE20106. May be used with duct extension. Temperature Code T4 for ambient temperatures of -40 Deg. C to +65 Deg C. Temperature Code T6 for

The 'NRTL/C' indicator adjacent to the CSA Mark signifies that the product has been evaluated to the applicable ANSI/UL and CSA Standards, for use in the U.S. and Canada. NRTL, i.e. National Recognized Testing Laboratory, is a designation granted by the U.S. Occupational Safety and Health Administration (OSHA) to laboratories which have been recognized to perform certification to U.S. Standards.



Certificate: 1562835 (LR 97594)

Master Contract: 160220

Project: 1856978

Date Issued: 2007/01/24

ambient temperatures of -40 Deg. C to +40 Deg C.

Model P3U, stationary, input rated 30 V dc max., 0.3 A max., intrinsically safe with entity parameters when installed in accordance with Draeger Control Drawing No. SE20106. May be used with duct extension, P3U Remote Adapter, P3U Remote Sensor and Dongles. Temperature Code T4 for ambient temperatures of -40 Deg. C to +65 Deg C. Temperature Code T6 for ambient temperatures of -40 Deg. C to +40 Deg C.

Model P3FB, stationary, input rated 24 V dc max., 0.38 A max., intrinsically safe with entity parameters when installed in accordance with Draeger Control Drawing No. SE20106. May be used with duct extension, P3U Remote Adapter, P3U Remote Sensor and Dongles. Temperature Code T4 for ambient temperatures of -40 Deg. C to +65 Deg C. Temperature Code T6 for ambient temperatures of -40 Deg. C to +40 Deg C.

APPLICABLE REQUIREMENTS

CAN/CSA-C22.2 No.157-92 - Intrinsically Safe and Non-Incendive Equipment for Use in Hazardous Locations

CSA Std C22.2 No.142-M1987 - Process Control Equipment

UL Std No. 508, July 11, 2005 - Industrial Control Equipment

UL Std No. 913, August 9, 2004 - Intrinsically Safe Apparatus and Associated Apparatus for Use in Class I, II and III, Division 1, Hazardous Locations

MARKINGS

- CSA Monogram with NRTL/C indicator;
- Submitter Identification;
- Model Number;
- Serial Number, Date Code or Month and Year of Manufacture;
- Hazardous locations designation;
- Electrical rating;
- The words "Intrinsically Safe";
- The symbol "Exia";
- Reference to Installation Instructions;
- Temperature Code;
- Warning: Substitution of components may impair intrinsic safety;



Supplement to Certificate of Compliance


Certificate: 1562835

Master Contract: 160220

The products listed, including the latest revision described below, are eligible to be marked in accordance with the referenced Certificate.

Product Certification History

Project	Date	Description
1856978	2007/01/24	Addition of model P3FB
1562835	2004/11/09	Original Certification of P3S and P3U

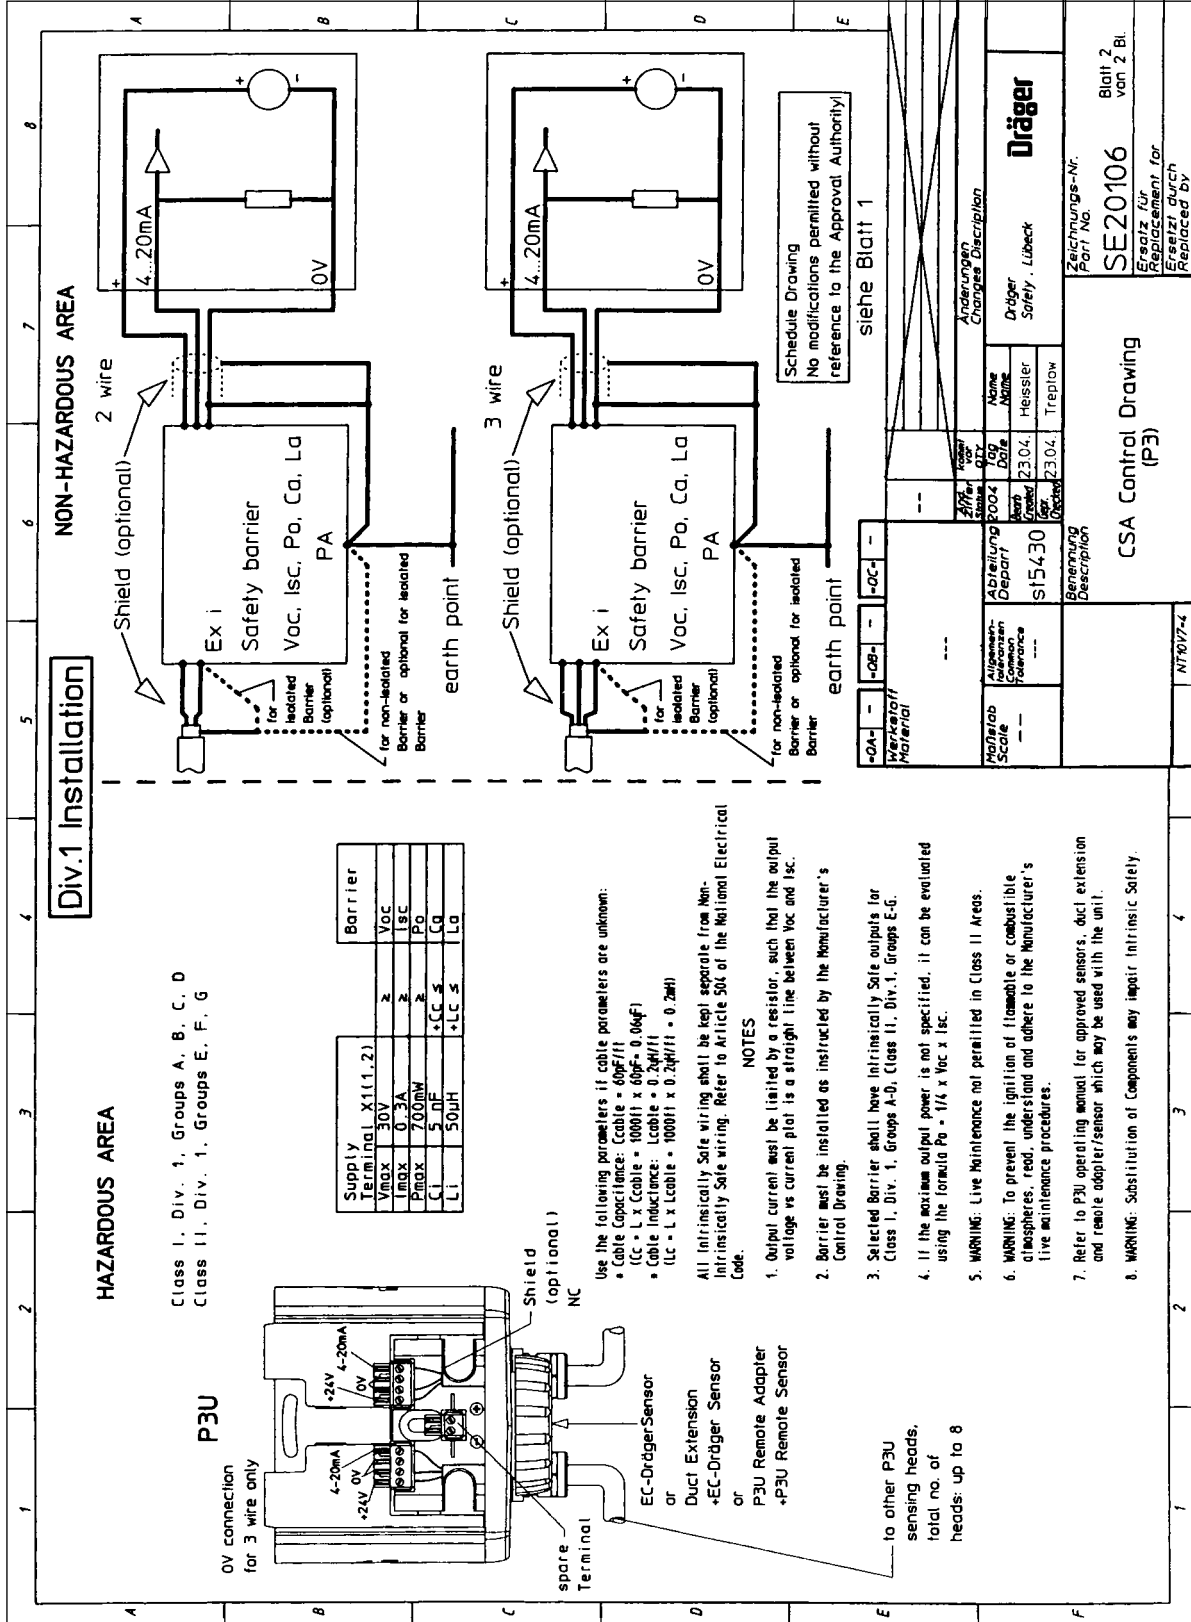

Declaration of Conformity

Drägersafety

Konformitätserklärung Declaration of Conformity

Wir / We Dräger Safety AG & Co. KGaA
Revalstraße 1
D-23560 Lübeck
Deutschland / Germany

erklären, dass das Produkt / declare that the product

Gasmessgerät Typ **P3S (Polytron 3000) / P3U, P3FB (Polytron 7000)**
Gas Detection Instr. type **P3S (Polytron 3000) / P3U, P3FB (Polytron 7000)**

gemäß den Bestimmungen der Richtlinie 94/9/EG (Geräte und Schutzsysteme zur bestimmungsgemäßen Verwendung in explosionsgefährdeten Bereichen) übereinstimmt mit dem Baumuster der EG-Baumusterprüfbescheinigung

following the provisions of Directive 94/9/EC (Equipment and protective systems intended for use in potentially explosive atmospheres) is in conformity with the type of the EC-type-examination certificate

BVS 03 ATEX E 406 X

für / for Gerätegruppe und -kategorie / Equipment Group and Category: **II 1G, II 3G**
Zündschutzart / Type of Protection: **ia, nL**
Explosionsgruppe / Explosion Group: **IIC**
Temperaturklasse / Temperature Class: **T4 / T6**

ausgestellt von der benannten Stelle / issued by the notified body

EXAM – BBG Prüf- und Zertifizier GmbH
Dinnendahlstraße 9
D-44809 Bochum
Kennnummer / identification number 0158.

Das Produkt wurde unter einem Qualitätssicherungssystem hergestellt, endabgenommen und geprüft, das zugelassen wurde von der benannten Stelle

The product has been manufactured, finally inspected and tested under a quality system which has been approved by the notified body

EXAM – BBG Prüf- und Zertifizier GmbH
Dinnendahlstraße 9
D-44809 Bochum
Kennnummer / identification number 0158.



Ralf Drews
Research & Development
Dräger Safety AG & Co. KGaA

Lübeck, 16.01.2007

Drägersafety

**Konformitätserklärung
Declaration of Conformity**

Wir / We Dräger Safety AG & Co. KGaA
Revalstraße 1
D-23560 Lübeck
Deutschland / Germany

erklären, dass das Produkt / declare that the product

**Gasmessgerät Typ P3S (Polytron 3000) / P3U, P3FB (Polytron 7000)
Gas Detection Instr. type P3S (Polytron 3000) / P3U, P3FB (Polytron 7000)**

übereinstimmt mit den Anforderungen des Anhangs II, insbesondere Abschnitt 2.3.2, der Richtlinie 94/9/EG (Geräte und Schutzsysteme zur bestimmungsgemäßen Verwendung in explosionsgefährdeten Bereichen) und dass das Verfahren der internen Fertigungskontrolle des Anhangs VIII der Richtlinie angewandt wurde

is in conformity with the requirements of Annex II, especially clause 2.3.2, of Directive 94/9/EC (Equipment and protective systems intended for use in potentially explosive atmospheres) and that the procedure relating to internal control of production according of Annex VIII of the Directive is applied

für / for Gerätegruppe und -kategorie / Equipment Group and Category: **II 3D**
Gehäuse-Schutzart / Ingress Protection: **IP6x**
max. Temperatur / max. Temperature: **T_{max} = 65 °C**

Der Konformitätsbewertung wurde zugrunde gelegt / The Conformity Assessment is based on:

- EN 50281-1-1:1998-09 + A1:2002-05
Elektrische Betriebsmittel zur Verwendung in Bereichen mit brennbarem Staub – Teil 1-1:
Elektrische Betriebsmittel mit Schutz durch Gehäuse – Konstruktion und Prüfung /
Electrical Apparatus for use in the presence for combustible dust – Part 1-1: Electrical
Apparatus protected by enclosures – Construction and testing
- E DIN IEC 61241-11:2001-08
Elektrische Betriebsmittel für den Einsatz in Gegenwart von brennbarem Staub – Teil 11:
Eigensichere elektrische Betriebsmittel "iD" /
Electrical Apparatus for use in the presence for combustible dust: Part 11: Intrinsically safe
apparatus "iD"
- EN 50014:1997-06 + A1+A2:1999-02
Elektrische Betriebsmittel für explosionsgefährdete Bereiche – Allgemeine Bestimmungen /
Electrical Apparatus for potentially explosive atmospheres – General requirements



Ralf Drewe
Research & Development
Dräger Safety AG & Co. KGaA

Lübeck, 16.01.2007

Dokument-Nr. / document no.: SE20379 "02"
Seite 1 von 1 / page 1 of 1

Index

2-wire connection	11
3-wire technology	15
4 to 20 mA current loop	11, 15
4 to 20 mA interface	5
4-wire technology	22
Accessories	4, 93
Accessories, installing	26
Alarm	62
Alarm on/off	62
Ambient conditions	89, 90
Analogue interface	70
Analogue signal	37
Approvals	86
Areas subject to explosion hazards	4, 9
ATEX	86
ATEX approval	94, 109
Autocalibration	58
Autocalibration setting	75
Automatic configuration	5
Average	79
Basic operating procedures	50
Built-in plug of relay module	32
Cable inlet	89
Cable resistance	17
Calibration	41
Calibration accessories	93
Calibration adapter	43
Calibration date	54
Calibration flask	43
Calibration gas	57
Calibration interval	41, 77
Calibration with test gas	42
Calibration with test-gas ampoules	43
Category 1	12, 17
Category 2	12, 17
CE markings	86, 89, 90
Connecting to the central unit	11, 15
Control unit	6
Daisy chain kit	10, 26
Daisy-chain kit	8
Data Dongle	29
Data dongle	68
Datalogger	78
Datalogger on/off	78
Datalogger status	55

Datalogger, clearing	80
Date	36, 65
Declaration of Conformity	126
Density of gases	9
Design	7
Device category 3	13, 19
Device markings	86
Device versions	7
Diagnosis dongle	68
Docking station	10, 135
Dräger hand-held terminal (DHHT)	44
Drilling template	10
Drilling templates	135
Duct adapter	137
Duct adapter for remote sensor	8, 28
Duct Extension	8
Dust and water protection	9, 10, 24
Earth point	13
Electrical connections	11
Electrochemical sensors	45
Environmental factors	9
Error	53
Eventlogger	78
Eventlogger, clearing	80
Explosion-hazard areas of zone 0	12, 17
Explosion-hazard areas of zone 1	12, 17
Explosion-hazard areas of zone 2	13, 19
External installation	27
Fault	46
Fault Codes	53
Fault number	46
Fitting the sensor	25
Flow alarm	90
Flow fault on/off	61
Flow warning	90
Function key	67
Gas settings	77
Graph	55
Graphical symbols (icons)	51
hand-held HART-compatible operating device	7
HART	5
HART interface	44, 69
HART multidrop-capable control unit	17
HART-communication	12
HART-compatible operating station	7
Hose connectors	90

Icons	38
Identifier	69
Info mode	39
infrared interface	7
Ingress protection	86
Initialise device	67
Inspection	41
Inspections	4
Installation am Zentralgerät	15
Installation of the inlet line	35
Installing	9
Installing the transmitter	9
Instrument information	39
Intended Use	5
Language	66
Liability	4
Local requirements	9
LON Communication	22
LON Interface	74
Maintenance	4, 41
Maintenance Intervals	4, 41
Maintenance level	71, 72
Maintenance work	9
Material of the inlet hose	35
Materials used	90
Maximum cable lengths	18, 19, 20
Measuring range	5
Measuring unit, installing	24
Measuring-point name	70
Menu » Calibration «	48, 56
Menu » Information «	48, 52
Menu » Settings «	48, 60
Menu functions	48
Menu structure	48
Menu structure, overview	49
Modular system	7
Modules	53
Monitoring of gas concentrations.	5
Multidrop installation	8, 10
Navigation in the menus	51
Non-explosion-hazard areas	16, 19
Optional extras	7
Order List	91
Output	90
Palm Pilot 515x	7
Password Calibration	65
Password for the menu » Calibration «	49

Password for the menu » Settings «	49
Password Settings	65
Password, entering	50
Passwords	65
Peak	79
Peak / average	79
Permissible cable lengths	16
Physical properties of the gas to be measured	9
Polling address	69
Power consumption	90
power consumption	89
Preparing for installation	9
Pump adapter	35, 43
Pump module	5, 7, 33, 90
Pump operating time	62
Pump output	61
Quick-menu mode	50
Raincover	9, 10
Reflective shield	9
Relay module	6, 7, 31, 89
Relay outputs	89
Remaining sensitivity	45
Remote adapter	27
Remote sensor	8, 27, 137
Repair	4
Replacing the sensor	44
Safety	4
Safety barriers	12, 17
Sample time	78
Sensitivity calibration	57
Sensor configuration	39, 77
Sensor Diagnostic Dongle	29
Sensor diagnostic dongle	45
Sensor Dongle	29
Sensor information	39
Sensor initialisation	77
Sensor lock	76
Sensor self-test	76
Sensor temperature	54
Sensor test	76
Sensor test dongle	68
Sensor vitality	54
Sensor, changing	75
Sensor-diagnosis function	45
Sensors	92
Settings for acknowledgements	64
Settings for alarm A1	62
Settings for alarm A2	64
Settings for calibration interval	77
Settings for passwords	49


Settings for sensor test	76
Settings for the analogue interface	70
Short-circuit strap	25, 44
Signal transmission	88
Signal transmission to the central unit	36
SMART transmitter supply units	12, 17
Software dongle	68
Software dongles	8, 29
Software version	36
Splash guard	9
Splashing water	9
Stack/roll	80
Start-up	36
Submenu » Communication «	69
Submenu » Datalogger «	55, 78
Submenu » Instrument «	53, 61
Submenu » Sensor «	54, 75
Submenu » Span cal. «	57
Submenu » Zero calibration «	56
Supply voltage	88, 89, 90
Supply voltage for control unit	16
Switch for backup battery	24
Tag	70
Technical Data	86
Test alarm A1	64
Test alarm A2	64
Test analogue	73
Test fault	65, 73
Test functions for the analogue interface	73
Test gas	42
Test maintenance	74
Test warning	73
Test-gas ampoule	43
The measuring unit Dräger Polytron 7000	9
Time	36, 65
Time format	66
Time interval of warning signal	71
Transmitter supply units	12
Transmitter with pump module	20
Transmitter with relay and pump modules	21
Transmitter with relay module	20
Trigger on/off	79
Trigger value	79
UL (Underwriters Laboratories Inc.)	87
UL approval	114
Unit calibration	42
Unit settings	44
Ventilation conditions	9

Index

Warm-up routine	36
Warning interval	71
Warning level	71
Warning number	47
Warning on/off	70
Warnings	53
Weather-resistance	9
Weight	89
Wire cross-section	89
Year of manufacture	86
Zero gas	56
Zero-point calibration	56


Drilling templates

Dräger docking station

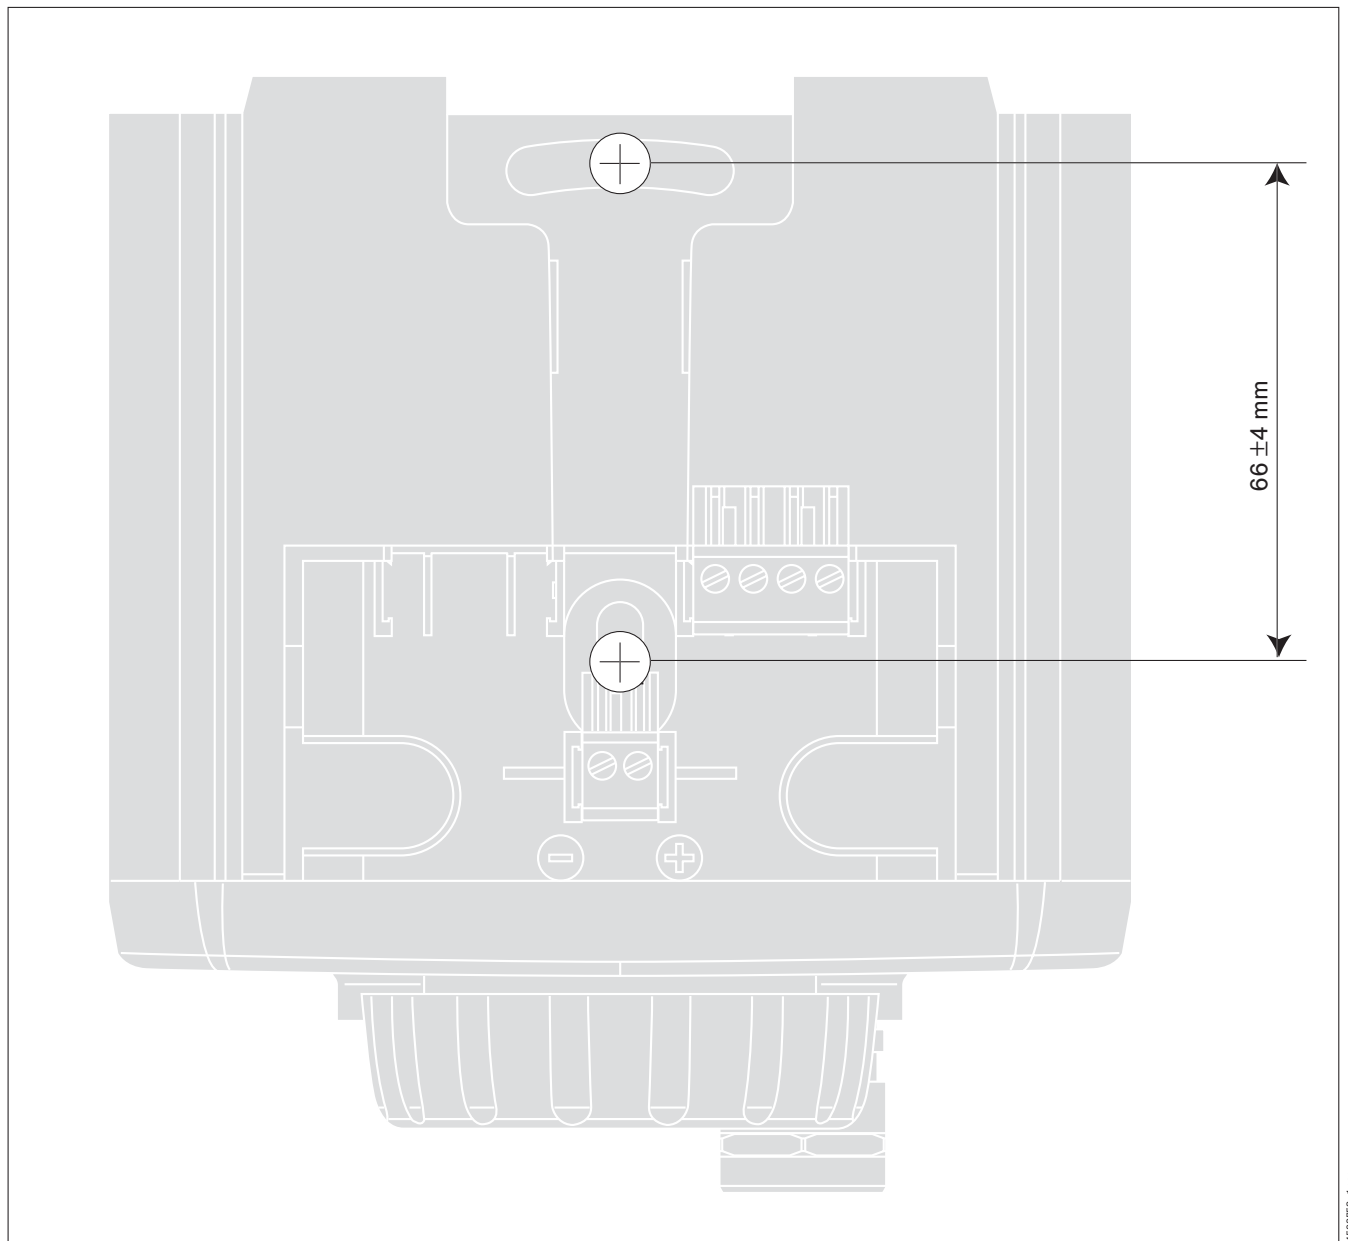


04025750_1.dwg

Remote sensor

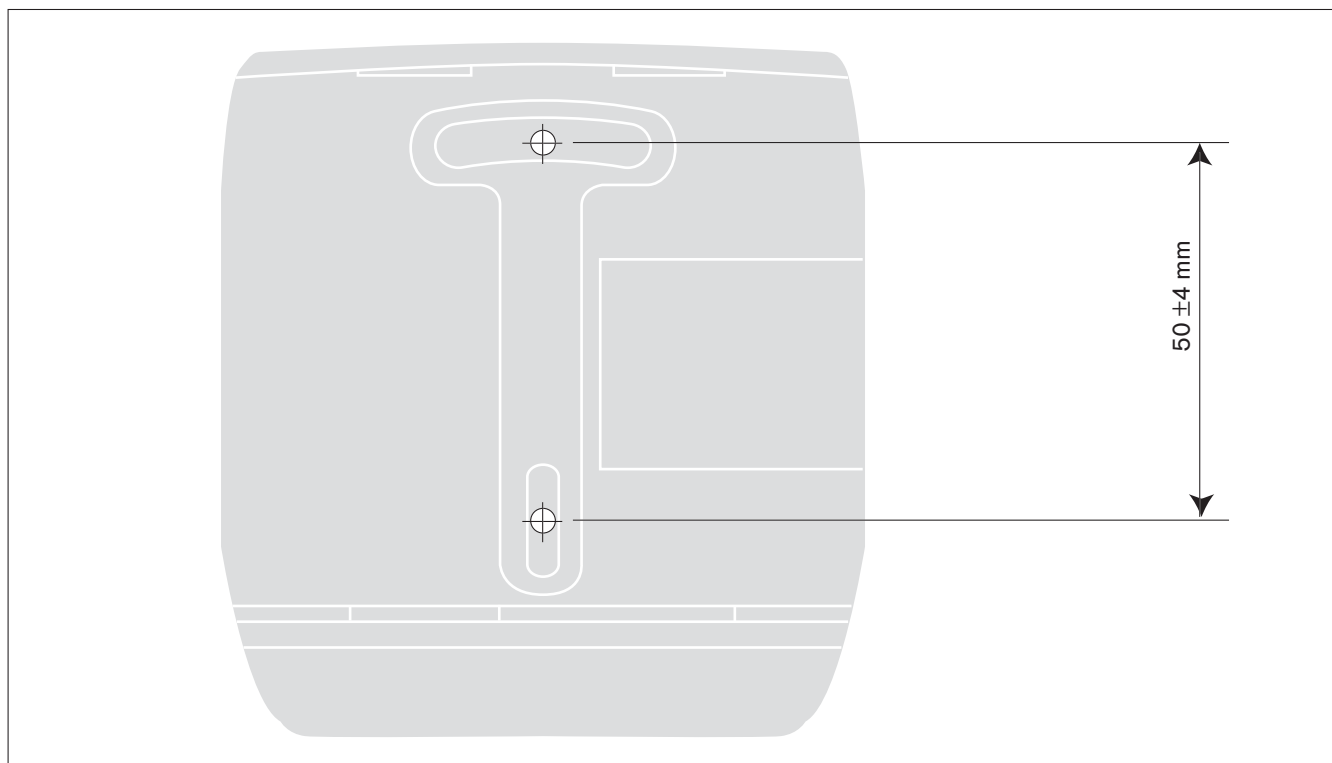

0402375B_1.eps

Duct adapter

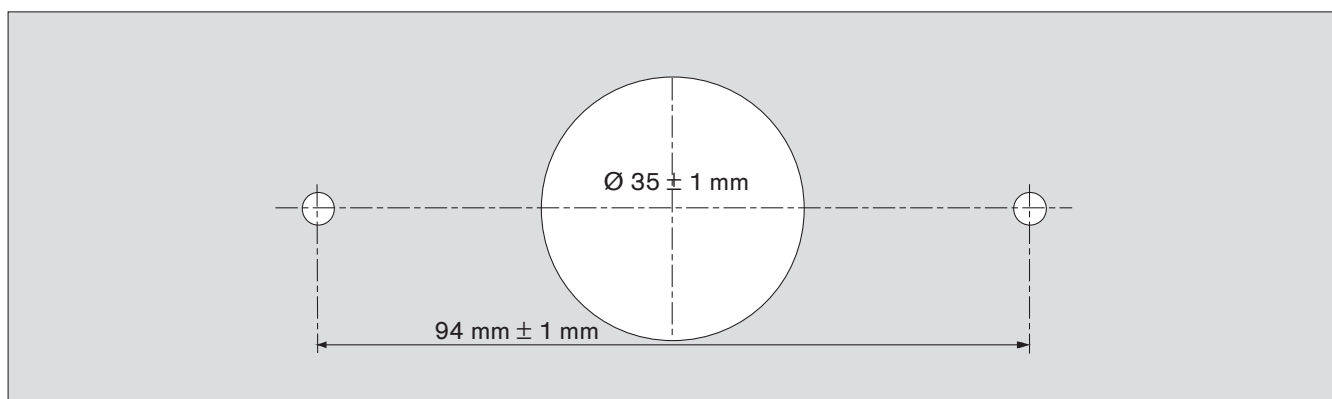

0472375E_1.eps

Dräger Safety AG & Co. KGaA

Revalstraße 1

D-23560 Lübeck

Germany

Tel. +49 451 8 82 - 27 94

Fax +49 451 8 82 - 49 91

www.draeger.com

90 33 002 - GA 4683.100 en

© Dräger Safety AG & Co. KGaA

5th edition - 04_2007

Subject to alteration