


4 Button Digital Watch



BUTTON LAYOUT

- This watch is a generic representation of a 4-Button Digital watch. Some models may or may not include Light Button M1.

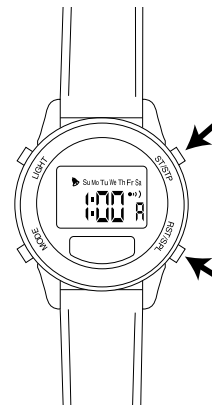

DAILY ALARM MODE

- In normal time mode, press R2 to display alarm time.
- Hold R2 and press R1 to select alarm symbol "•••" (alarm will sound everyday at pre-set time) and chime symbol "♪" (chime will sound every hour on the hour) alternatively on or off.

ILLUMINATING THE DISPLAY

- In normal time mode, press and hold the R1 or M1 button (when available) to turn on the dial light.



SETTING THE ALARM

- In normal time mode, press and hold L2 first to stopwatch mode and hold 2 seconds to alarm time set mode; the hour digit begins flashing.
- Press R2 to advance the hour.
- Press R1 to switch to the minute digit and advance with R2.
- Press L2 to return to the normal time mode when alarm is set to the desired time.




SETTING NORMAL TIME

- In normal time mode, Hold L2 for 2 seconds to alarm time set mode, then L2 again to normal time set mode, the second digits begin flashing.
- Press R2 to reset the seconds to "00", press R1 to switch to the minute digits.
- Press R2 to advance the minutes. Press R1 to switch to the hour digits.
- Press R2 to advance the hour. Press R1 to switch to the date.
- Once the date is set, press L2 to return to Normal Time Mode.



DISPLAYING THE DATE

- While in the Normal Time Mode, press R1 to display the Month/Date display.
- Hold R1 and R2 to alternate the Month/Date and Date/Month (when available).

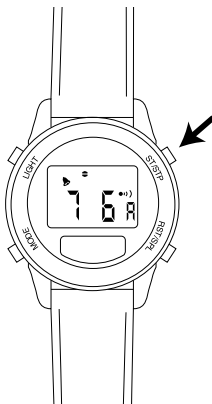

12/24 HOURS FORMAT

- In normal time mode, press R2 to display alarm time.
- Hold R2 and press L2 to select 12 or 24 hour format.
- The "PM" or "AM" symbol on the display means both normal time and alarm time are in 12 hour format. Otherwise, they are in 24 hour format.



STOPWATCH MODE

- In normal time mode, press L2 to display the stopwatch mode.
- Press R1 to start, then press R1 again to stop.
- Press R2 to return to zero.

